



COMBINATION METER CIRCUIT

BE12E-01

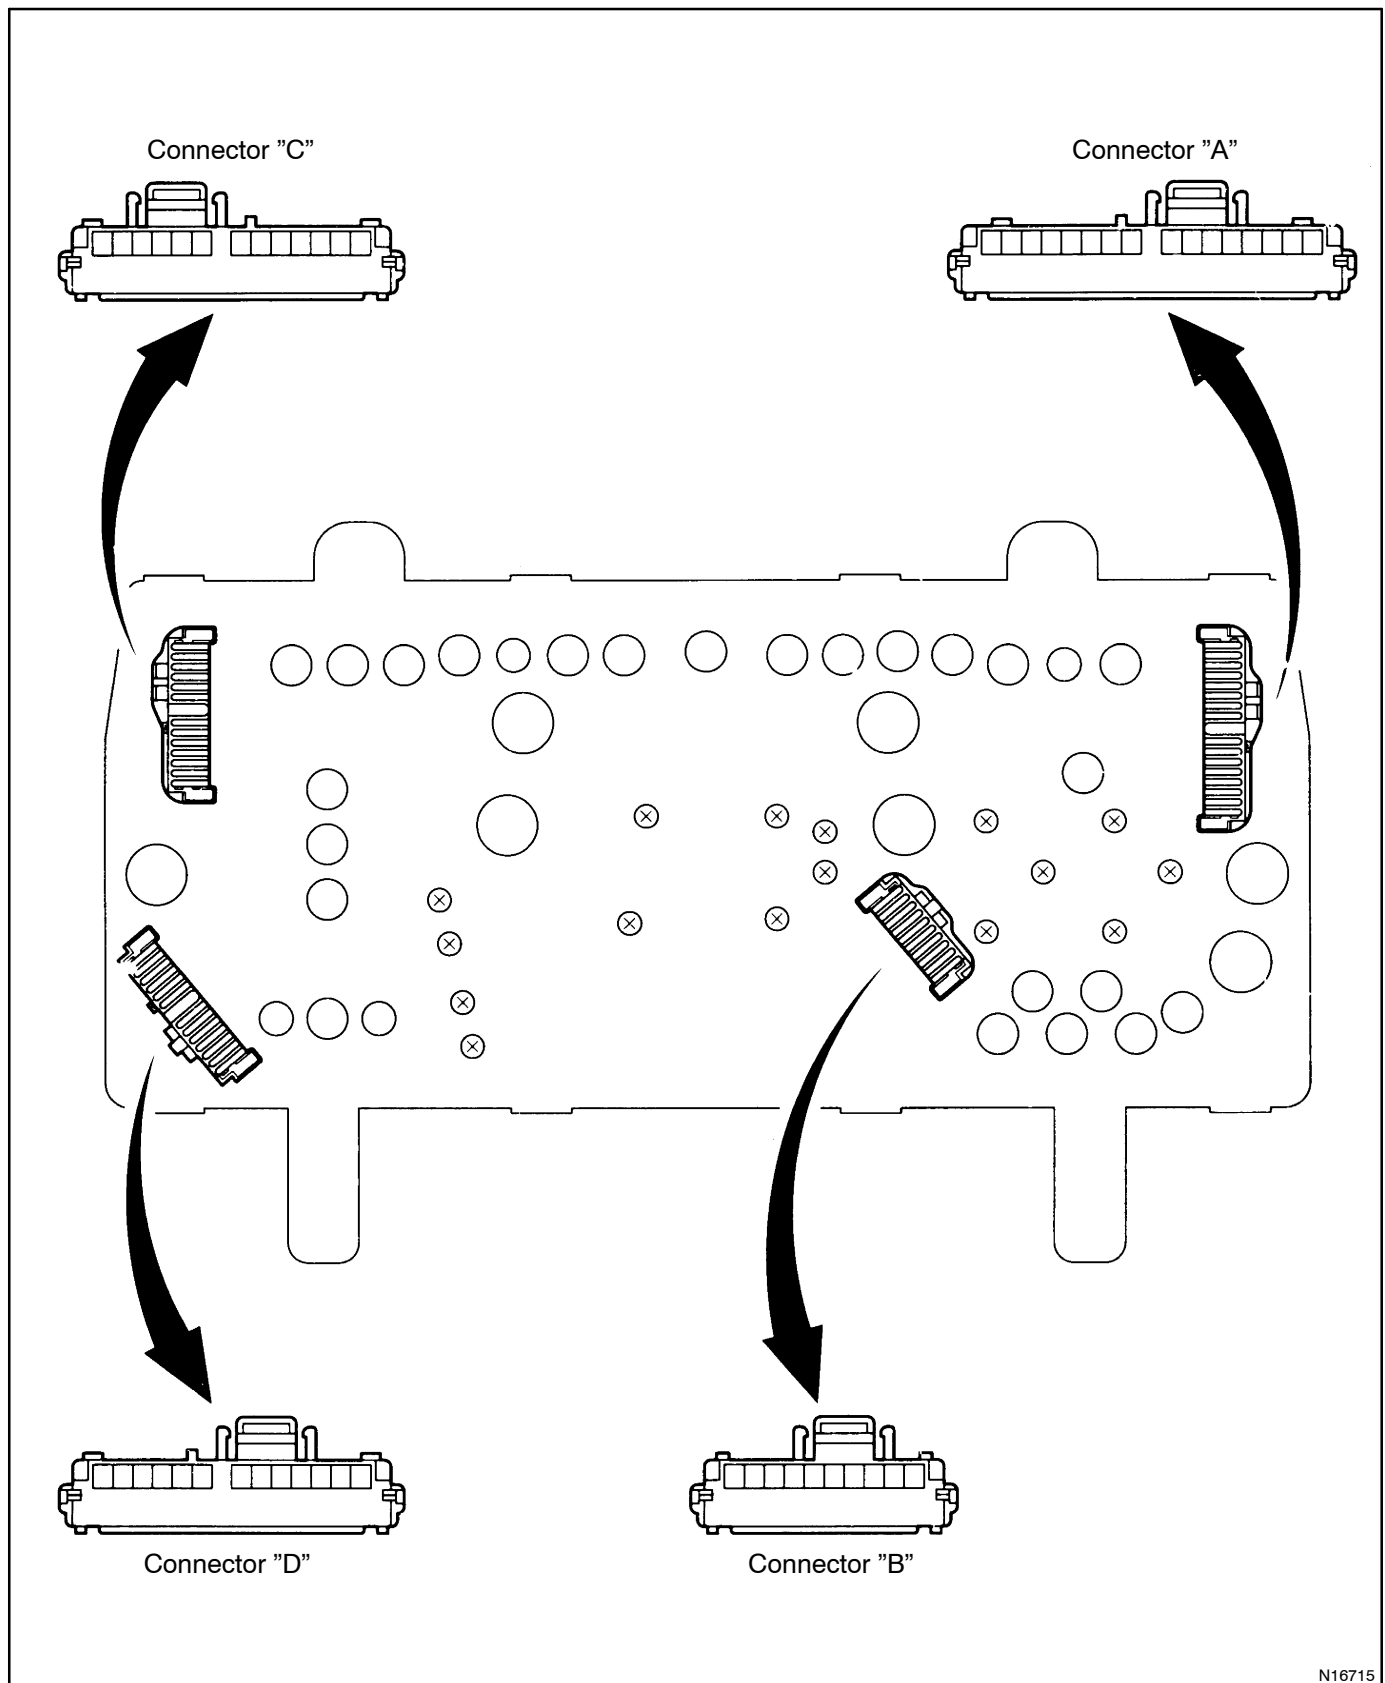

N16715

w/o Tachometer:

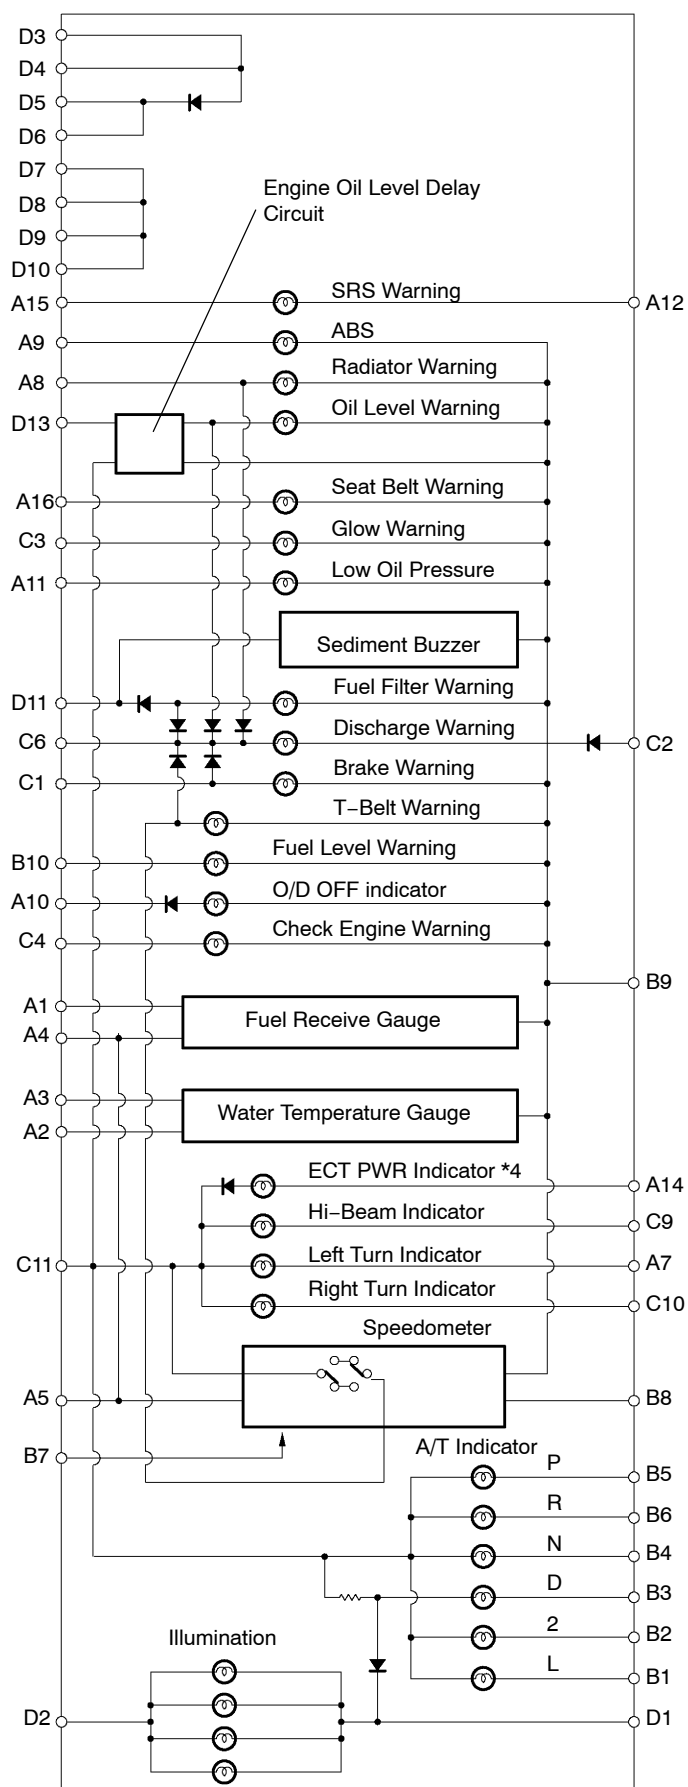

No.		Wiring Connector Side
A	1	Fuel Sender Gauge
	2	Water Temperature Sender Gauge
	3	Ground (Engine)
	4	Ground (Gauge)
	5	Ground (Speed)
	6	Ground *1
	7	Turn Signal Switch (Left)
	8	Radiator Fluid Level Sensor
	10	O/D OFF Switch
	11	Low Oil Pressure Warning Switch
	12	ECU-B Fuse
	14	ECT PWR
	15	Airbag Sensor Assembly
	16	Seat Belt Buckle Switch
B	1	Neutral Start Switch (L) *3
	2	Neutral Start Switch (2) *3
	3	Neutral Start Switch (D) *3
	4	Neutral Start Switch (N) *3
	5	Neutral Start Switch (P) *3
	6	Neutral Start Switch (R) *3
	7	Vehicle Speed Sensor
	8	Engine ECU or Engine ECT ECU
	9	Gauge Fuse
	10	Fuel Sender Gauge
C	1	Brake Fluid Level Warning Switch
	2	Ignition Switch
	3	Pre-Heating Timer
	6	Alternator L Terminal
	7	DOVE Fuse
	9	Headlight Dimmer Switch
	10	Turn Signal Switch (Right)
	11	Ground
	12	Igniter *2 or Tacho Pick-up *1 sensor
D	1	TAIL Fuse
	2	Illumination Ground
	3	DOVE Light
	4	Door Courtesy Switch (Passenger Side)
	5	Door Courtesy Switch (Driver Side)
	6	Light Reminder Relay
	7	Rear Door
	8	Slide Door
	9	Room Light Switch
	10	Rear Light
	11	Fuel Filter Warning Switch
	13	Engine Oil Level Switch


*1: Diesel Engine

*2: Gasoline Engine

*3: AT Vehicle

*4: Only Australia

w/ Tachometer:

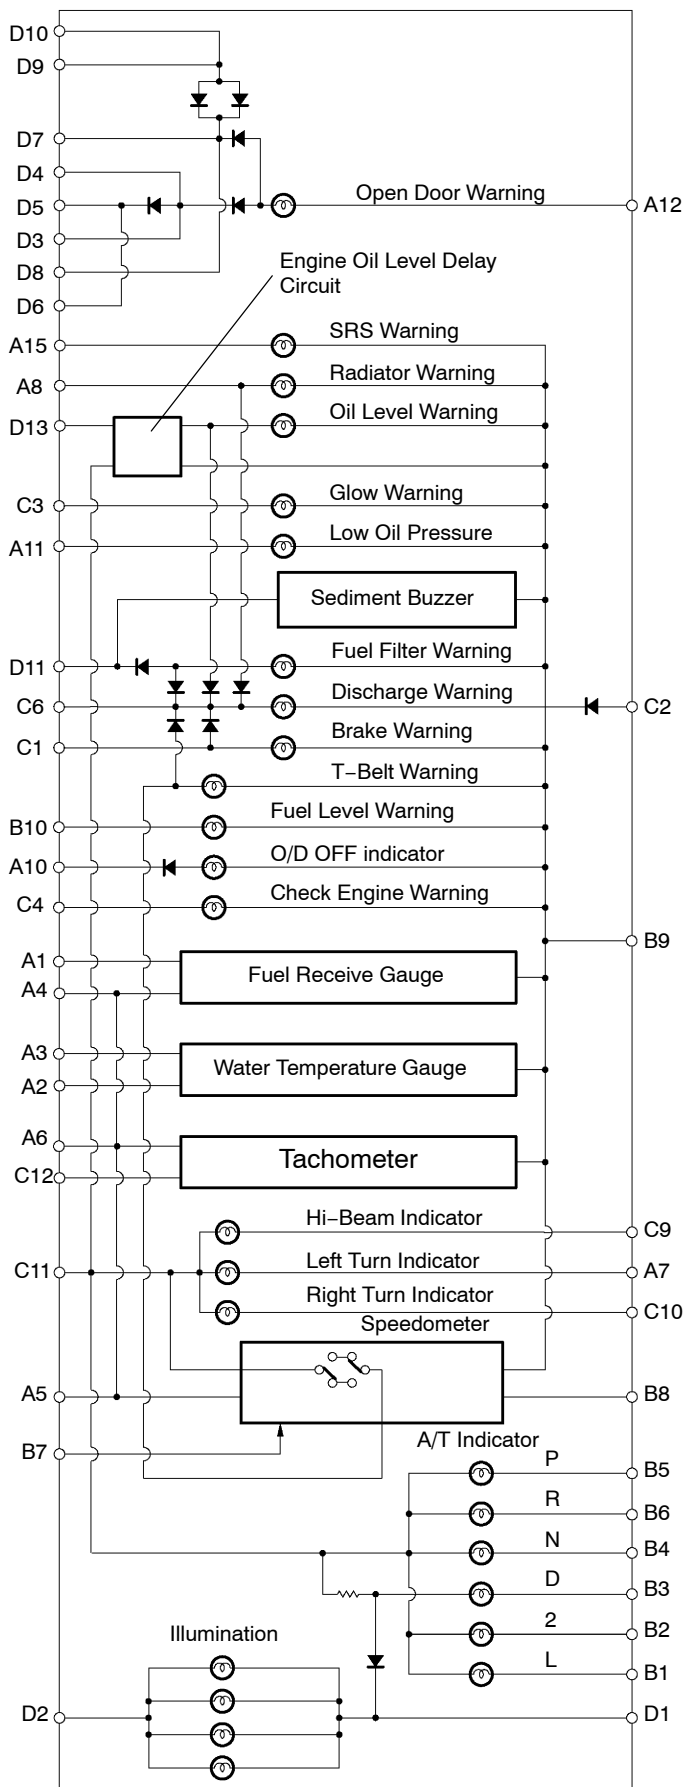

No.		Wiring Connector Side
A	1	Fuel Sender Gauge
	2	Water Temperature Sender Gauge
	3	Ground (Engine)
	4	Ground (Gauge)
	5	Ground (Speed)
	6	Ground *1
	7	Turn Signal Switch (Left)
	8	Radiator Fluid Level Sensor
	10	O/D OFF Switch
	11	Low Oil Pressure Warning Switch
	12	ECU-B Fuse
	15	Airbag Sensor Assembly
B	1	Neutral Start Switch (L) *3
	2	Neutral Start Switch (2) *3
	3	Neutral Start Switch (D) *3
	4	Neutral Start Switch (N) *3
	5	Neutral Start Switch (P) *3
	6	Neutral Start Switch (R) *3
	7	Vehicle Speed Sensor
	8	Engine ECU & Engine ECT ECU
	9	Gauge Fuse
	10	Fuel Sender Gauge
C	1	Brake Fluid Level Warning Switch
	2	Ignition Switch
	3	Pre-Heating Timer
	6	Alternator L Terminal
	7	DOVE Fuse
	9	Headlight Dimmer Switch
	10	Turn Signal Switch (Right)
	11	Ground
	12	Igniter *2 or Tacho Pick-up *1 sensor
D	1	TAIL Fuse
	2	Illumination Ground
	3	DOVE Light
	4	Door Courtesy Switch (Passenger Side)
	5	Door Courtesy Switch (Driver Side)
	6	Light Reminder Relay
	7	Rear Door
	8	Slide Door
	9	Room Light Switch
	10	Rear Light
	11	Fuel Filter Warning Switch
	13	Engine Oil Level Switch

*1: Diesel Engine

*2: Gasoline Engine

*3: AT Vehicle