



# COMBINATION METER CIRCUIT

BE1CR-01

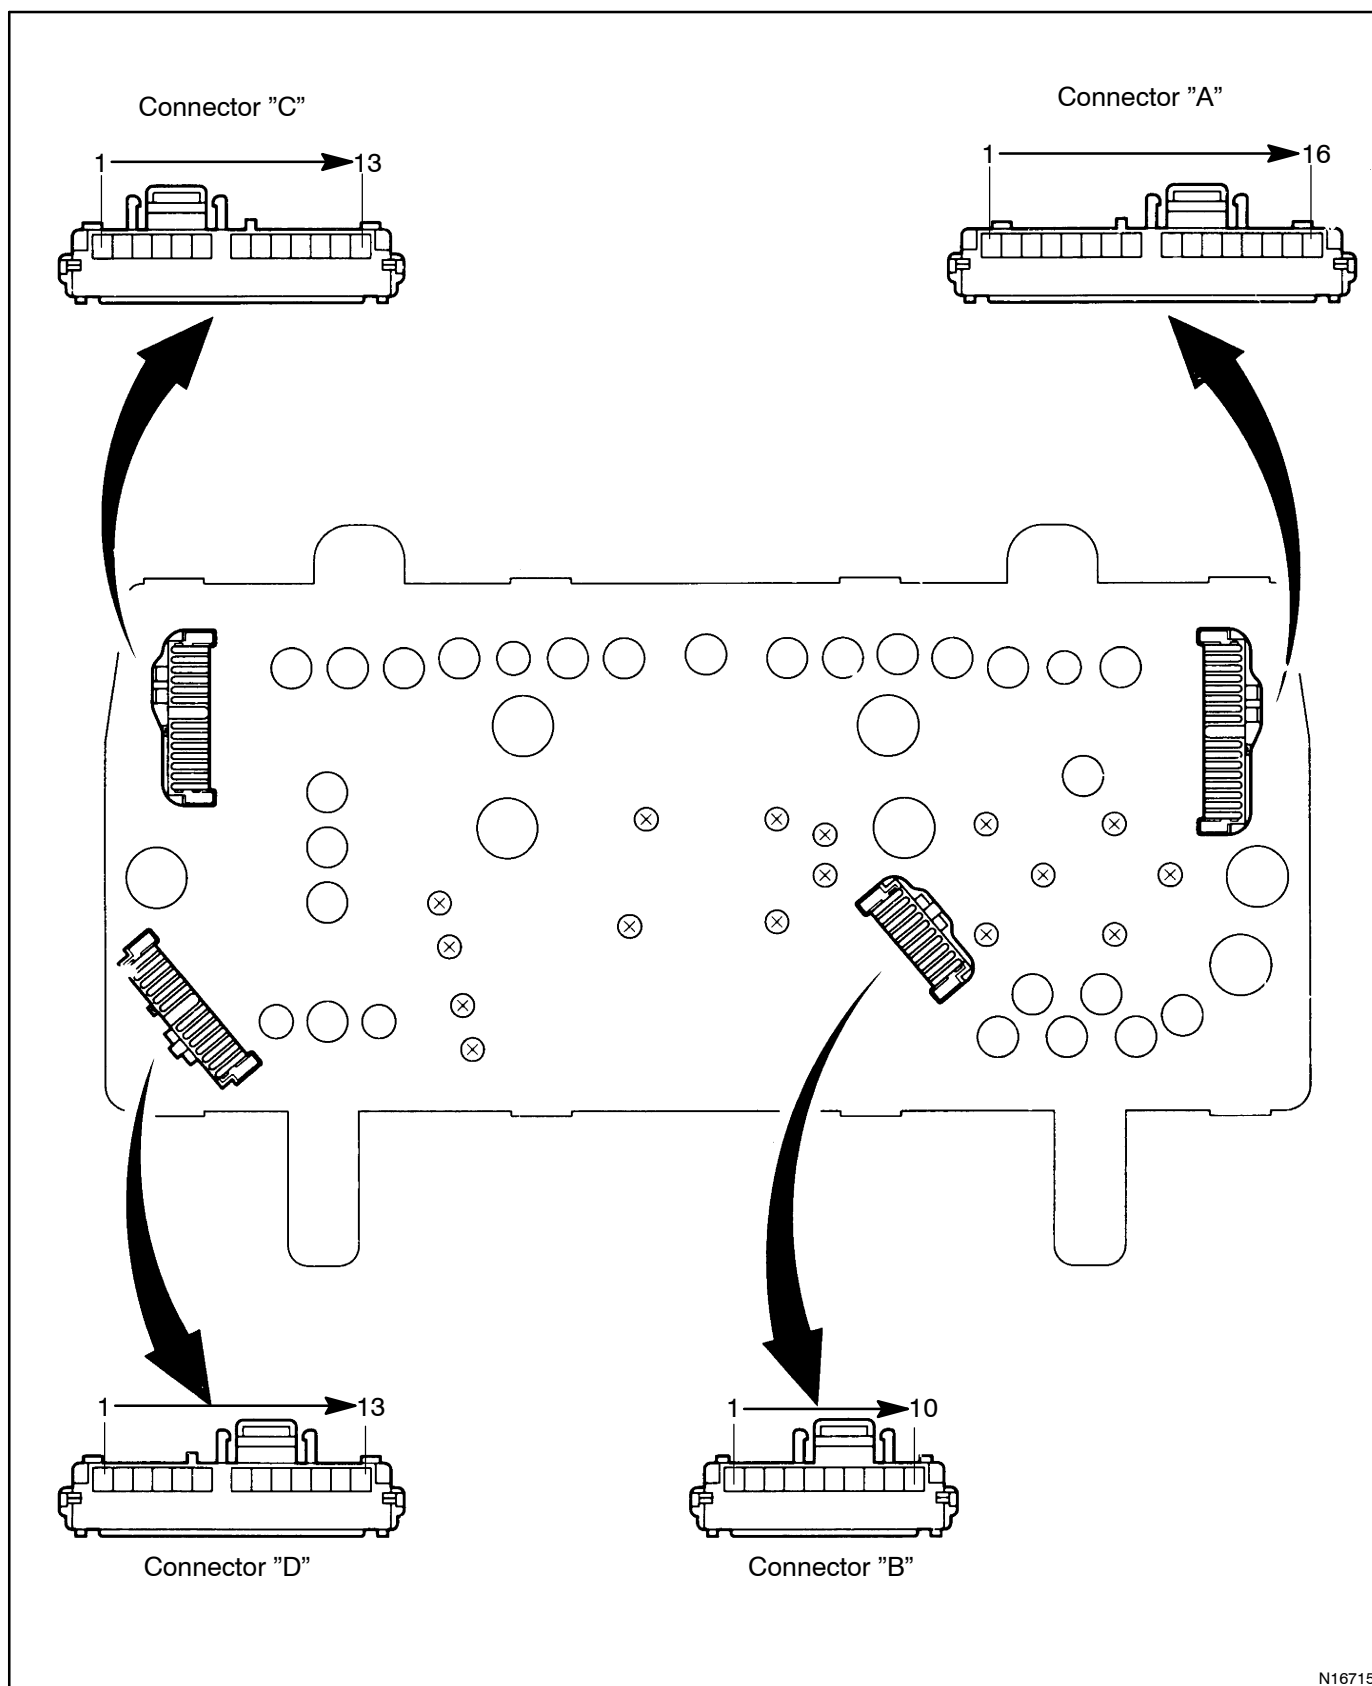


N16715

w/o Tachometer:

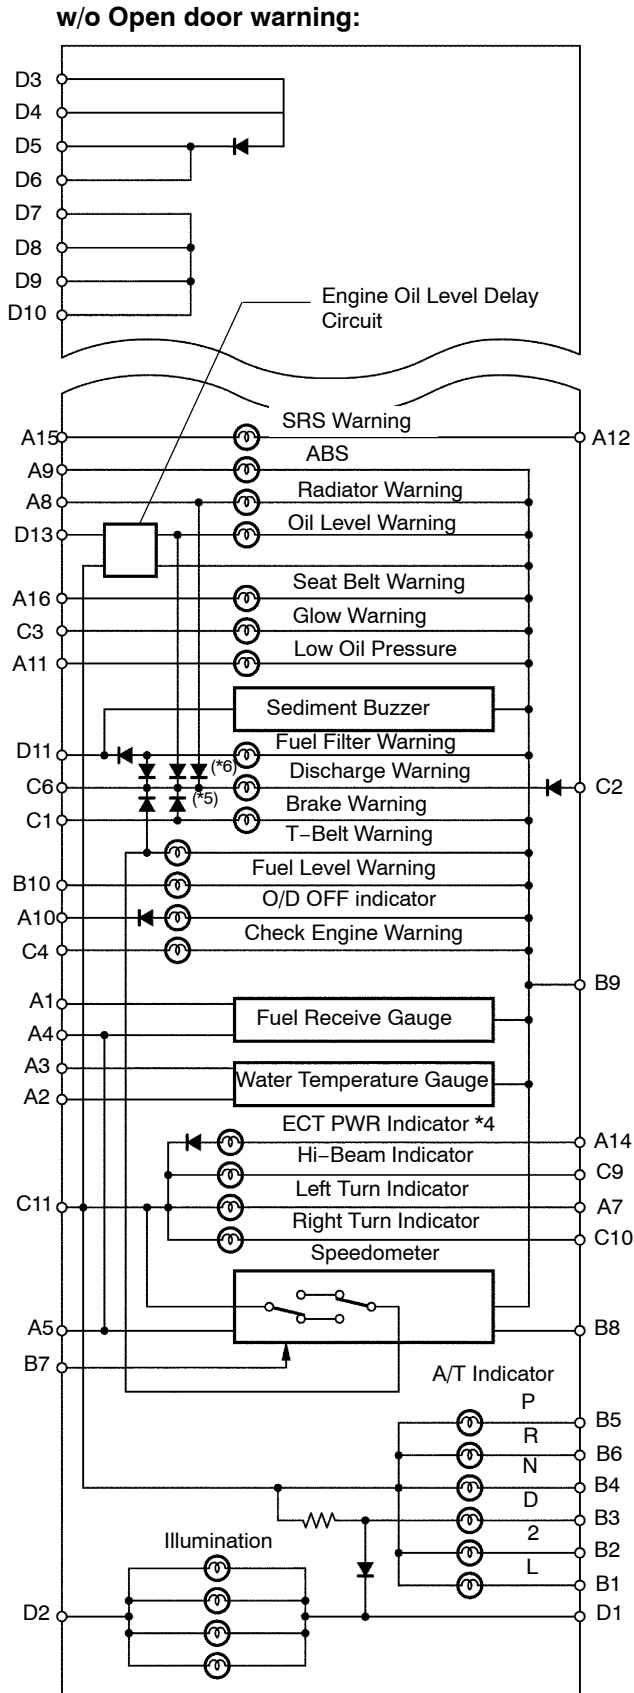

**w/ Open door warning:**

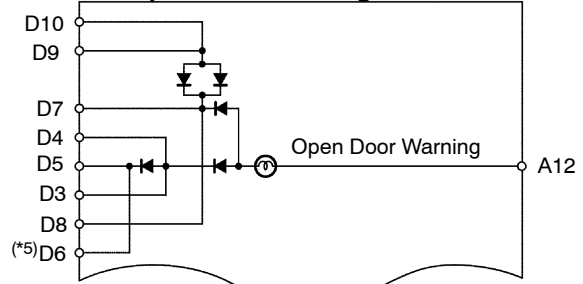


No.	Wiring Connector Side
A	1 Fuel Sender Gauge
	2 Water Temperature Sender Gauge
	3 Ground (Engine)
	4 Ground (Gauge)
	5 Ground (Speed)
	6 Ground *1
	7 Turn Signal Switch (Left)
	8 Radiator Fluid Level Sensor
	10 O/D OFF Switch
	11 Low Oil Pressure Warning Switch
	12 ECU-B Fuse
	14 ECT PWR
	15 Airbag Sensor Assembly
	16 Seat Belt Buckle Switch
B	1 Neutral Start Switch (L) *3
	2 Neutral Start Switch (2) *3
	3 Neutral Start Switch (D) *3
	4 Neutral Start Switch (N) *3
	5 Neutral Start Switch (P) *3
	6 Neutral Start Switch (R) *3
	7 Vehicle Speed Sensor
	8 Engine ECU or Engine ECT ECU
	9 Gauge Fuse
	10 Fuel Sender Gauge
C	1 Brake Fluid Level Warning Switch
	2 Ignition Switch
	3 Pre-Heating Timer
	6 Alternator L Terminal
	7 DOME Fuse
	9 Headlight Dimmer Switch
	10 Turn Signal Switch (Right)
	11 Ground
	12 Igniter *2 or Tacho Pick-up *1 sensor
D	1 TAIL Fuse
	2 Illumination Ground
	3 DOME Light
	4 Door Courtesy Switch (Passenger Side)
	5 Door Courtesy Switch (Driver Side)
	6 Light Reminder Relay
	7 Rear Door
	8 Slide Door
	9 Room Light Switch
	10 Rear Light
	11 Fuel Filter Warning Switch
	13 Engine Oil Level Switch

\*1: Diesel Engine \*2: Gasoline Engine \*3: AT Vehicle  
\*4: Only Australia \*5: G.C.C Countries \*6: Only ADR


I14129

## w/ Tachometer:

## w/o Open door warning:

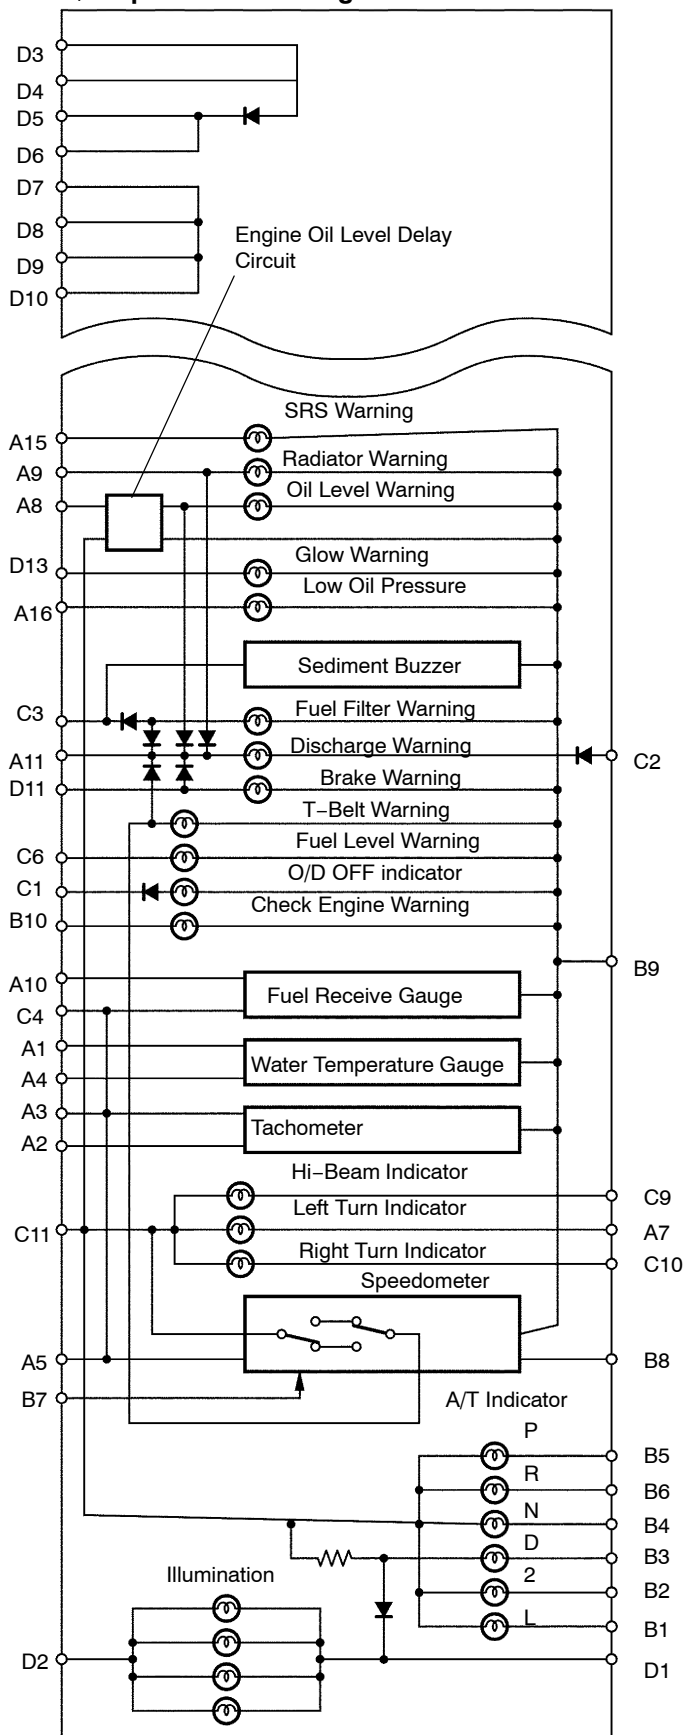

## w/ Open door warning:

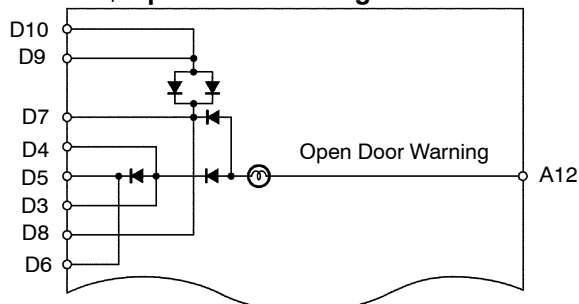

No.	Wiring Connector Side
A	1 Fuel Sender Gauge
	2 Water Temperature Sender Gauge
	3 Ground (Engine)
	4 Ground (Gauge)
	5 Ground (Speed)
	6 Ground *1
	7 Turn Signal Switch (Left)
	8 Radiator Fluid Level Sensor
	10 O/D OFF Switch
	11 Low Oil Pressure Warning Switch
	12 ECU-B Fuse
	15 Airbag Sensor Assembly
	16 Seat Belt Buckle Switch
B	1 Neutral Start Switch (L) *3
	2 Neutral Start Switch (2) *3
	3 Neutral Start Switch (D) *3
	4 Neutral Start Switch (N) *3
	5 Neutral Start Switch (P) *3
	6 Neutral Start Switch (R) *3
	7 Vehicle Speed Sensor
	8 Engine ECU or Engine ECT ECU
	9 Gauge Fuse
	10 Fuel Sender Gauge
C	1 Brake Fluid Level Warning Switch
	2 Ignition Switch
	3 Pre-Heating Timer
	6 Alternator L Terminal
	7 DOME Fuse
	9 Headlight Dimmer Switch
	10 Turn Signal Switch (Right)
	11 Ground
	12 Igniter *2 or Tacho Pick-up *1 sensor
D	1 TAIL Fuse
	2 Illumination Ground
	3 DOME Light
	4 Door Courtesy Switch (Passenger Side)
	5 Door Courtesy Switch (Driver Side)
	6 Light Reminder Relay
	7 Rear Door
	8 Slide Door
	9 Room Light Switch
	10 Rear Light
	11 Fuel Filter Warning Switch
	13 Engine Oil Level Switch

\*1: Diesel Engine \*2: Gasoline Engine \*3: AT Vehicle