


INSPECTION

INSPECT TIMING BELT WARNING MICRO SWITCH

- (a) Remove the speedometer unit from the combination meter.
- (b) Read the number indicated by the timing belt micro switch in the speedometer.

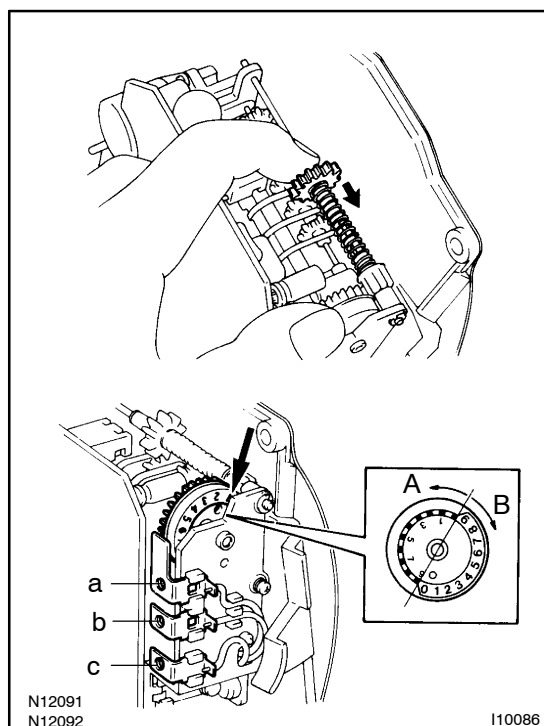

- (c) Disengage the gear on top of the odometer and check the continuity between the terminals when the cam for the micro switch is rotated.

When the arrow in the illustration indicates the A side:

Tester connection	Specified condition
a - c	Continuity
b - c	No continuity

When the arrow in the illustration indicates the B side:

Tester connection	Specified condition
a - c	No continuity
b - c	Continuity