


POWER DOOR LOCK CONTROL SYSTEM INSPECTION

BE12H-01

1. LHD Models and RHD Models (w/o Power window): INSPECT DOOR LOCK CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	3 – 7, 8 – 9	Continuity
OFF	6 – 7, 8 – 9	No continuity
UNLOCK	3 – 8, 6 – 7	Continuity


If continuity is not as specified, replace the switch.

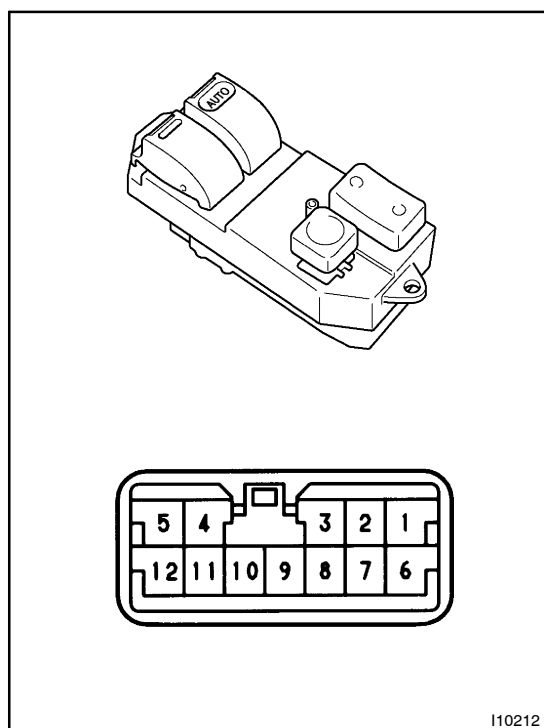

2. RHD Models (w/ Power Window): INSPECT DOOR LOCK CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	3 – 10	Continuity
OFF	–	No continuity
UNLOCK	3 – 11	Continuity

If continuity is not as specified, replace the switch.

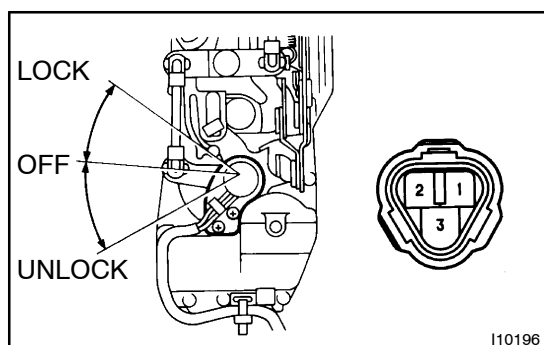

3. INSPECT DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	2 – 3	Continuity
OFF	–	No continuity
UNLOCK	1 – 2	Continuity

If continuity is not as specified, replace the switch.