


Front Bearing Retainer


COMPONENTS

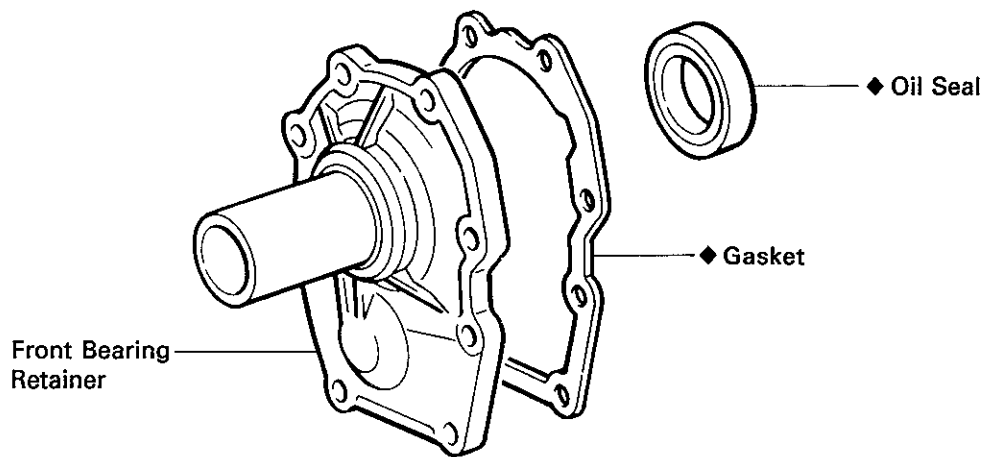

REPLACEMENT OF OIL SEAL

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.

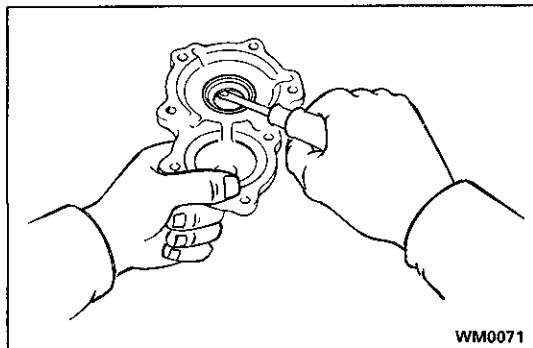

- (b) Using SST, press in a new oil seal.

SST 09223-50010

Oil seal depth: 12.2 – 13.2 mm (0.480 – 0.520 in.)

Transmission case installation surface

