


Extension Housing and Transfer Adaptor

COMPONENTS

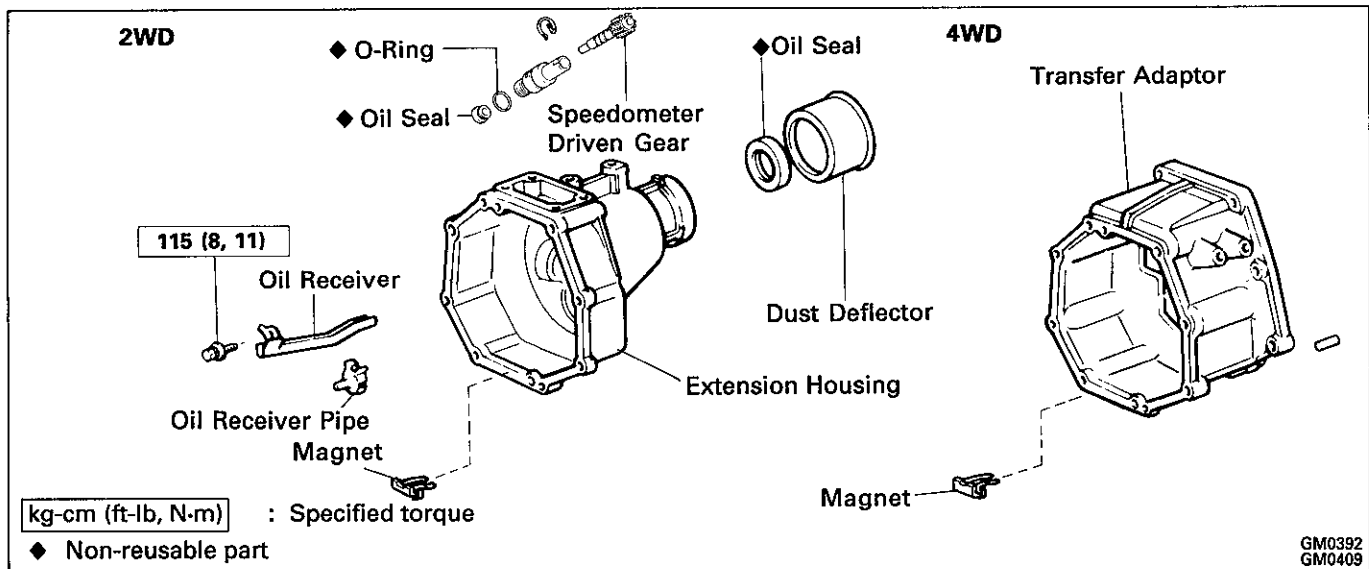


REPLACEMENT OF OIL SEALS

1. (2WD)
IF NECESSARY, REPLACE EXTENSION HOUSING OIL SEAL


(a) Using SST, remove the oil seal.

SST 09308-00010 or 09308-10010 with output shaft installed

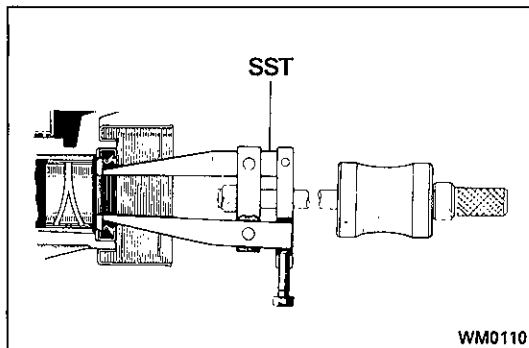

(b) Using SST, drive in a new oil seal.

SST 09325-20010

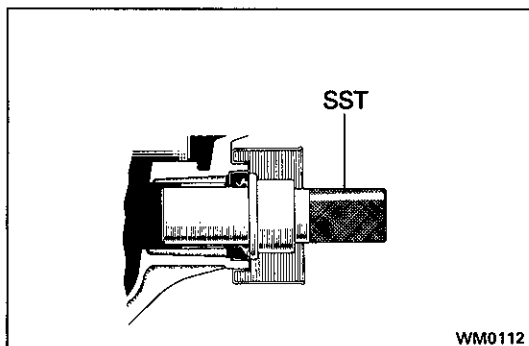

2. (2WD)
IF NECESSARY, REPLACE SPEEDOMETER DRIVEN GEAR OIL SEAL

(a) Using SST, pull out the oil seal.

SST 09921-00010

(b) Using SST, drive the oil seal into the sleeve.

SST 09201-60011

Oil seal depth: 20 mm (0.79 in.)

