



MAIN POINT OF REMOVAL AND INSTALLATION

1. **DISCONNECT AND CONNECT RADIATOR UPPER HOSE**

2. **CHECK TORQUE CONVERTER INSTALLATION**

Using calipers and a straight edge, measure from the installed surface of the torque converter to the front surface of the transmission housing.

Correct distance: L Engine 26 mm (1.02 in)

RZ Engine 31 mm (1.22 in.)

If the distance is less than the standard, check for an improper installation.

3. **ADJUST TRANSMISSION THROTTLE CABLE**
(See page AT-11)

4. **FILL TRANSMISSION WITH ATF AND CHECK FLUID LEVEL**

NOTICE: Do not overfill.

Fluid type: ATF DEXRON®II