



Adjustment of Transfer Shift Lever

ADJUST CONTROL CABLE

- (a) Start the engine and turn the 4WD control switch to ON.

HINT: Put the vehicle in 4WD.

- (b) Disconnect the control cable from transfer.
- (c) Shift the transfer inner lever to L4 position.
- (d) Remove the transfer shift lever knob.
- (e) Maintain standard clearance between the console box and the screw-tip of the shift lever.

Standard Clearance: 90 mm (3.54 in.)

- (f) In the condition in (e), adjust the length of the control cable.