

## INSTALLATION

Installation is in the reverse order of removal (See page TR-4).

HINT:

- Apply MP grease to the transfer adaptor oil seal.
- After installation, do road test.