



## DISASSEMBLY

### 1. REMOVE SCREW PLUG, SPRING AND BALL

- (a) Using a hexagon wrench (6 mm), remove the screw plug.

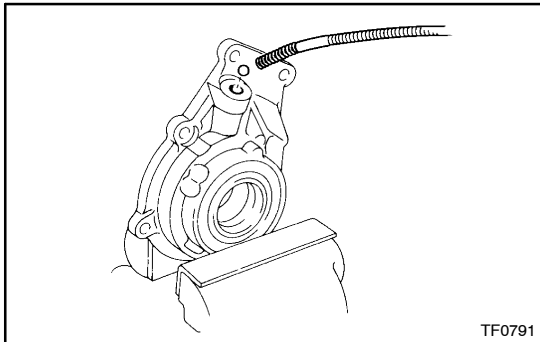


- (b) Using a magnetic finger, remove the spring and ball.

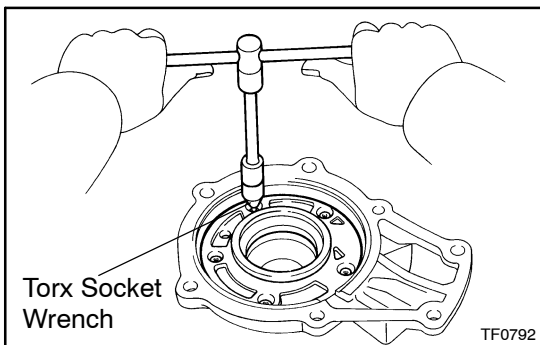

### 2. REMOVE OIL PUMP COVER

Using a torx socket wrench (T30), remove 5 screws and oil pump cover.

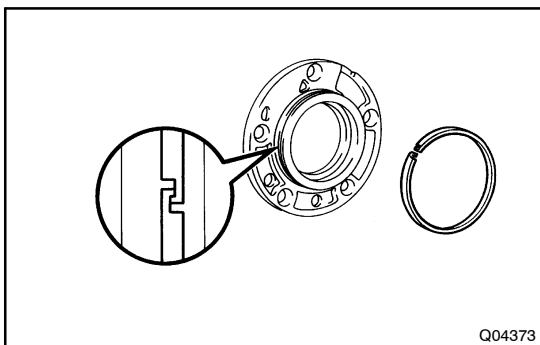

3. REMOVE NO. 1 SEAL RING FROM OIL PUMP COVER
4. REMOVE OIL PUMP PLATE FROM OIL PUMP BODY
5. REMOVE OIL PUMP DRIVE ROTOR AND DRIVEN ROTOR FROM OIL PUMP BODY