


DISASSEMBLY

1. REMOVE FRONT BALL BEARING

Using a press, remove the front ball bearing.

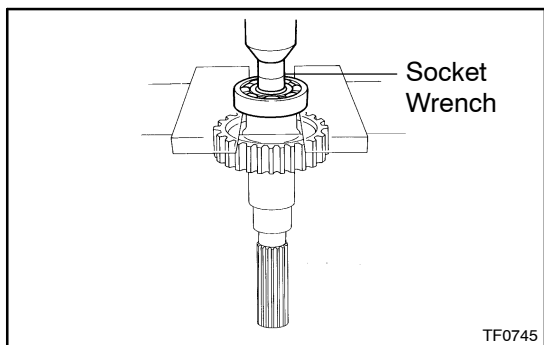

2. REMOVE REAR BALL BEARING

Using a socket wrench and press, remove the rear ball bearing.