


REASSEMBLY

HINT:

Coat all of the sliding and rotating surfaces with gear oil before reassemble.

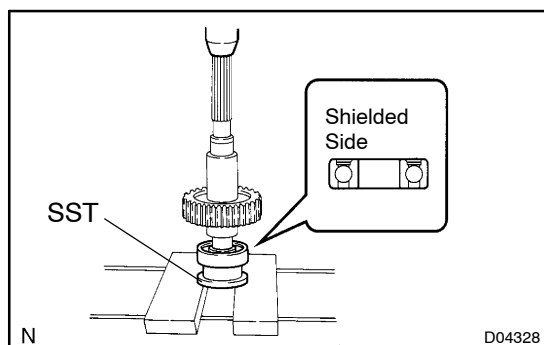


1. INSTALL REAR BALL BEARING

Using SST and a press, install the rear ball bearing.

SST 09316-60011 (09316-00021)

NOTICE:

Make sure to install the bearing in the correct direction.

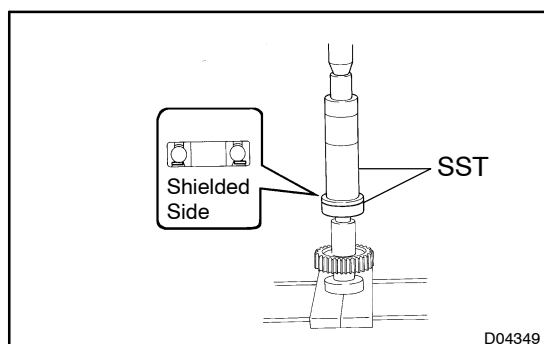

2. INSTALL FRONT BALL BEARING

Using SST and a press, install the front ball bearing.

SST 09316-60011 (09316-00011, 09316-00021)

NOTICE:

Make sure to install the bearing in the correct direction.