

## DISASSEMBLY

### 1. REMOVE OIL SEAL


- (a) Using SST, remove the oil seal.

SST 09308-00010

#### NOTICE:

**Be careful not to drop the inner bearing.**

- (b) Remove the inner bearing from front axle hub.

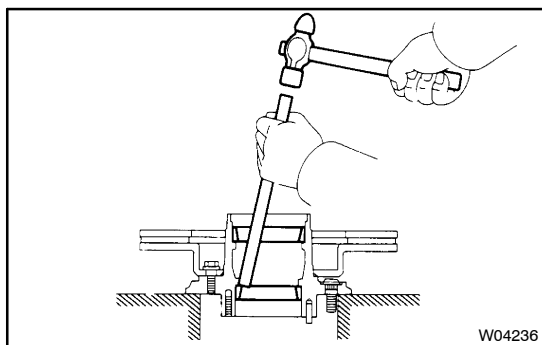


### 2. REMOVE BEARING OUTER RACES

#### NOTICE:

**Do not remove the outer race except when replacing the bearing.**

Using a brass bar and hammer, drive out the 2 bearing outer races from the front axle hub.

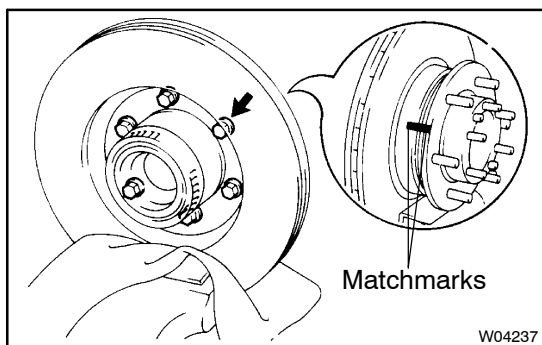

### 3. REMOVE DISC

- (a) Place matchmarks on the front axle hub and disc.
- (b) Remove the 6 bolts and separate the disc from the front axle hub.