



REMOVAL

1. REMOVE REAR WHEELS


Torque: 100 N·m (1050 kgf·cm, 76 ft·lbf)

2. REMOVE SHOCK ABSORBER

- (a) Remove the rear seat No. 3.
- (b) Remove the door scuff plate.
- (c) Pull up the floor carpet.
- (d) Remove the floor mat.
- (e) Remove 2 screws and the shock absorber cover.

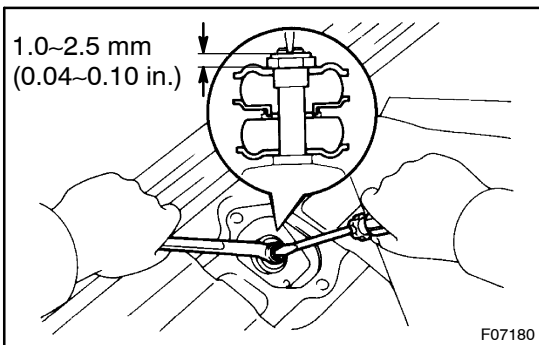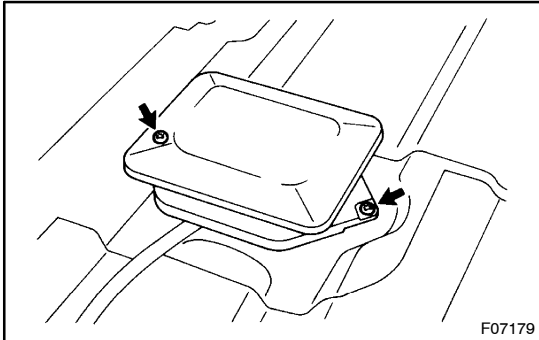

- (f) Remove the nut.
- (g) Remove the retainer and the cushion retainer.

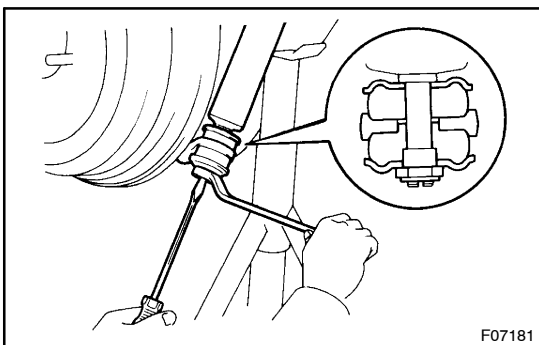

- (h) Remove the nut and disconnect the shock absorber from the axle housing.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- (i) Lower the jacks gradually, and remove the coil spring, upper insulator and lower insulator.