


REMOVAL

1. SUPPORT REAR AXLE HOUSING WITH JACK

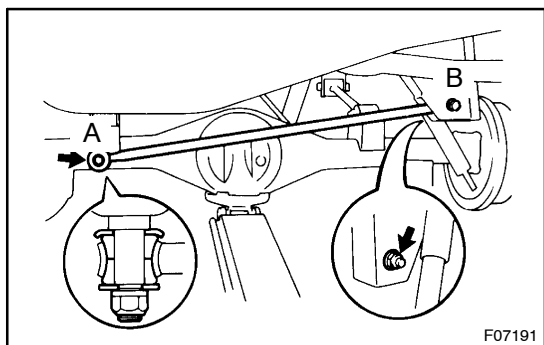

2. REMOVE LATERAL CONTROL ROD

- (a) Remove the nut cover.
- (b) Remove the bolt, 2 nuts, 2 washers and lateral control rod.

Torque:

A bolt: 105 N·m (1,100 kgf·cm, 80 ft·lbf)

B bolt: 91 N·m (925 kgf·cm, 67 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the nut and bolt.