


## REPLACEMENT

### 1. REMOVE UPPER CONTROL ARM BUSHING

Using SST and a press, remove the bushing.


SST 09710-26011 (09710-05031),  
09710-30041 (09710-03221)

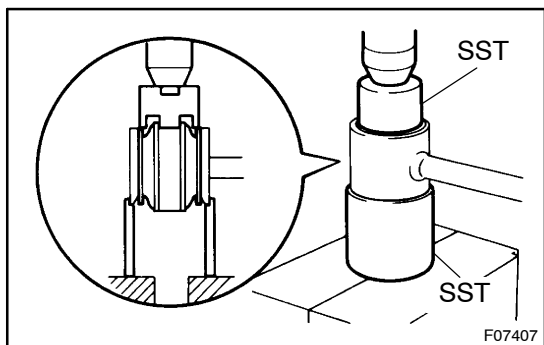

### 2. INSTALL UPPER CONTROL ARM BUSHING

Using SST and a press, install a new bushing.


SST 09710-26011 (09710-05031),  
09710-30041 (09710-03221)

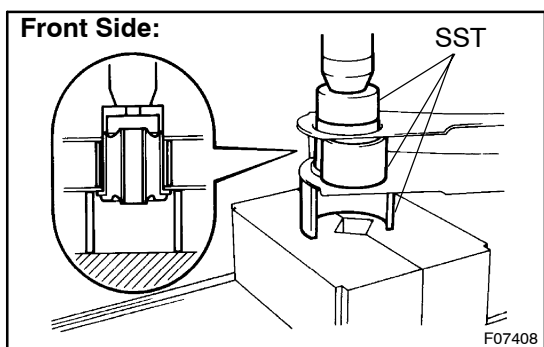


### 3. REMOVE LOWER CONTROL ARM BUSHING

Using SST and a press, remove the bushing.

SST 09710-20011 (09710-06061, 09710-06071),  
09710-26011 (09710-05081)

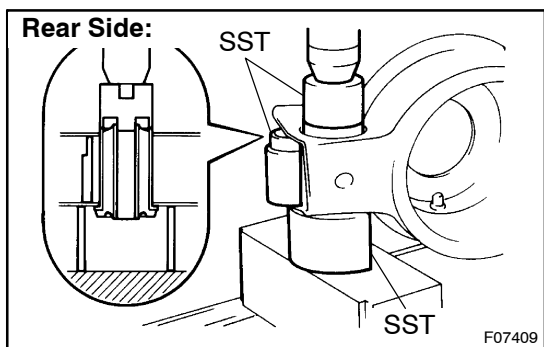


SST 09710-26011 (09710-05031, 09710-05081),  
09710-30021 (09710-03031)

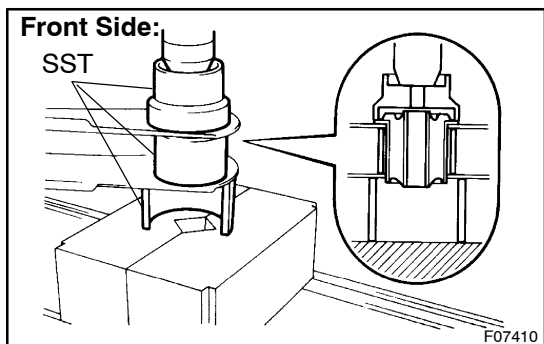


### 4. INSTALL LOWER CONTROL ARM BUSHING

Using SST and a press, install a new bushing.

SST 09710-20011 (09710-06061),  
09710-26011 (09710-05061, 09710-05081)

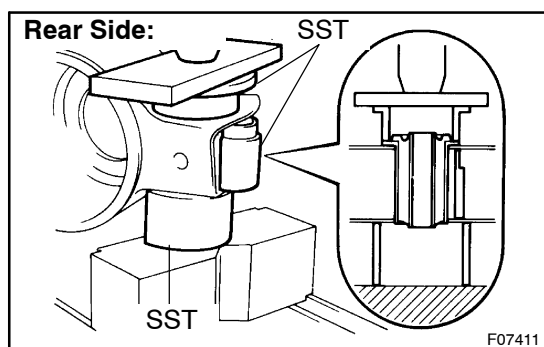

SST 09316-20011,  
09710-26011 (09710-05081),  
09710-30021 (09710-03031)

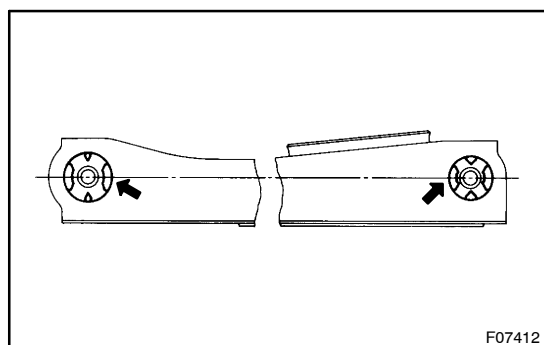

**HINT:**

As shown in the illustration, make the bushing meet the center of the lower control arm.