



## REMOVAL

### 1. SUPPORT REAR AXLE HOUSING WITH JACK

### 2. REMOVE REAR WHEELS

**Torque: 100 N·m (1050 kgf·cm, 76 ft·lbf)**

### 3. REMOVE STABILIZER BAR

- (a) Remove 4 bolts, 2 brackets and 2 bushings from the stabilizer bar.

**Torque: 48 N·m (490 kgf·cm, 36 ft·lbf)**

- (b) Remove 2 bolts and stabilizer bar from the stabilizer bar link.

- (c) Remove 2 collars and 2 retainer.

**Torque: 48 N·m (490 kgf·cm, 36 ft·lbf)**

### 4. REMOVE STABILIZER BAR LINK

Remove 2 nuts, 2 bolts and stabilizer bar link.

**Torque: 72.6 N·m (740 kgf·cm, 54 ft·lbf)**