



Stabilizer Bar

COMPONENTS

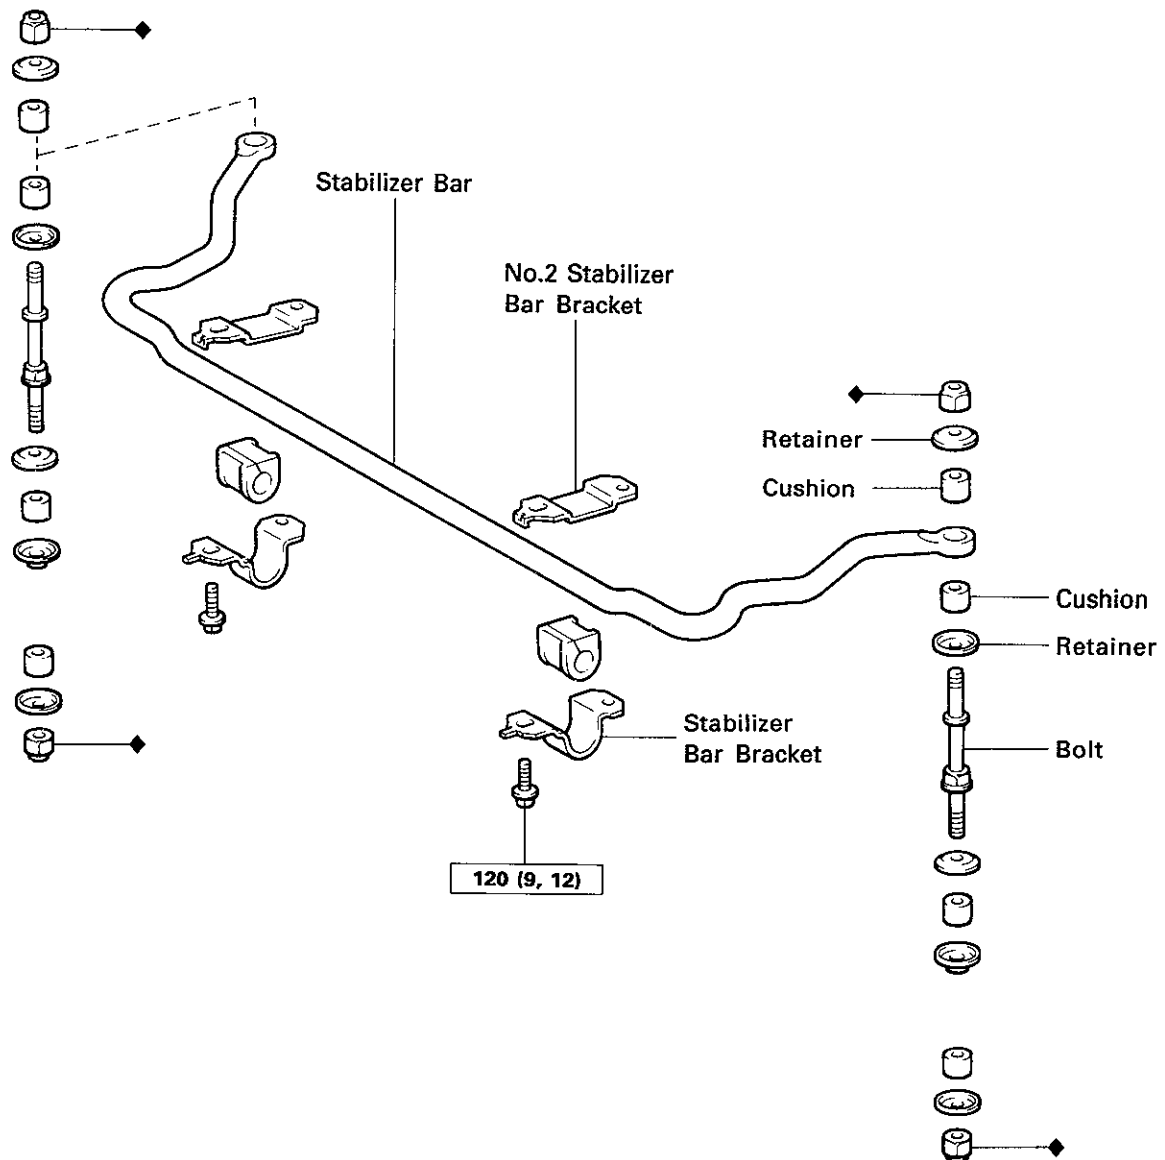

kg-cm (ft-lb, N-m) : Specified torque

◆ Non-reusable part

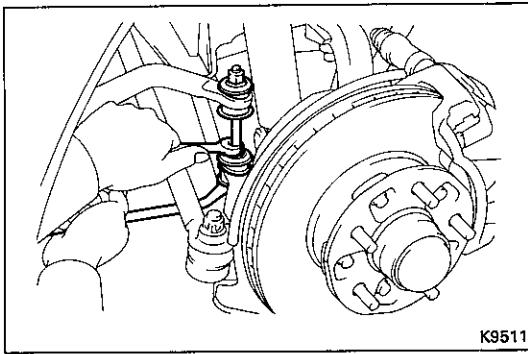

REMOVAL OF STABILIZER BAR

1. REMOVE FRONT WHEELS



2. REMOVE STABILIZER BAR

(a) Remove the left and right stabilizer bar bolts.

(b) Remove the left and right stabilizer bar brackets.

HINT: Remove the set bolts at the front side of the stabilizer bar brackets first.

(c) Remove the stabilizer bar.

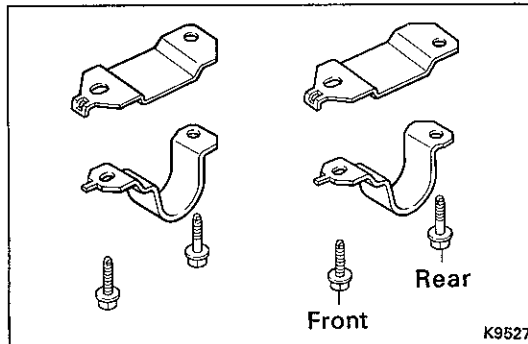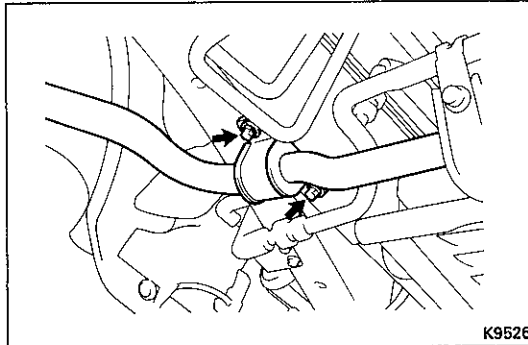

INSTALLATION OF STABILIZER BAR

1. INSTALL STABILIZER BAR

(a) Install the stabilizer bar bushings on the stabilizer bar.



(b) Install the stabilizer bar and the left and right stabilizer bar brackets.

NOTICE: Do not mix up the left and right stabilizer bar brackets.

HINT:

- The stabilizer bar bracket set bolts are different for the front and the rear.
- Install the rear bolts first, then install the front bolts.

Torque: 120 kg-cm (9 ft-lb, 12 N·m)

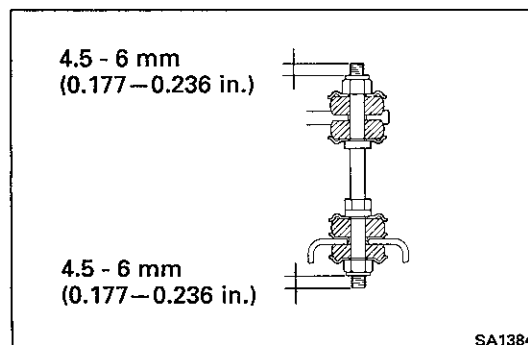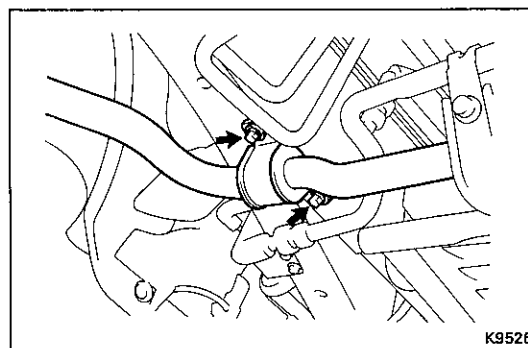

(c) Install the stabilizer bar bolts, retainers and cushions.

(d) Install new nuts.

(e) Tighten the nuts until the bolts protrude 4.5 - 6 mm (0.177 - 0.236 in.).

2. INSTALL FRONT WHEELS

Torque: 1,050 kg-cm (76 ft-lb, 100 N·m)