



## Stabilizer Bar

### COMPONENTS

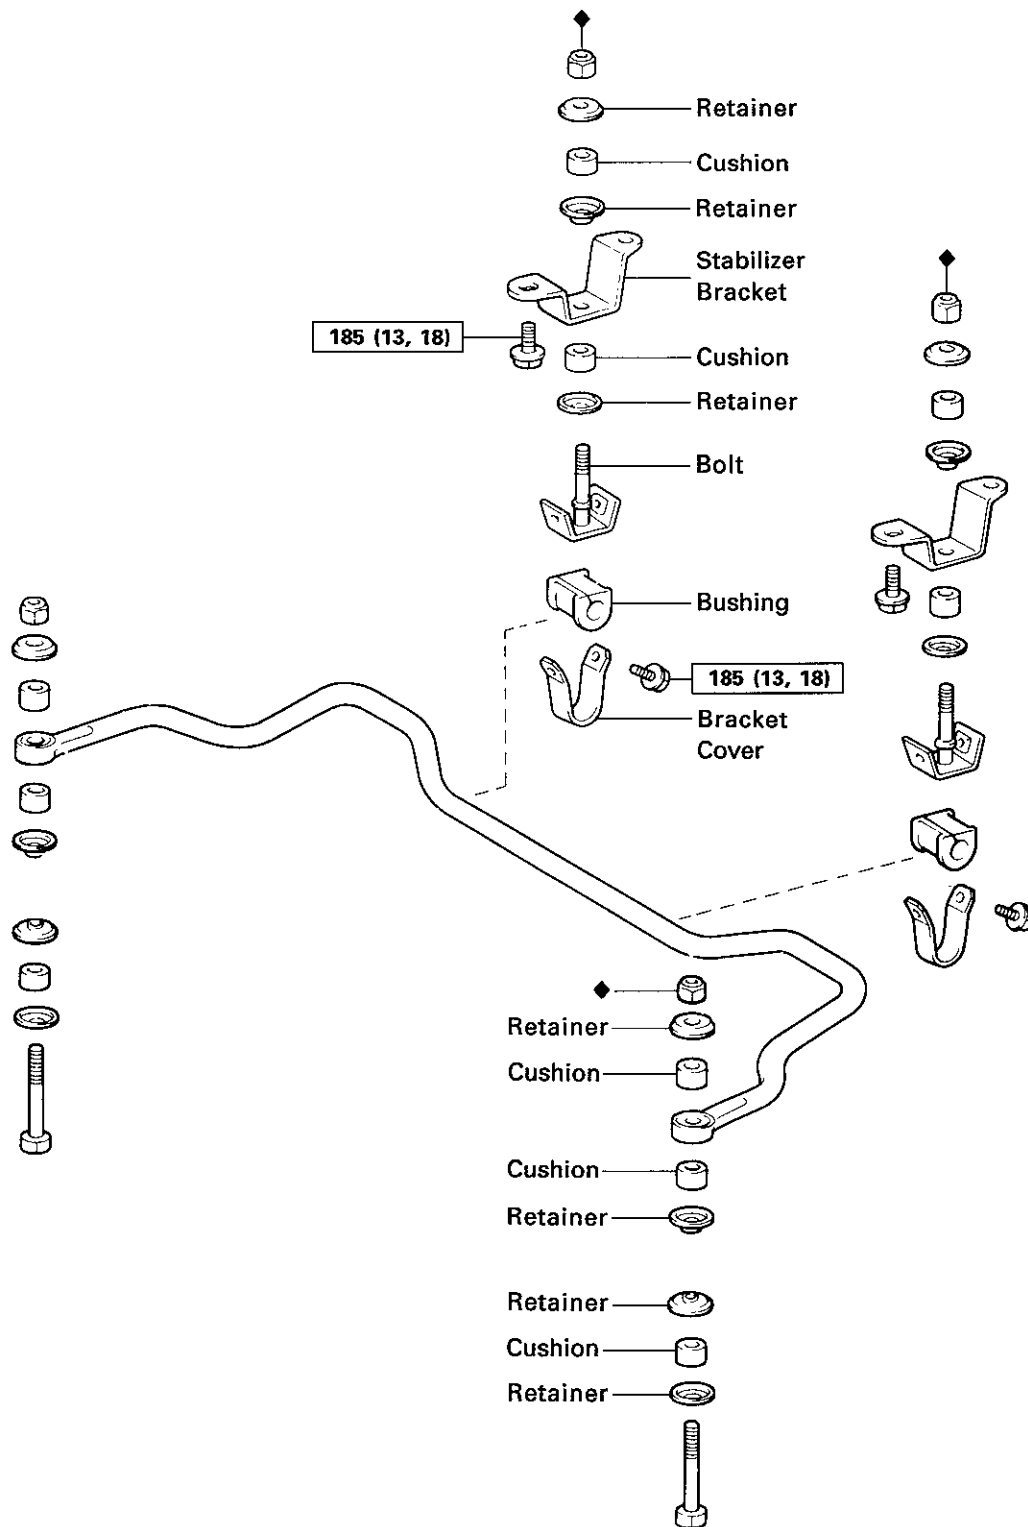

kg-cm (ft-lb, N·m) : Specified torque


◆ Non-reusable part

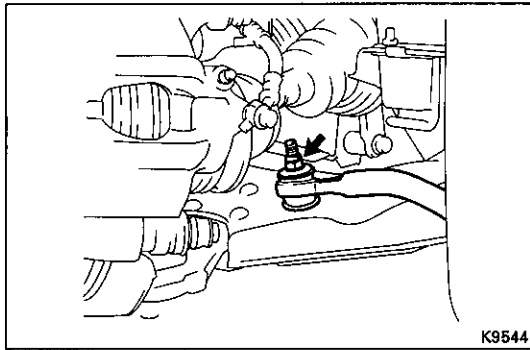

## REMOVAL OF STABILIZER BAR

### 1. DISCONNECT STABILIZER BAR FROM LOWER ARM


Remove the right and left stabilizer bar bolts.

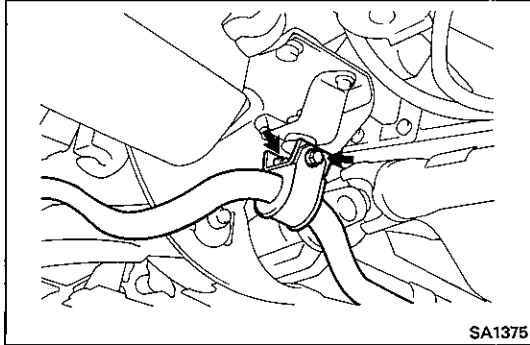

### 2. REMOVE STABILIZER BAR


(a) Remove the right and left bracket covers.

(b) Remove the stabilizer bar.

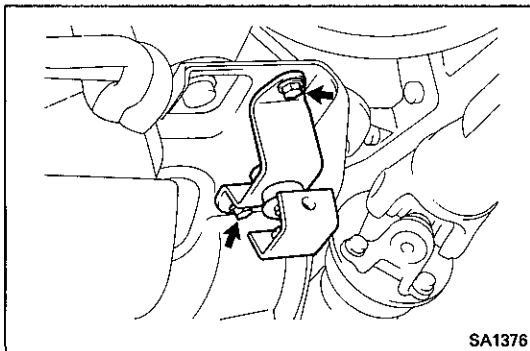


### 3. REMOVE STABILIZER BRACKET

(a) Remove the two bolts and stabilizer bracket.

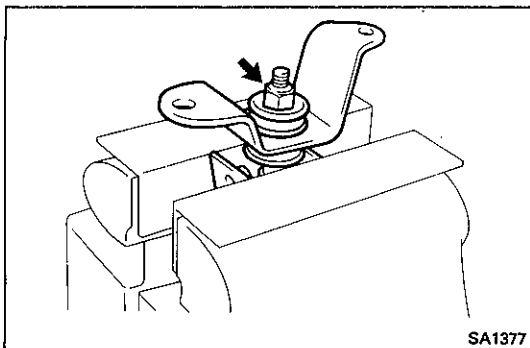

(b) Remove the nut, retainers, cushions and bolt.

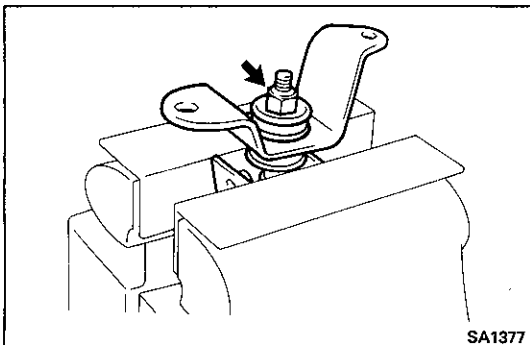


## INSTALLATION OF STABILIZER BAR

### 1. INSTALL STABILIZER BRACKET

(a) Install the bolt, cushions and retainers to the stabilizer bracket.


(b) Install a new nut.

(c) Tighten the nut until the bolt protrudes about 5 mm (0.20 in.).

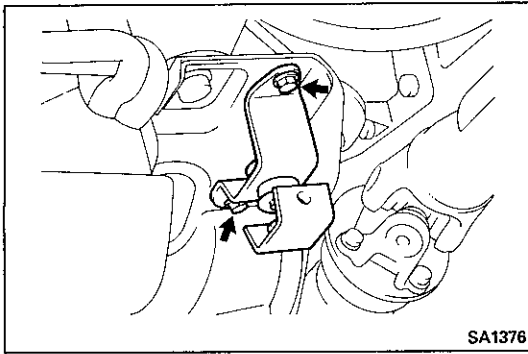

(d) Install the stabilizer bracket with the two bolts.


**Torque: 185 kg-cm (13 ft-lb, 18 N-m)**

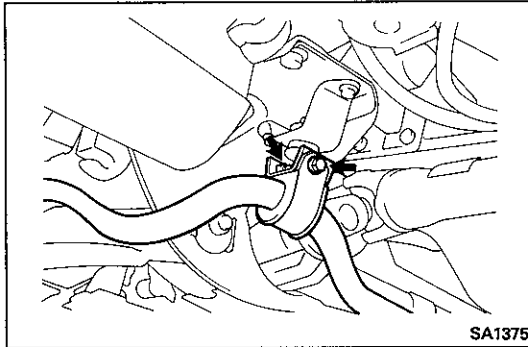

## 2. INSTALL STABILIZER BAR

Install the stabilizer bar and bracket covers.

**Torque: 185 kg-cm (13 ft-lb, 18 N-m)**

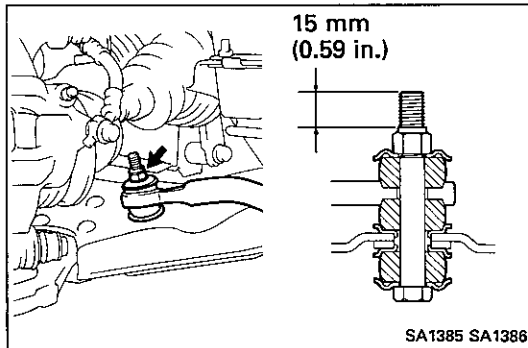

## 3. CONNECT STABILIZER BAR TO LOWER ARMS

(a) Connect the stabilizer bar to the right and left lower arms with bolt, retainers and cushions.

(b) Install a new nut.

(c) Tighten the nut until the bolt protrudes about 15 mm (0.59 in.).