



Differential Case (2 Pinion Type) COMPONENTS

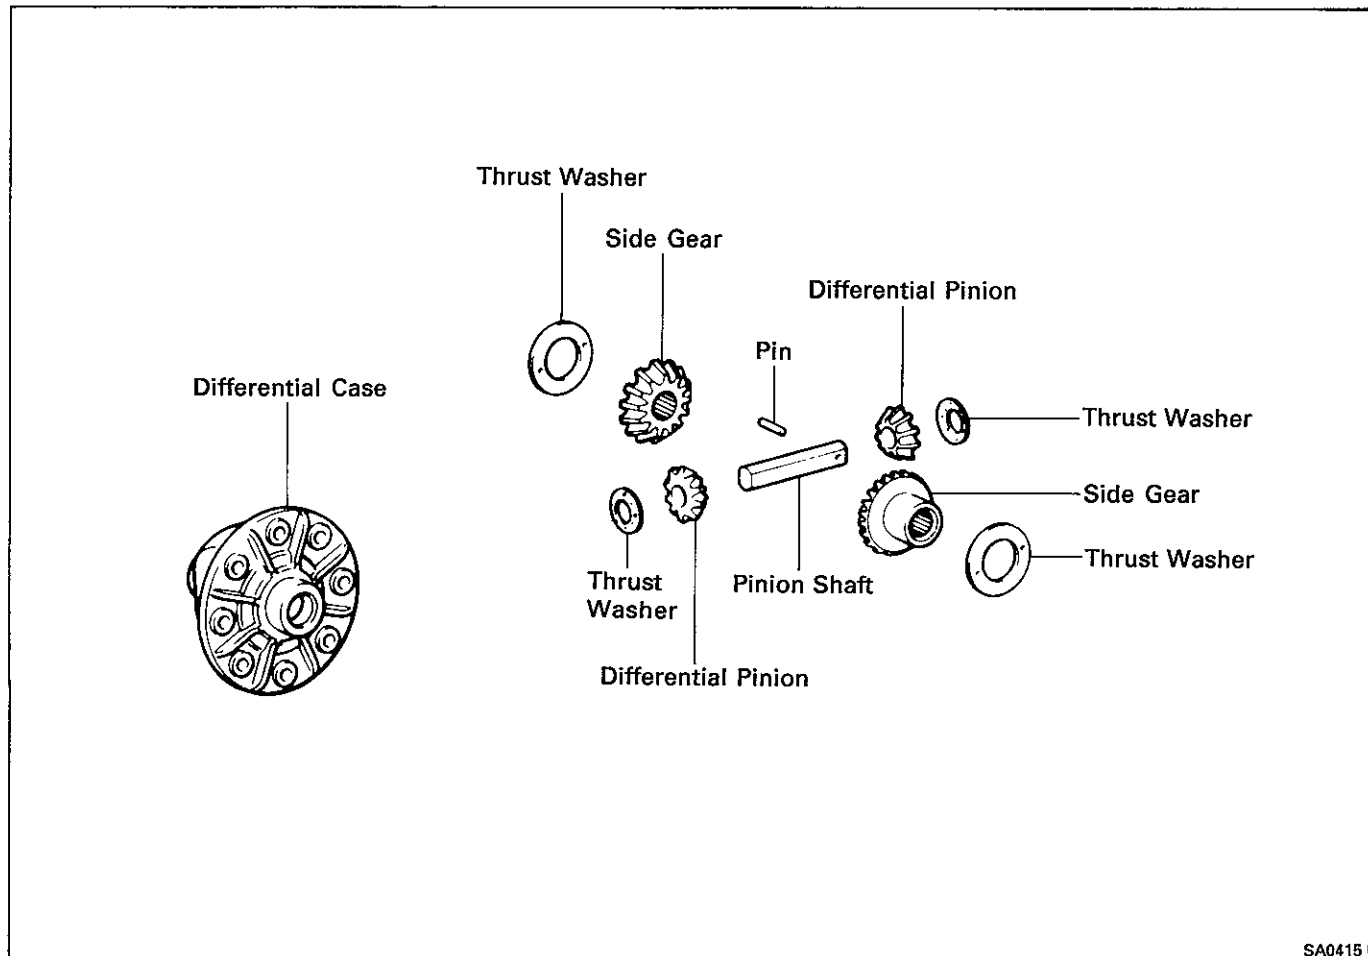

REMOVAL OF DIFFERENTIAL CASE


1. REMOVE DIFFERENTIAL (See page SA-125)
2. REMOVE DIFFERENTIAL CASE FROM CARRIER (See page SA-130)

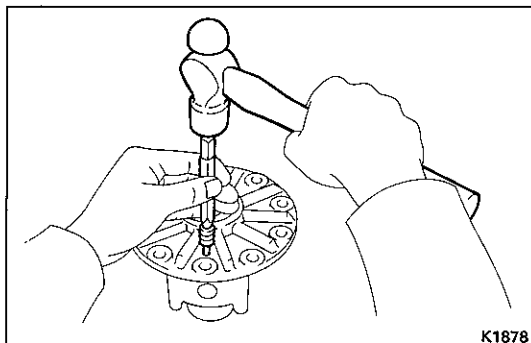

REPLACEMENT OF DIFFERENTIAL CASE COMPONENT PARTS

1. DISASSEMBLE DIFFERENTIAL CASE

Using a hammer and punch, drive out the straight pin. Remove the pinion shaft, two pinion gears, two side gears and two thrust washers.

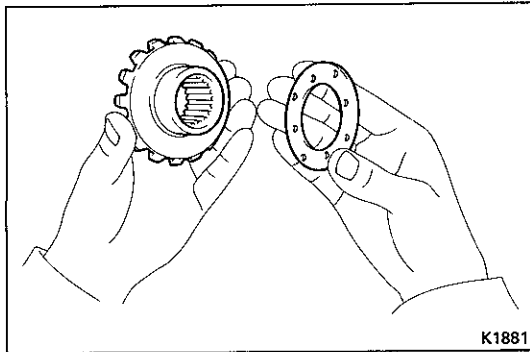


2. ASSEMBLE DIFFERENTIAL CASE

(a) Install the proper thrust washers and side gears.


Using the table below, select thrust washers which will ensure that the backlash is within specification. Try to select washers of the same size for both sides.

**Standard backlash: 0.05 – 0.20 mm
(0.0020 – 0.0079 in.)**

Thrust washer thickness		mm (in.)
1.6	(0.063)	
1.7	(0.067)	
1.8	(0.071)	

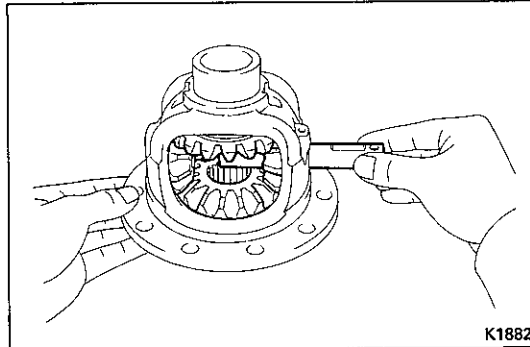

(b) Install thrust washers and side gears in the differential case.

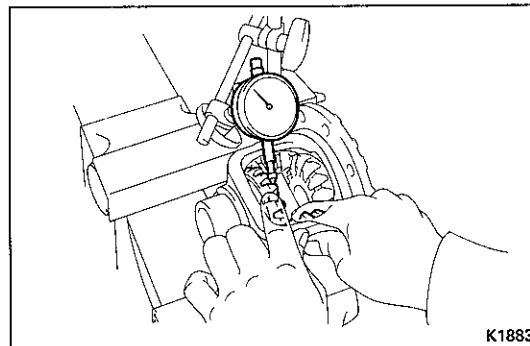


(c) Check the side gear backlash.


Measure the side gear backlash while holding one pinion gear toward the case.

**Standard backlash: 0.05 – 0.20 mm
(0.0020 – 0.0079 in.)**

If the backlash is not within specification, install a thrust washer of different thickness.

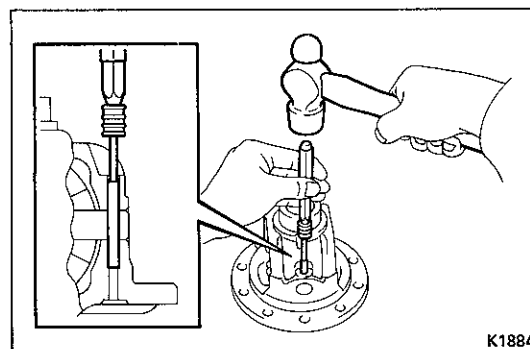

(d) Using a hammer and punch, install the straight pin through the case and hole of the pinion shaft.

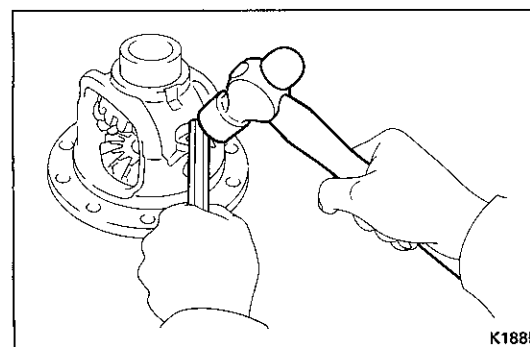

(e) Stake the differential case.

INSTALLATION OF DIFFERENTIAL

1. **INSTALL DIFFERENTIAL CASE IN CARRIER**
(See page SA-134)

2. **INSTALL DIFFERENTIAL**
(See page SA-125)