
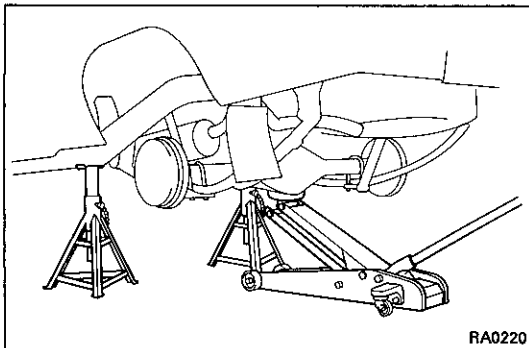


REAR SUSPENSION

Rear Shock Absorber


COMPONENTS

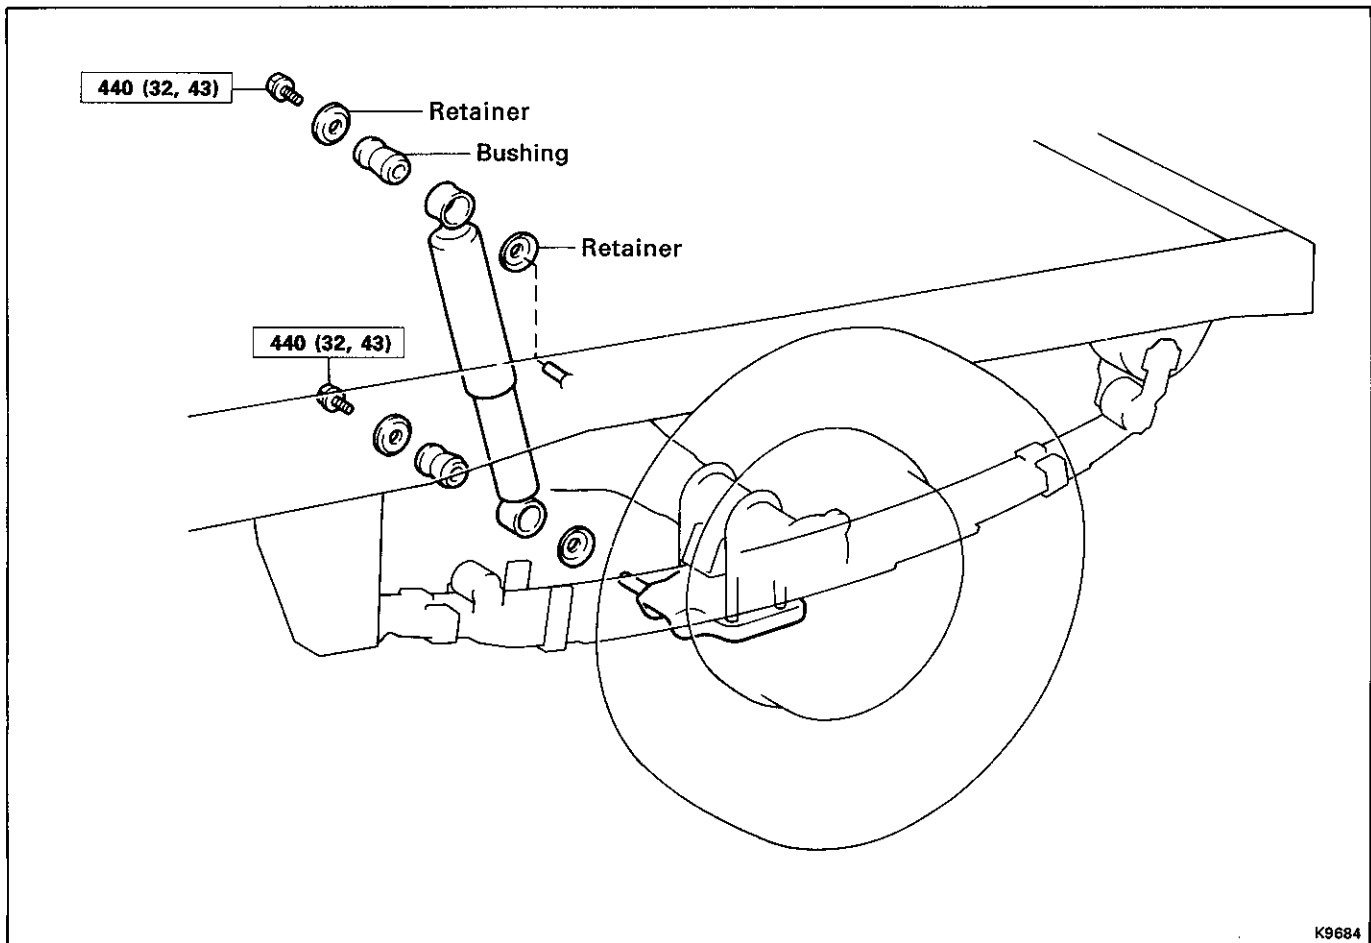


REMOVAL OF REAR SHOCK ABSORBER

1. JACK UP AND SUPPORT BODY

- Jack up and support the body on stands.
- Lower the axle housing until the leaf spring tension is free.

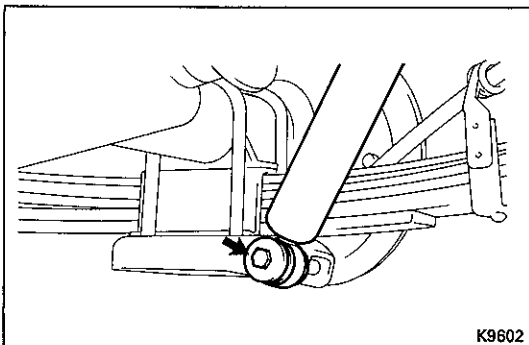

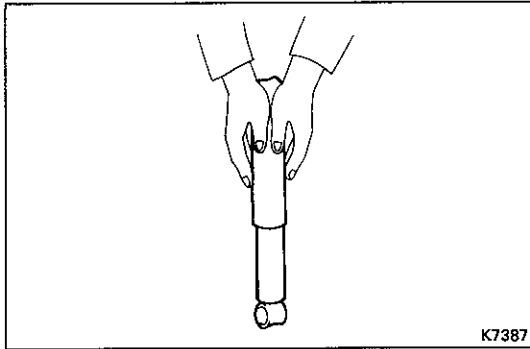


INSPECTION OF REAR SHOCK ABSORBER

INSPECT SHOCK ABSORBER

Compress and extend the shock absorber and check that there is no abnormal resistance or unusual operation sounds.

If there is any abnormality, replace the shock absorber with a new one.

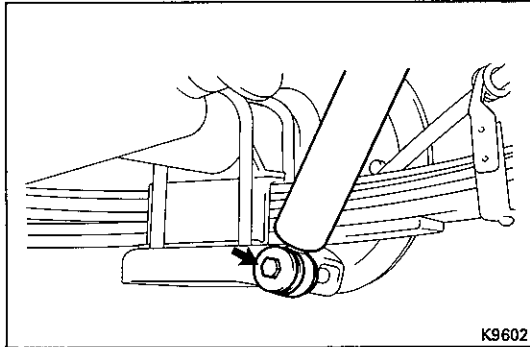

INSTALLATION OF REAR SHOCK ABSORBER

1. INSTALL SHOCK ABSORBER

- (a) Install the shock absorber to the body.

Torque: 240 kg-cm (17 ft-lb, 24 N·m)

- (b) Connect the shock absorber to the spring lower seat.

Torque: 440 kg-cm (32 ft-lb, 43 N·m)

2. JACK DOWN VEHICLE