

INSTALLATION


1. INSTALL STEERING COLUMN ASSEMBLY

Install 6 bolts, nut with steering column assembly.

Torque:

Bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

Nut: 21 N·m (210 kgf·cm, 15 ft·lbf)

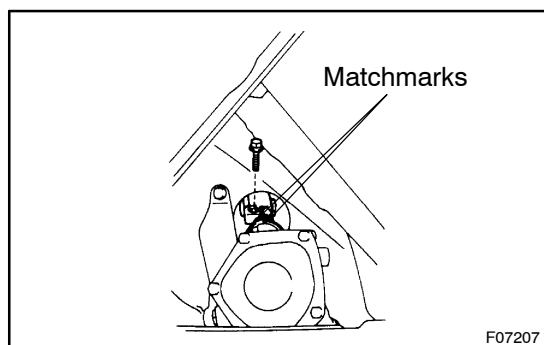

2. CONNECT SLIDING YOKE

- Align the matchmarks on the control valve shaft and sliding yoke.

- Install the bolt.

Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)

3. INSTALL SPIRAL CABLE (See Pub. No. RM670E on page BE-7)

4. INSTALL COMBINATION SWITCH WITH SPIRAL CABLE

- Install the combination switch with 3 screws.
- Connect 3 connectors.
- Connect the airbag connector.

5. INSTALL LOWER RH FINISH PANEL


- Connect the speaker connector.
- Install the lower RH finish panel with the screw.

6. INSTALL FUEL LID OPENER

Install the fuel lid opener with 2 screws.

7. INSTALL UPPER AND LOWER COLUMN COVERS

Install the upper and lower column covers with 3 screws.

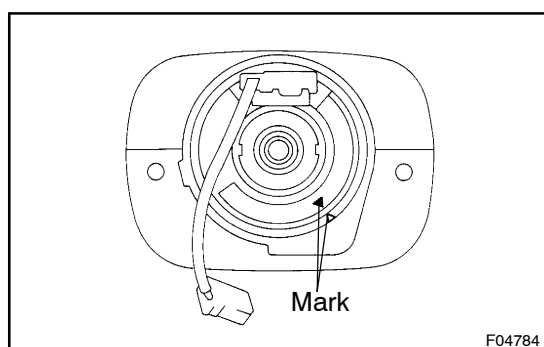

8. CENTER SPIRAL CABLE

- Check that the front wheels are facing straight ahead.
- Turn the cable counterclockwise by hand until it becomes harder to turn the cable.
- Then rotate the cable clockwise about 3 turns to align the mark.

HINT:


The cable will rotate about 3 turns to either left or right of the center.

9. INSTALL STEERING WHEEL

- Align the matchmarks on the steering wheel and main shaft.
- Install the steering wheel and steering wheel set nut.
Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)
- Connect the connector.

10. INSTALL STEERING WHEEL PAD**NOTICE:**

- Make sure the wheel pad is installed to the specified torque.
- If the wheel pad has been dropped, or there are cracks, dents or other defects on the case or connector, replace the wheel pad with a new one.
- When installing the wheel pad, take care that the wirings do not interfere with other parts and are not pinched between other parts.

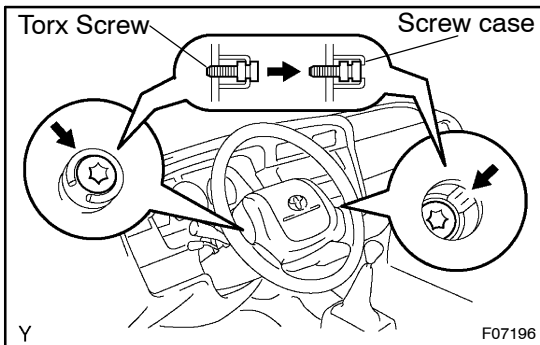

- (a) Connect the airbag connector.
- (b) Install the pad after confirming that the circumference groove of the torx screw is caught on the screw case.
- (c) Using a torx socket wrench (T30), torque 2 screws.

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

- (d) Install 2 steering wheel lower No. 2 covers.

11. CHECK STEERING WHEEL CENTER POINT