


Tc Terminal Circuit

CIRCUIT DESCRIPTION

By connecting terminals Tc and E1 of the check connector the airbag sensor assembly is set in the DTC output mode. The DTCs are displayed by blinking the SRS warning light.

WIRING DIAGRAM


LHD:

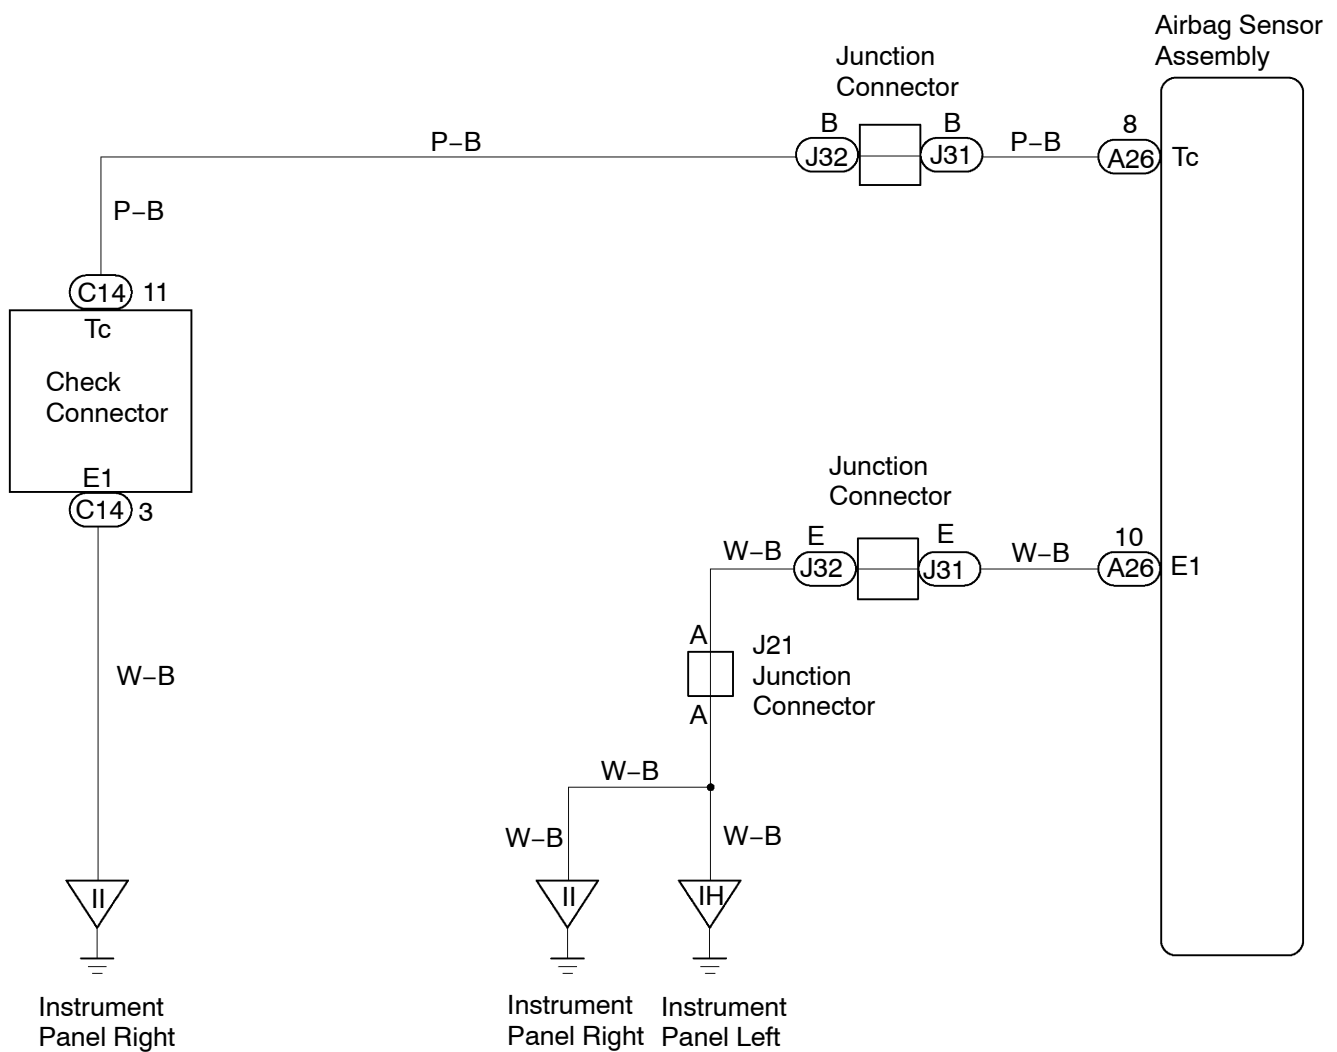

Y

H09700

RHD:

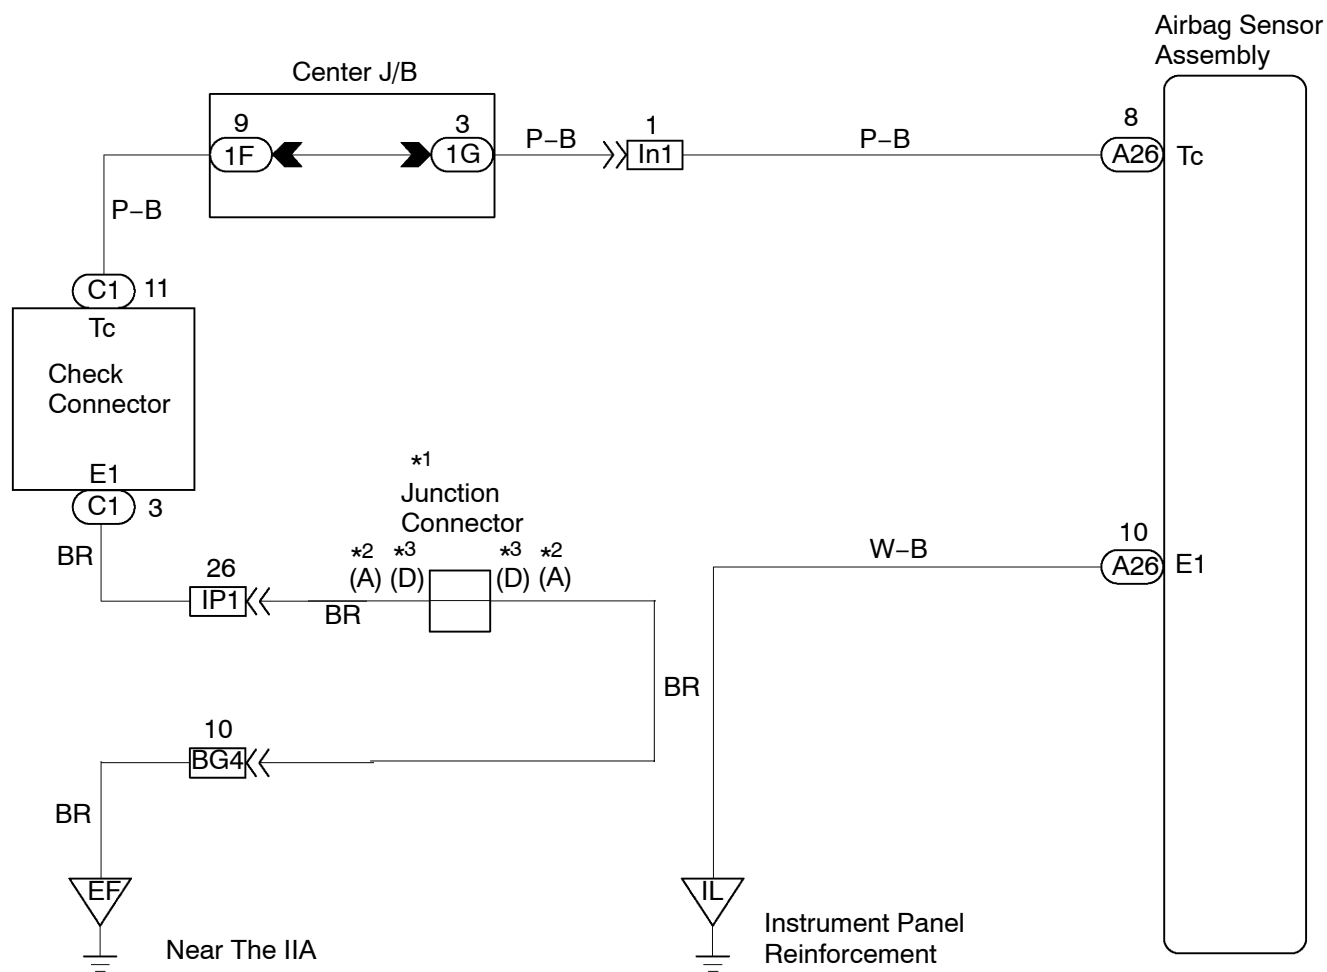

- *1 : J11 (Back Door w/ Stop light Type)
J3 (Back Door w/o Stop light Type)
- *2 : Back Door w/ Stop light Type
- *3 : Back Door w/o Stop light Type


Y

H09710

INSPECTION PROCEDURE

If the DTC is not displayed, do the following troubleshooting.

1 Does SRS warning light up for approx. 6 seconds?

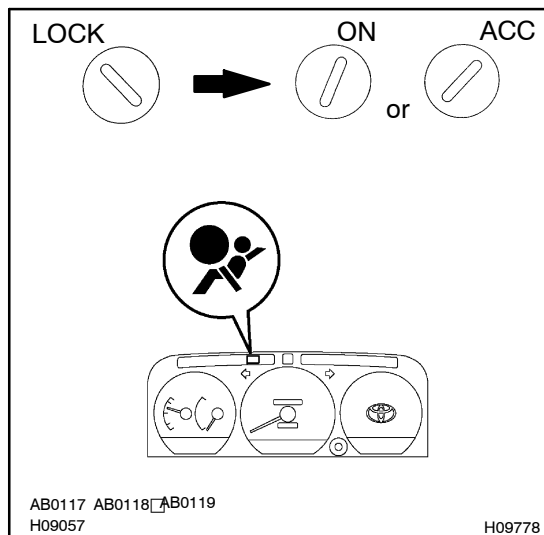**PREPARATION:**


Check operation of the SRS warning light after ignition switch is turned from LOCK position to ACC or ON position.

NO

Check SRS warning light system.
(See page DI-97)

YES

2 Check voltage between terminals Tc and E1 of check connector.

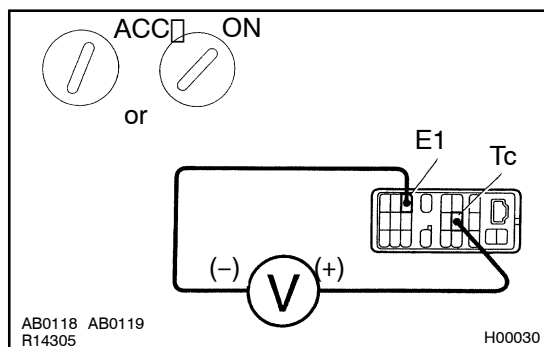**PREPARATION:**

Turn ignition switch to ACC or ON.

CHECK:

Measure the voltage between terminals Tc and E1 of check connector.

OK:


Voltage: 10 – 14 V

OK

Go to step 4.

NG

3 Check voltage between terminals Tc of check connector and body ground

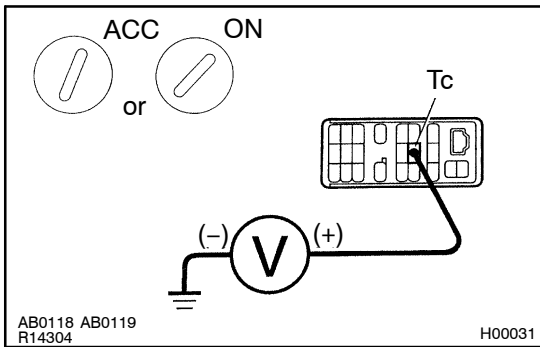**CHECK:**

Measure the voltage between terminal Tc of check connector and body ground.

OK:


Voltage: 10 – 14 V

OK

Check harness between terminal E1 of check connector and body ground.

NG

4 Check airbag sensor assembly.

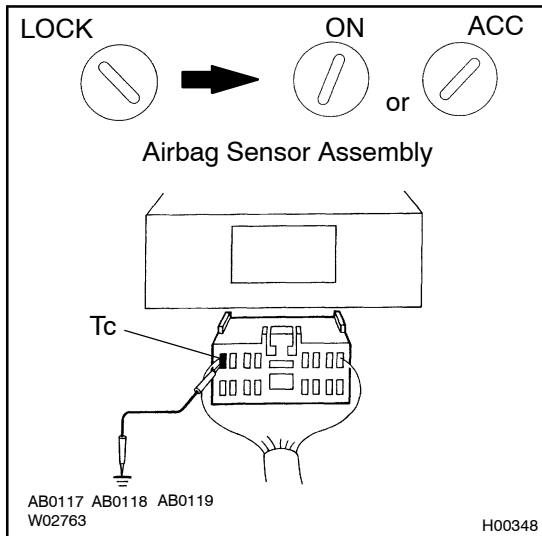

PREPARATION:

- Turn ignition switch to LOCK.
- Disconnect negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the airbag sensor assembly connector.
- Insert service wire into terminal Tc from back side as shown in the illustration.
- Connect the airbag sensor assembly connector with service wire.
- Connect negative (-) terminal cable to the battery.
- Turn ignition switch to ACC or ON and wait at least for 20 seconds.
- Connect service wire of terminal Tc to body ground.

CHECK:

Check operation of SRS warning light.

OK:

SRS warning light comes on.

NOTICE:

Pay enough attention to the terminal connecting position as this causes a malfunction.

OK


Check harness between the airbag sensor assembly and check connector.

NG

Replace airbag sensor assembly.

If the DTC is displayed without a DTC check procedure, perform the following troubleshooting.

- | | |
|----------|--|
| 1 | Check resistance between terminal Tc of airbag sensor assembly and body ground. |
|----------|--|

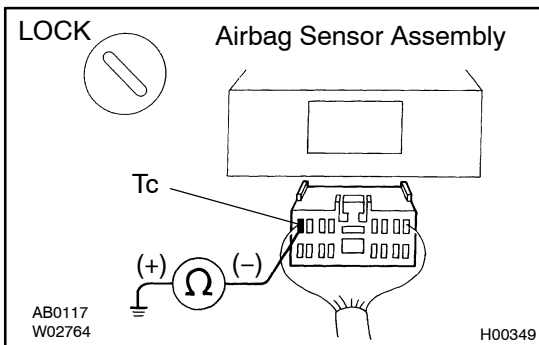

PREPARATION:

- (a) Turn ignition switch to LOCK.
- (b) Disconnect negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Disconnect the airbag sensor assembly connector.

CHECK:

Check resistance between terminal Tc of the airbag sensor assembly connector and body ground.

OK:

Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector.

OK

Replace airbag sensor assembly.