


REPLACEMENT

REPLACE OIL SEAL (INNER SIDE)

- (a) Using SST, remove the oil seal.

SST 09308-00010

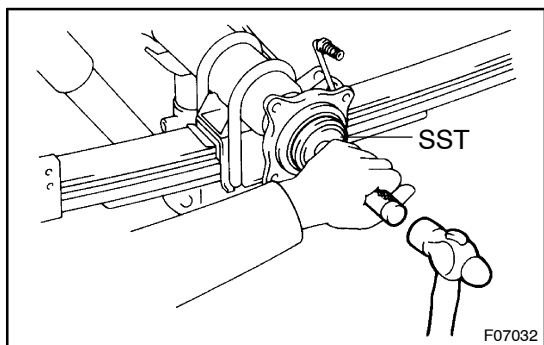

- (b) Coat the lip of a new oil seal with MP grease.
(c) Using SST and a hammer, install a new oil seal.

SST 09950-60020 (09951-00710),
09950-70010 (09951-07150)