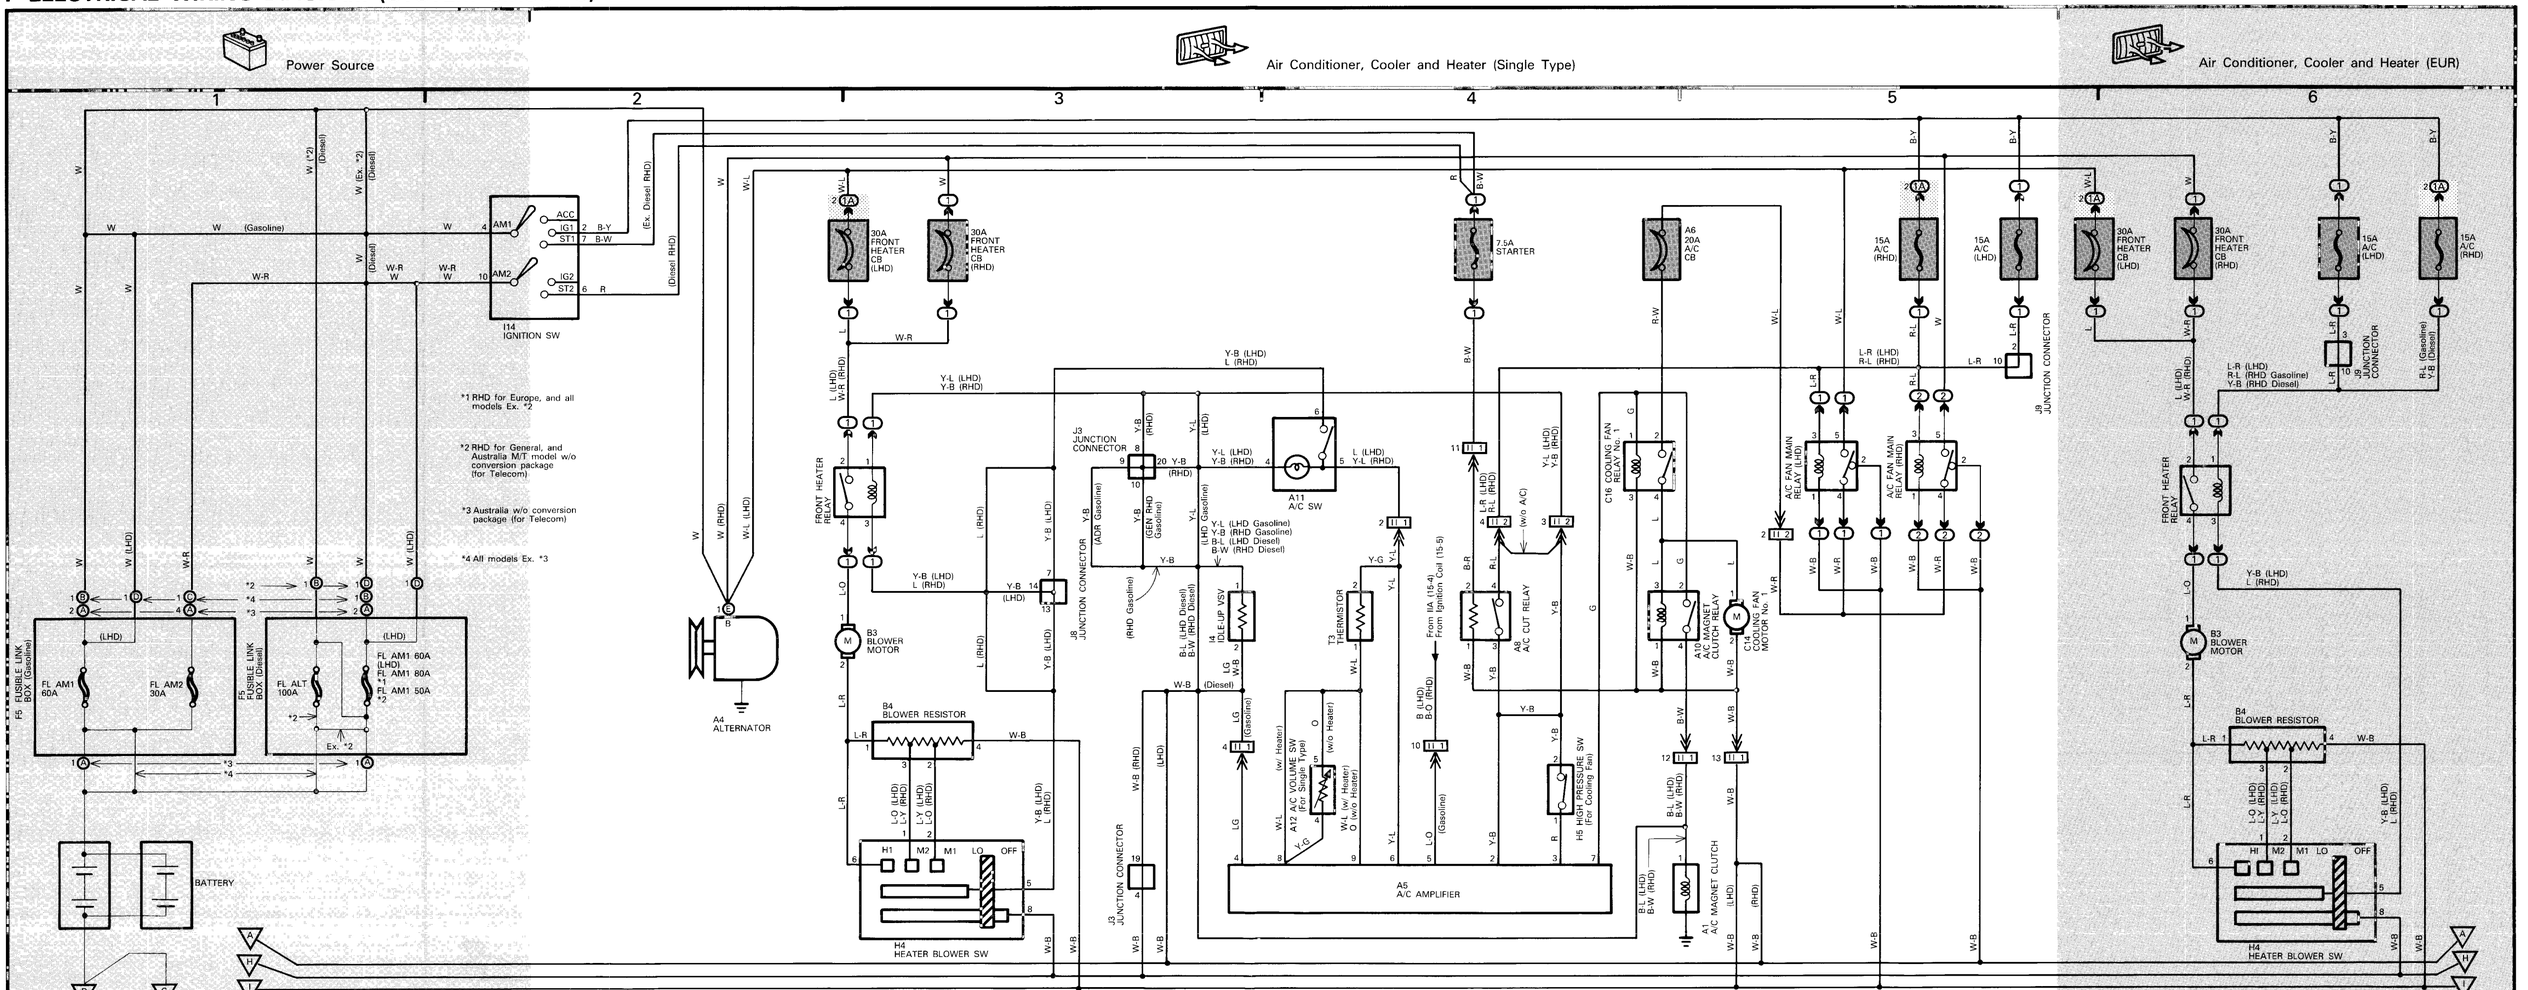
Power Source
Air Conditioner, Cooler and Heater (Single Type)
Air Conditioner, Cooler and Heater (EUR)
I14 IGNITION SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
*1 RHD for Europe, and all models Ex. *2
*2 RHD for General, and Australia M/T model w/o conversion package (for Telecom)
*3 Australia w/o conversion package (for Telecom)
*4 All models Ex. *3
F5 FUSIBLE LINK BOX (Gasoline)
F5 FUSIBLE LINK BOX (Diesel)
FL AM1 60A
FL AM2 30A
FL ALT 100A
FL AM1 60A (LHD)
FL AM1 80A *1
FL AM1 50A *2
BATTERY
A4 ALTERNATOR
30A FRONT HEATER CB (LHD)
30A FRONT HEATER CB (RHD)
7.5A STARTER
A6 20A A/C CB
15A A/C (RHD)
15A A/C (LHD)
J8 JUNCTION CONNECTOR
FRONT HEATER RELAY
B3 BLOWER MOTOR
B4 BLOWER RESISTOR
H4 HEATER BLOWER SW
H1 M2 M1 LO OFF
J3 JUNCTION CONNECTOR
J9 JUNCTION CONNECTOR
A11 A/C SW
A8 A/C CUT RELAY
T3 THERMISTOR
I4 IDLE-UP VSV
From IIA (15-4) From Ignition Coil (15-5)
A12 A/C VOLUME SW (For Single Type)
(w/ Heater)
(w/o Heater)
H5 HIGH PRESSURE SW (For Cooling Fan)
A5 A/C AMPLIFIER
C16 COOLING FAN RELAY No. 2
A10 A/C MAGNET CLUTCH RELAY
C14 COOLING FAN MOTOR No. 1
A/C FAN MAIN RELAY (LHD)
A/C FAN MAIN RELAY (RHD)
A1 A/C MAGNET CLUTCH
Ground points
Point à terre
Erdschußpunkt
Punto de conexión con tierra
A = Located in fender apron near manifold
= Monté dans le tablier d'aile près du collecteur
= Angebracht am Vordern Radkasten nahe am Ansaugkrummer
= Situado en el faldón del guardabarros cerca del múltiple
B = Located on engine block
= Monté sur le bloc-moteur
= Angebracht auf dem Motor
= Situado en el bloque motor
C = Located on left side member
= Monté sur le côté gauche du longeron
= Angebracht an der linken Seite der Kreuzstrebe
= Situado en el lado izquierdo del travesaño
H = Located on instrument panel left (LHD)
= Monté à gauche du tableau de bord (LHD)
= Angebracht an dem linken Teil der instrumententafel (LHD)
= Situado al lado derecho del tablero de instrumentos (LHD)
I = Located on instrument panel right (LHD)
= Monté sur le côte droit du tableau de bord (LHD)
= Angebracht an der richten Seite des instrumentenbretts (LHD)
= Situado en el lado izquierdo del panel instrumental (LHD)