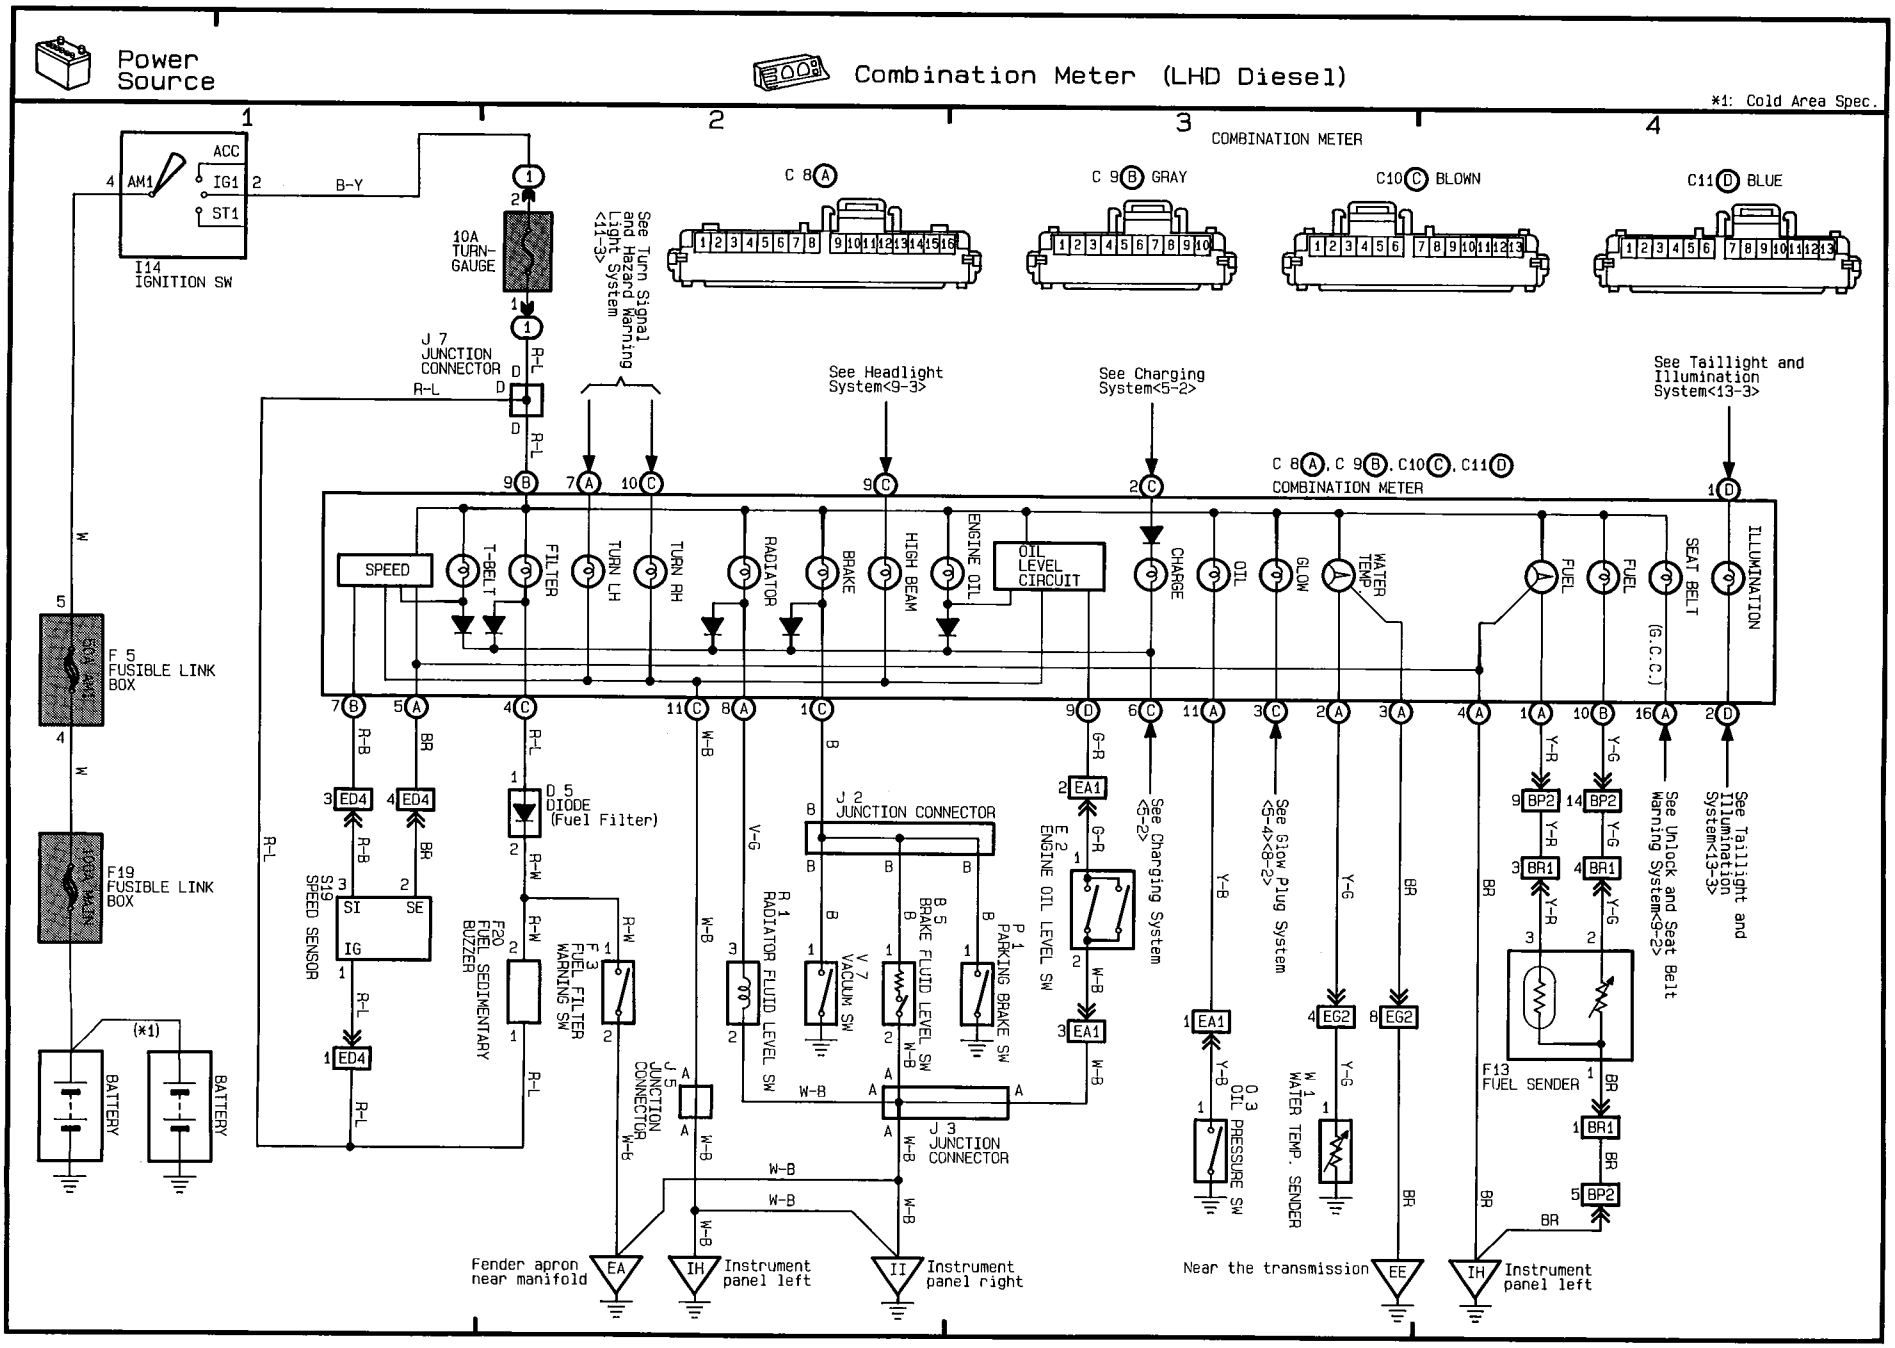
Power Source
Combination Meter (LHD Diesel)
*1: Cold Area Spec.
COMBINATION METER
C 8 (A)
C 9 (B) GRAY
C10 (C) BLOWN
C11 (D) BLUE
I14 IGNITION SW
ACC
IG1
ST1
AM1
B-Y
10A TURN-GAUGE
J 7 JUNCTION CONNECTOR
See Turn Signal and Hazard Warning Light System <11-3>
See Headlight System<9-3>
See Charging System<5-2>
See Taillight and Illumination System<13-3>
C 8 (A), C 9 (B), C10 (C), C11 (D) COMBINATION METER
SPEED
T-BELT
FILTER
TURN LH
TURN RH
RADIATOR
BRAKE
HIGH BEAM
ENGINE OIL
OIL LEVEL CIRCUIT
CHARGE
OIL
GLOW
WATER TEMP.
FUEL
FUEL
SEAT BELT (G.C.C.)
ILLUMINATION
F 5 FUSIBLE LINK BOX
F19 FUSIBLE LINK BOX
(*1)
BATTERY
BATTERY
S19 SPEED SENSOR
F20 FUEL SEDIMENTARY BUZZER
F 3 FUEL FILTER WARNING SW
D 5 DIODE (Fuel Filter)
J 5 JUNCTION CONNECTOR
R 1 RADIATOR FLUID LEVEL SW
V 7 VACUUM SW
B 5 BRAKE FLUID LEVEL SW
P 1 PARKING BRAKE SW
J 2 JUNCTION CONNECTOR
E 2 ENGINE OIL LEVEL SW
J 3 JUNCTION CONNECTOR
O 3 OIL PRESSURE SW
W 1 WATER TEMP. SENDER
F13 FUEL SENDER
See Charging System <3-2>
See Glow Plug System <3-4><9-2>
See Unlock and Seat Belt Warning System<9-2>
See Taillight and Illumination System<13-3>
Fender apron near manifold
Instrument panel left
Instrument panel right
Near the transmission
Instrument panel left