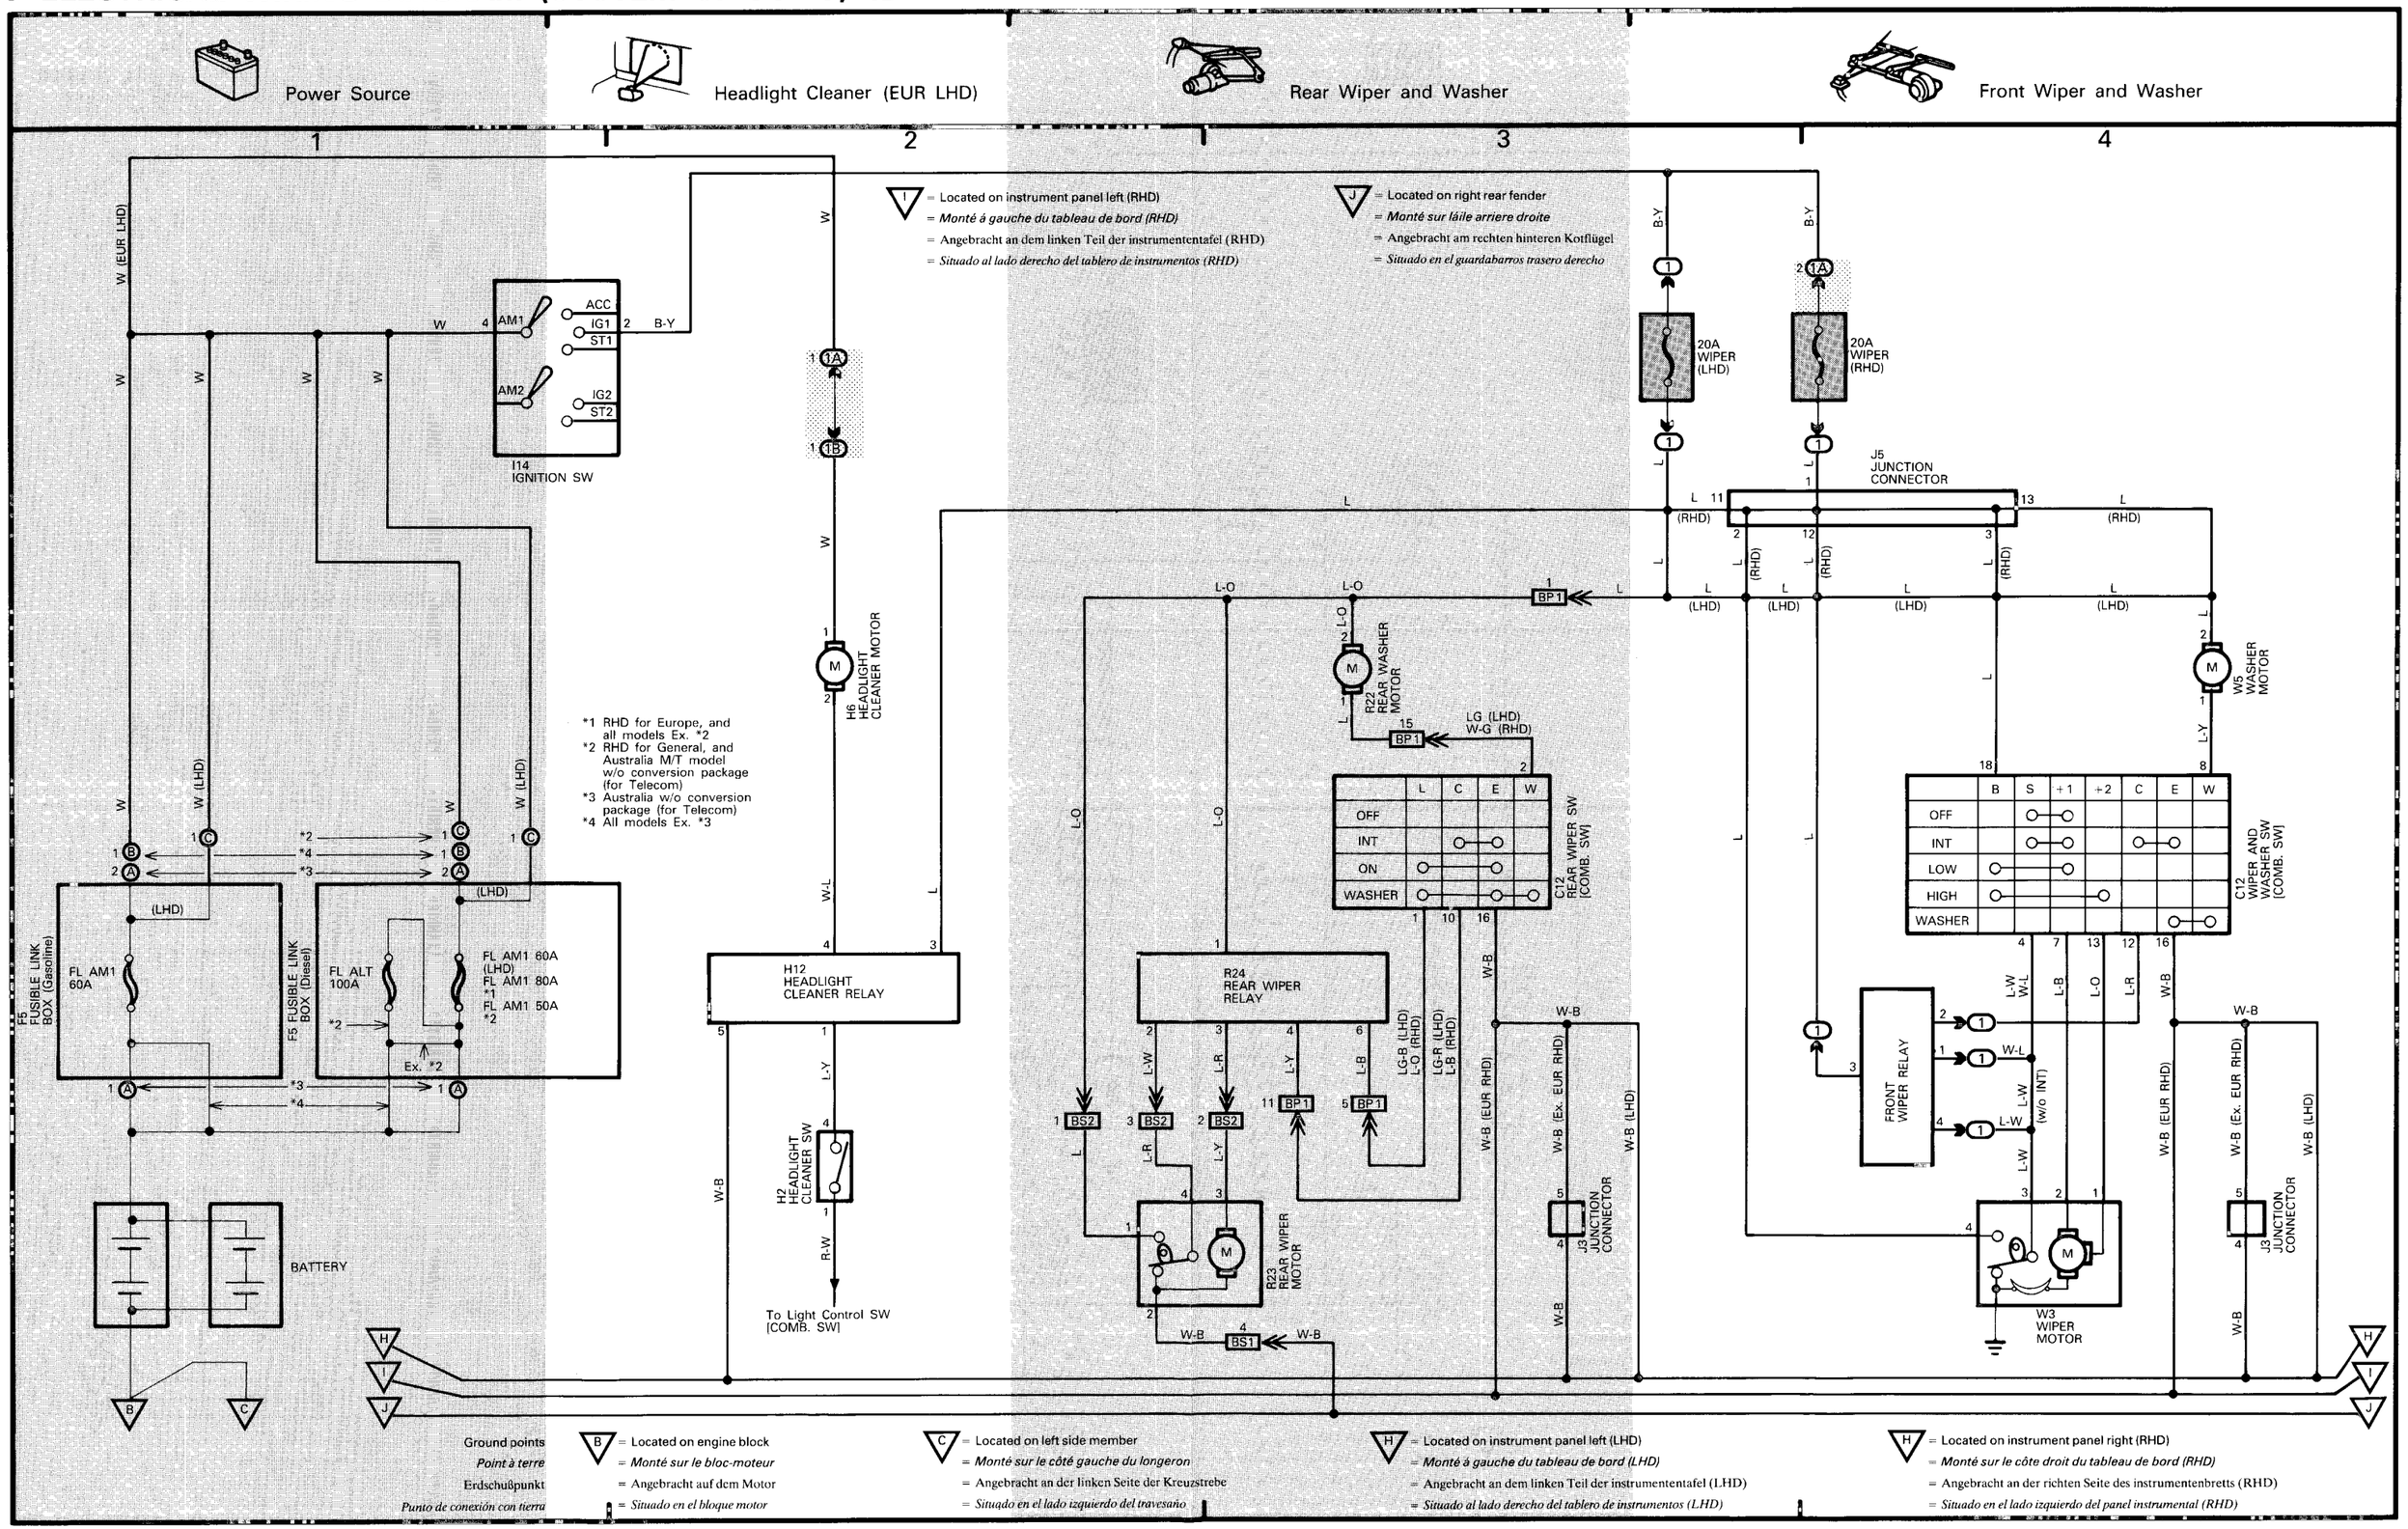
Power Source
Headlight Cleaner (EUR LHD)
Rear Wiper and Washer
Front Wiper and Washer
1
2
3
4
I = Located on instrument panel left (RHD)
= Monté á gauche du tableau de bord (RHD)
= Angebracht an dem linken Teil der instrumententafel (RHD)
= Situado al lado derecho del tablero de instrumentos (RHD)
J = Located on right rear fender
= Monté sur láile arriere droite
= Angebracht am rechten hinteren Kotflügel
= Situado en el guardabarros trasero derecho
W (EUR LHD)
AM1
AM2
ACC
IG1
ST1
IG2
ST2
I14
IGNITION SW
1A
1B
H6
HEADLIGHT
CLEANER MOTOR
*1 RHD for Europe, and all models Ex. *2
*2 RHD for General, and Australia M/T model w/o conversion package (for Telecom)
*3 Australia w/o conversion package (for Telecom)
*4 All models Ex. *3
F5 FUSIBLE LINK BOX (Gasoline)
F5 FUSIBLE LINK BOX (Diesel)
FL AM1 60A
FL ALT 100A
FL AM1 60A (LHD)
FL AM1 80A *1
FL AM1 50A *2
Ex. *2
BATTERY
H12
HEADLIGHT
CLEANER RELAY
H2
HEADLIGHT
CLEANER SW
To Light Control SW
[COMB. SW]
20A
WIPER
(LHD)
20A
WIPER
(RHD)
J5
JUNCTION
CONNECTOR
R22
REAR WASHER
MOTOR
LG (LHD)
W-G (RHD)
OFF
INT
ON
WASHER
C12
REAR WIPER SW
[COMB. SW]
R24
REAR WIPER
RELAY
R23
REAR WIPER
MOTOR
J3
JUNCTION
CONNECTOR
W5
WASHER
MOTOR
OFF
INT
LOW
HIGH
WASHER
C12
WIPER AND
WASHER SW
[COMB. SW]
FRONT
WIPER RELAY
W3
WIPER
MOTOR
Ground points
Point à terre
Erdschußpunkt
Punto de conexión con tierra
B = Located on engine block
= Monté sur le bloc-moteur
= Angebracht auf dem Motor
= Situado en el bloque motor
C = Located on left side member
= Monté sur le côté gauche du longeron
= Angebracht an der linken Seite der Kreuzstrebe
= Situado en el lado izquierdo del travesaño
H = Located on instrument panel left (LHD)
= Monté à gauche du tableau de bord (LHD)
= Angebracht an dem linken Teil der instrumententafel (LHD)
= Situado al lado derecho del tablero de instrumentos (LHD)
H = Located on instrument panel right (RHD)
= Monté sur le côte droit du tableau de bord (RHD)
= Angebracht an der richten Seite des instrumentenbretts (RHD)
= Situado en el lado izquierdo del panel instrumental (RHD)