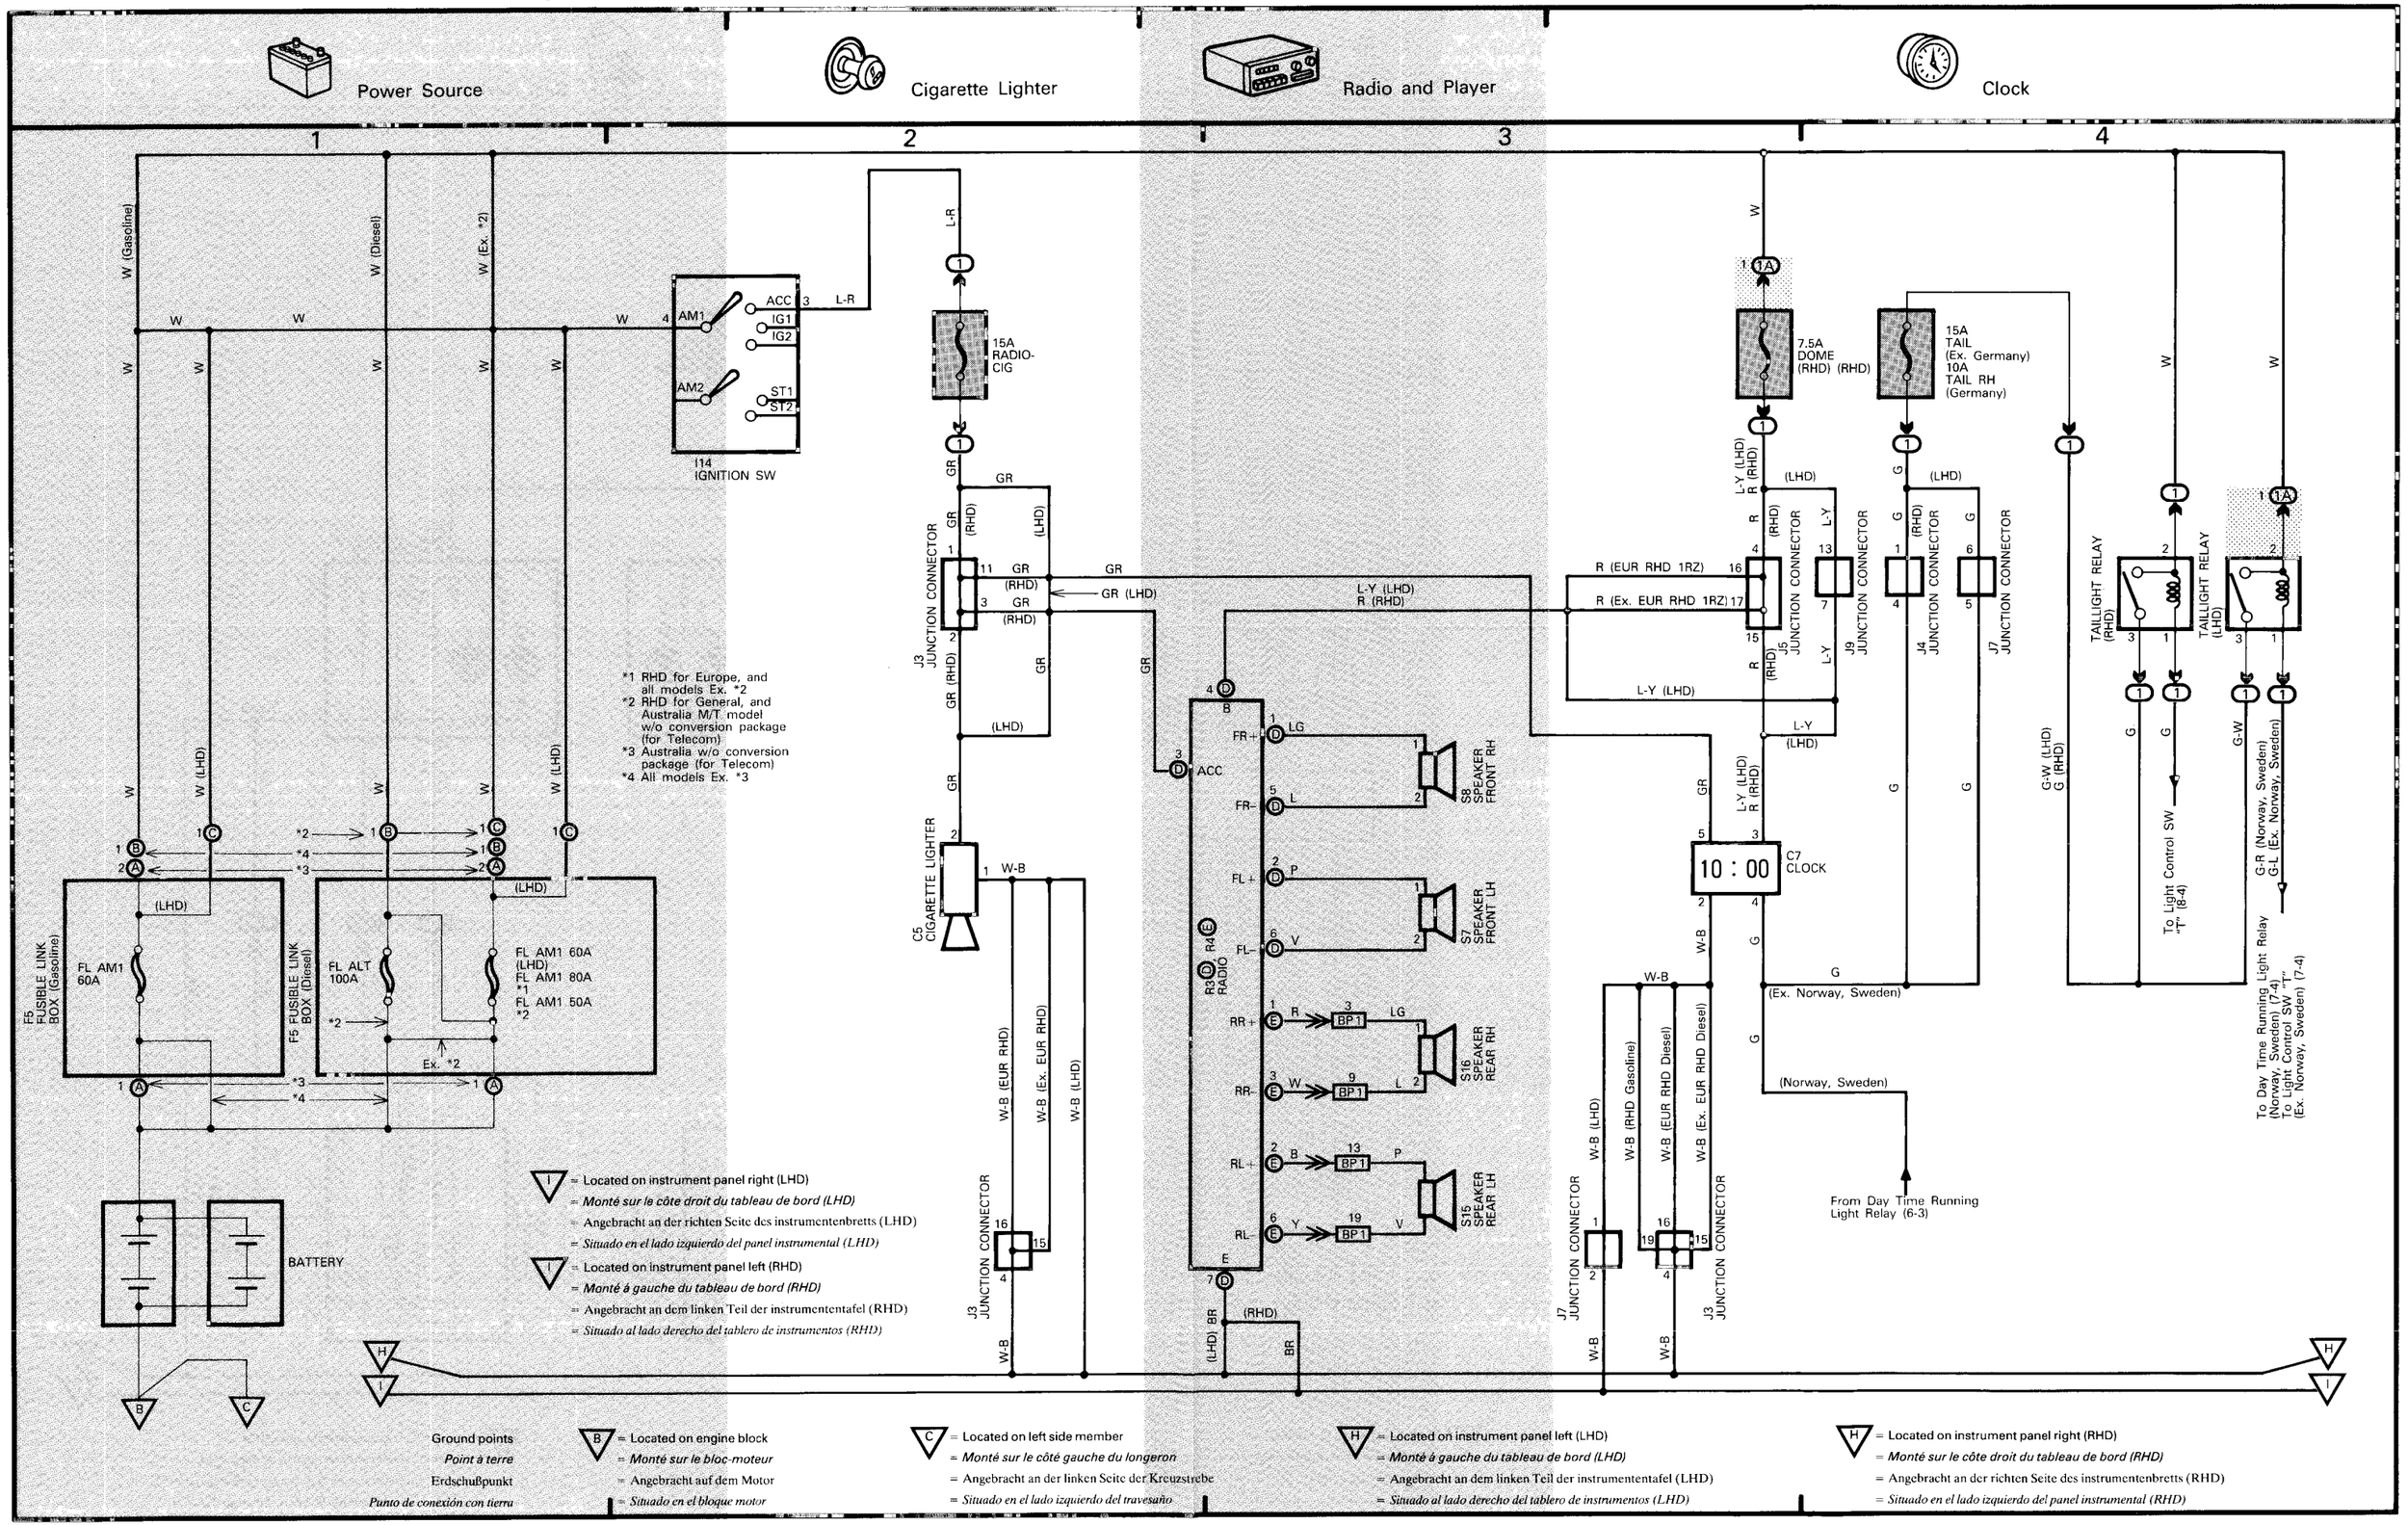
Power Source
Cigarette Lighter
Radio and Player
Clock
1
2
3
4
W (Gasoline)
W (Diesel)
W (Ex. *2)
W (LHD)
AM1
AM2
ACC
IG1
IG2
ST1
ST2
I14
IGNITION SW
L-R
15A
RADIO-
CIG
GR
J3
JUNCTION CONNECTOR
(RHD)
(LHD)
GR (LHD)
C5
CIGARETTE LIGHTER
W-B
*1 RHD for Europe, and all models Ex. *2
*2 RHD for General, and Australia M/T model w/o conversion package (for Telecom)
*3 Australia w/o conversion package (for Telecom)
*4 All models Ex. *3
F5
FUSIBLE LINK BOX (Gasoline)
F5 FUSIBLE LINK BOX (Diesel)
FL AM1 60A
FL ALT 100A
FL AM1 60A (LHD)
FL AM1 80A *1
FL AM1 50A *2
Ex. *2
BATTERY
W-B (EUR RHD)
W-B (Ex. EUR RHD)
W-B (LHD)
L-Y (LHD)
R (RHD)
R (EUR RHD 1RZ)
R (Ex. EUR RHD 1RZ)
J5
JUNCTION CONNECTOR
J9
JUNCTION CONNECTOR
J4
JUNCTION CONNECTOR
J7
JUNCTION CONNECTOR
7.5A
DOME
(RHD) (RHD)
15A
TAIL
(Ex. Germany)
10A
TAIL RH
(Germany)
TAILLIGHT RELAY (RHD)
TAILLIGHT RELAY (LHD)
G-W (LHD)
G (RHD)
To Light Control SW "T" (8-4)
G-W (Norway, Sweden)
G-L (Ex. Norway, Sweden)
To Day Time Running Light Relay (Norway, Sweden) (7-4)
To Light Control SW "T" (Ex. Norway, Sweden) (7-4)
C7
CLOCK
10 : 00
G
(Ex. Norway, Sweden)
(Norway, Sweden)
From Day Time Running Light Relay (6-3)
W-B (RHD Gasoline)
W-B (EUR RHD Diesel)
W-B (Ex. EUR RHD Diesel)
R3
RADIO
R4
S8
SPEAKER FRONT RH
S7
SPEAKER FRONT LH
S16
SPEAKER REAR RH
S15
SPEAKER REAR LH
FR+
FR-
FL+
FL-
RR+
RR-
RL+
RL-
BP1
(LHD) BR
BR
= Located on instrument panel right (LHD)
= Monté sur le côte droit du tableau de bord (LHD)
= Angebracht an der richten Seite des instrumentenbretts (LHD)
= Situado en el lado izquierdo del panel instrumental (LHD)
= Located on instrument panel left (RHD)
= Monté à gauche du tableau de bord (RHD)
= Angebracht an dem linken Teil der instrumententafel (RHD)
= Situado al lado derecho del tablero de instrumentos (RHD)
Ground points
Point à terre
Erdschußpunkt
Punto de conexión con tierra
= Located on engine block
= Monté sur le bloc-moteur
= Angebracht auf dem Motor
= Situado en el bloque motor
= Located on left side member
= Monté sur le côté gauche du longeron
= Angebracht an der linken Seite der Kreuzstrebe
= Situado en el lado izquierdo del travesaño
= Located on instrument panel left (LHD)
= Monté à gauche du tableau de bord (LHD)
= Angebracht an dem linken Teil der instrumententafel (LHD)
= Situado al lado derecho del tablero de instrumentos (LHD)
= Located on instrument panel right (RHD)
= Monté sur le côte droit du tableau de bord (RHD)
= Angebracht an der richten Seite des instrumentenbretts (RHD)
= Situado en el lado izquierdo del panel instrumental (RHD)