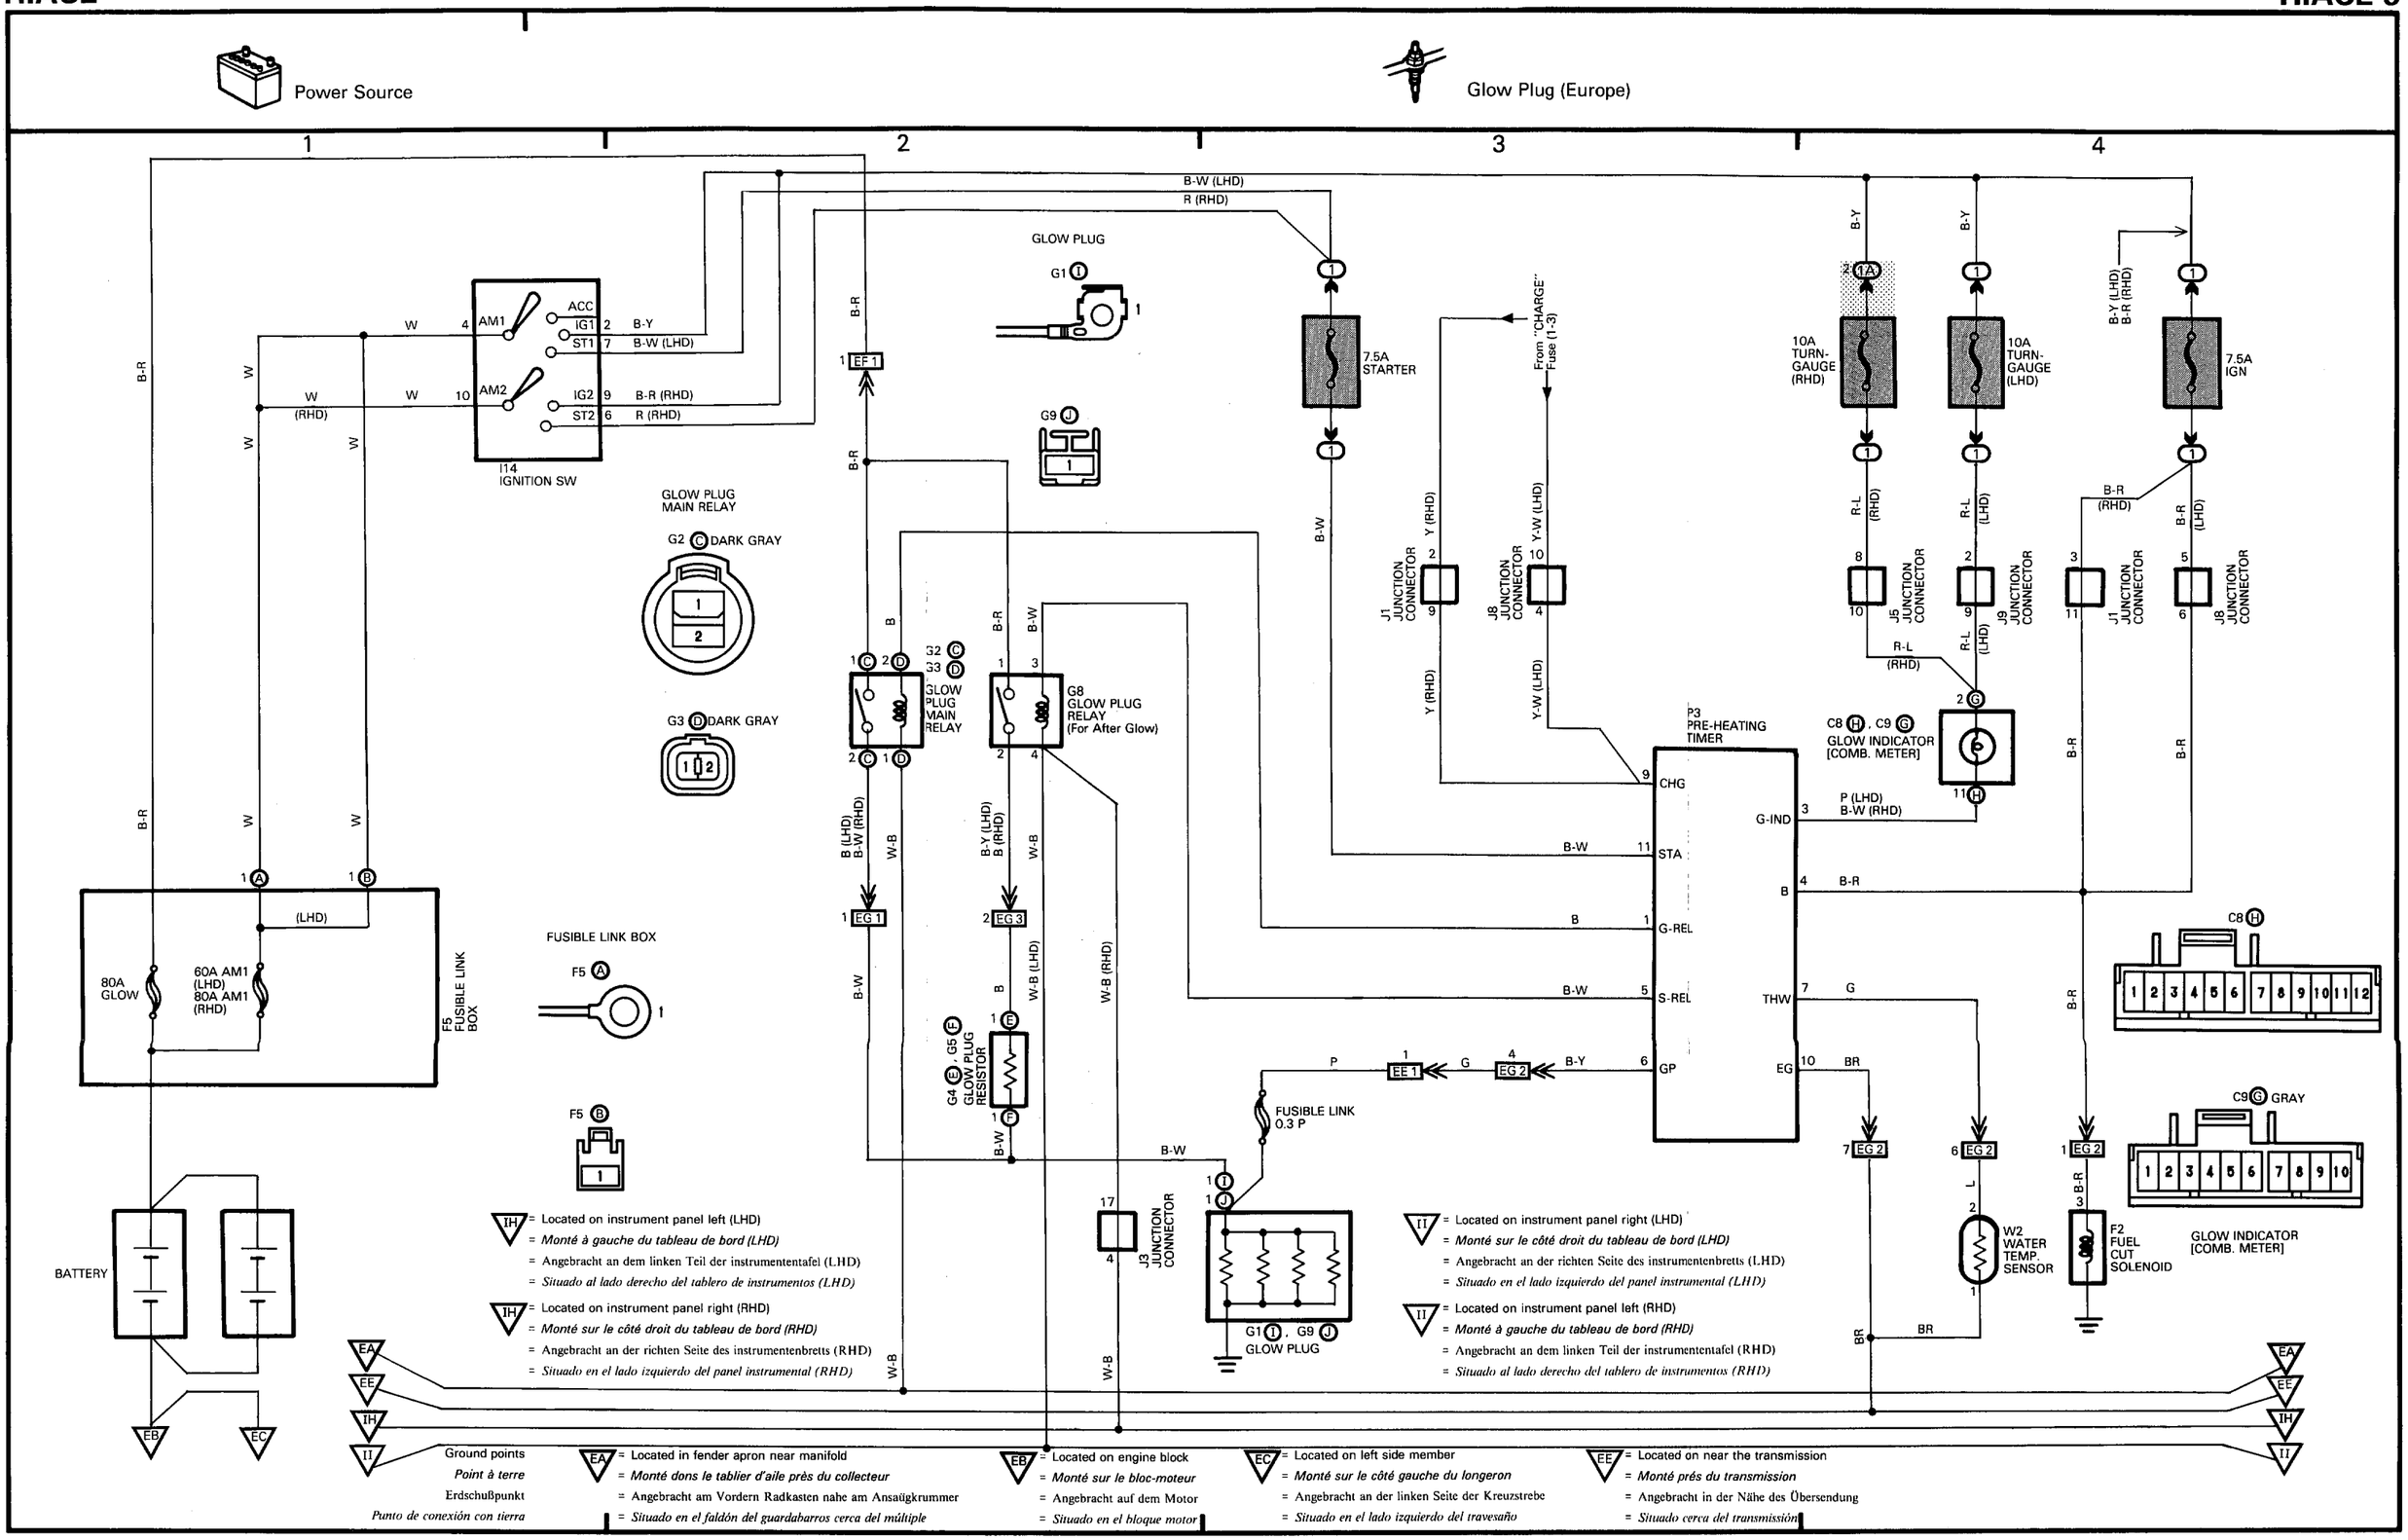
Power Source
Glow Plug (Europe)
1
2
3
4
B-W (LHD)
R (RHD)
GLOW PLUG
G1 I
G9 J
I14
IGNITION SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
B-Y
B-W (LHD)
B-R (RHD)
R (RHD)
GLOW PLUG
MAIN RELAY
G2 C DARK GRAY
G3 D DARK GRAY
EF 1
G2 C
G3 D
GLOW
PLUG
MAIN
RELAY
G8
GLOW PLUG
RELAY
(For After Glow)
EG 1
EG 3
G4 E, G5 E
GLOW PLUG
RESISTOR
7.5A
STARTER
From "CHARGE" Fuse (1-3)
J1
JUNCTION
CONNECTOR
J8
JUNCTION
CONNECTOR
10A
TURN-
GAUGE
(RHD)
10A
TURN-
GAUGE
(LHD)
B-Y (LHD)
B-R (RHD)
7.5A
IGN
J5
JUNCTION
CONNECTOR
J9
JUNCTION
CONNECTOR
P3
PRE-HEATING
TIMER
CHG
G-IND
STA
G-REL
S-REL
GP
THW
EG
C8 H, C9 G
GLOW INDICATOR
[COMB. METER]
P (LHD)
B-W (RHD)
C8 H
C9 G GRAY
80A
GLOW
60A AM1
(LHD)
80A AM1
(RHD)
F5
FUSIBLE LINK
BOX
FUSIBLE LINK BOX
F5 A
F5 B
BATTERY
EB
EC
EA
EE
IH
II
FUSIBLE LINK
0.3 P
EE 1
EG 2
J3
JUNCTION
CONNECTOR
G1 I, G9 J
GLOW PLUG
W2
WATER
TEMP.
SENSOR
F2
FUEL
CUT
SOLENOID
GLOW INDICATOR
[COMB. METER]
IH = Located on instrument panel left (LHD)
= Monté à gauche du tableau de bord (LHD)
= Angebracht an dem linken Teil der instrumententafel (LHD)
= Situado al lado derecho del tablero de instrumentos (LHD)
IH = Located on instrument panel right (RHD)
= Monté sur le côté droit du tableau de bord (RHD)
= Angebracht an der richten Seite des instrumentenbretts (RHD)
= Situado en el lado izquierdo del panel instrumental (RHD)
II = Located on instrument panel right (LHD)
= Monté sur le côté droit du tableau de bord (LHD)
= Angebracht an der richten Seite des instrumentenbretts (LHD)
= Situado en el lado izquierdo del panel instrumental (LHD)
II = Located on instrument panel left (RHD)
= Monté à gauche du tableau de bord (RHD)
= Angebracht an dem linken Teil der instrumententafel (RHD)
= Situado al lado derecho del tablero de instrumentos (RHD)
Ground points
Point à terre
Erdschußpunkt
Punto de conexión con tierra
EA = Located in fender apron near manifold
= Monté dons le tablier d'aile près du collecteur
= Angebracht am Vordern Radkasten nahe am Ansaügkrummer
= Situado en el faldón del guardabarros cerca del múltiple
EB = Located on engine block
= Monté sur le bloc-moteur
= Angebracht auf dem Motor
= Situado en el bloque motor
EC = Located on left side member
= Monté sur le côté gauche du longeron
= Angebracht an der linken Seite der Kreuzstrebe
= Situado en el lado izquierdo del travesaño
EE = Located on near the transmission
= Monté prés du transmission
= Angebracht in der Nähe des Übersendung
= Situado cerca del transmisión