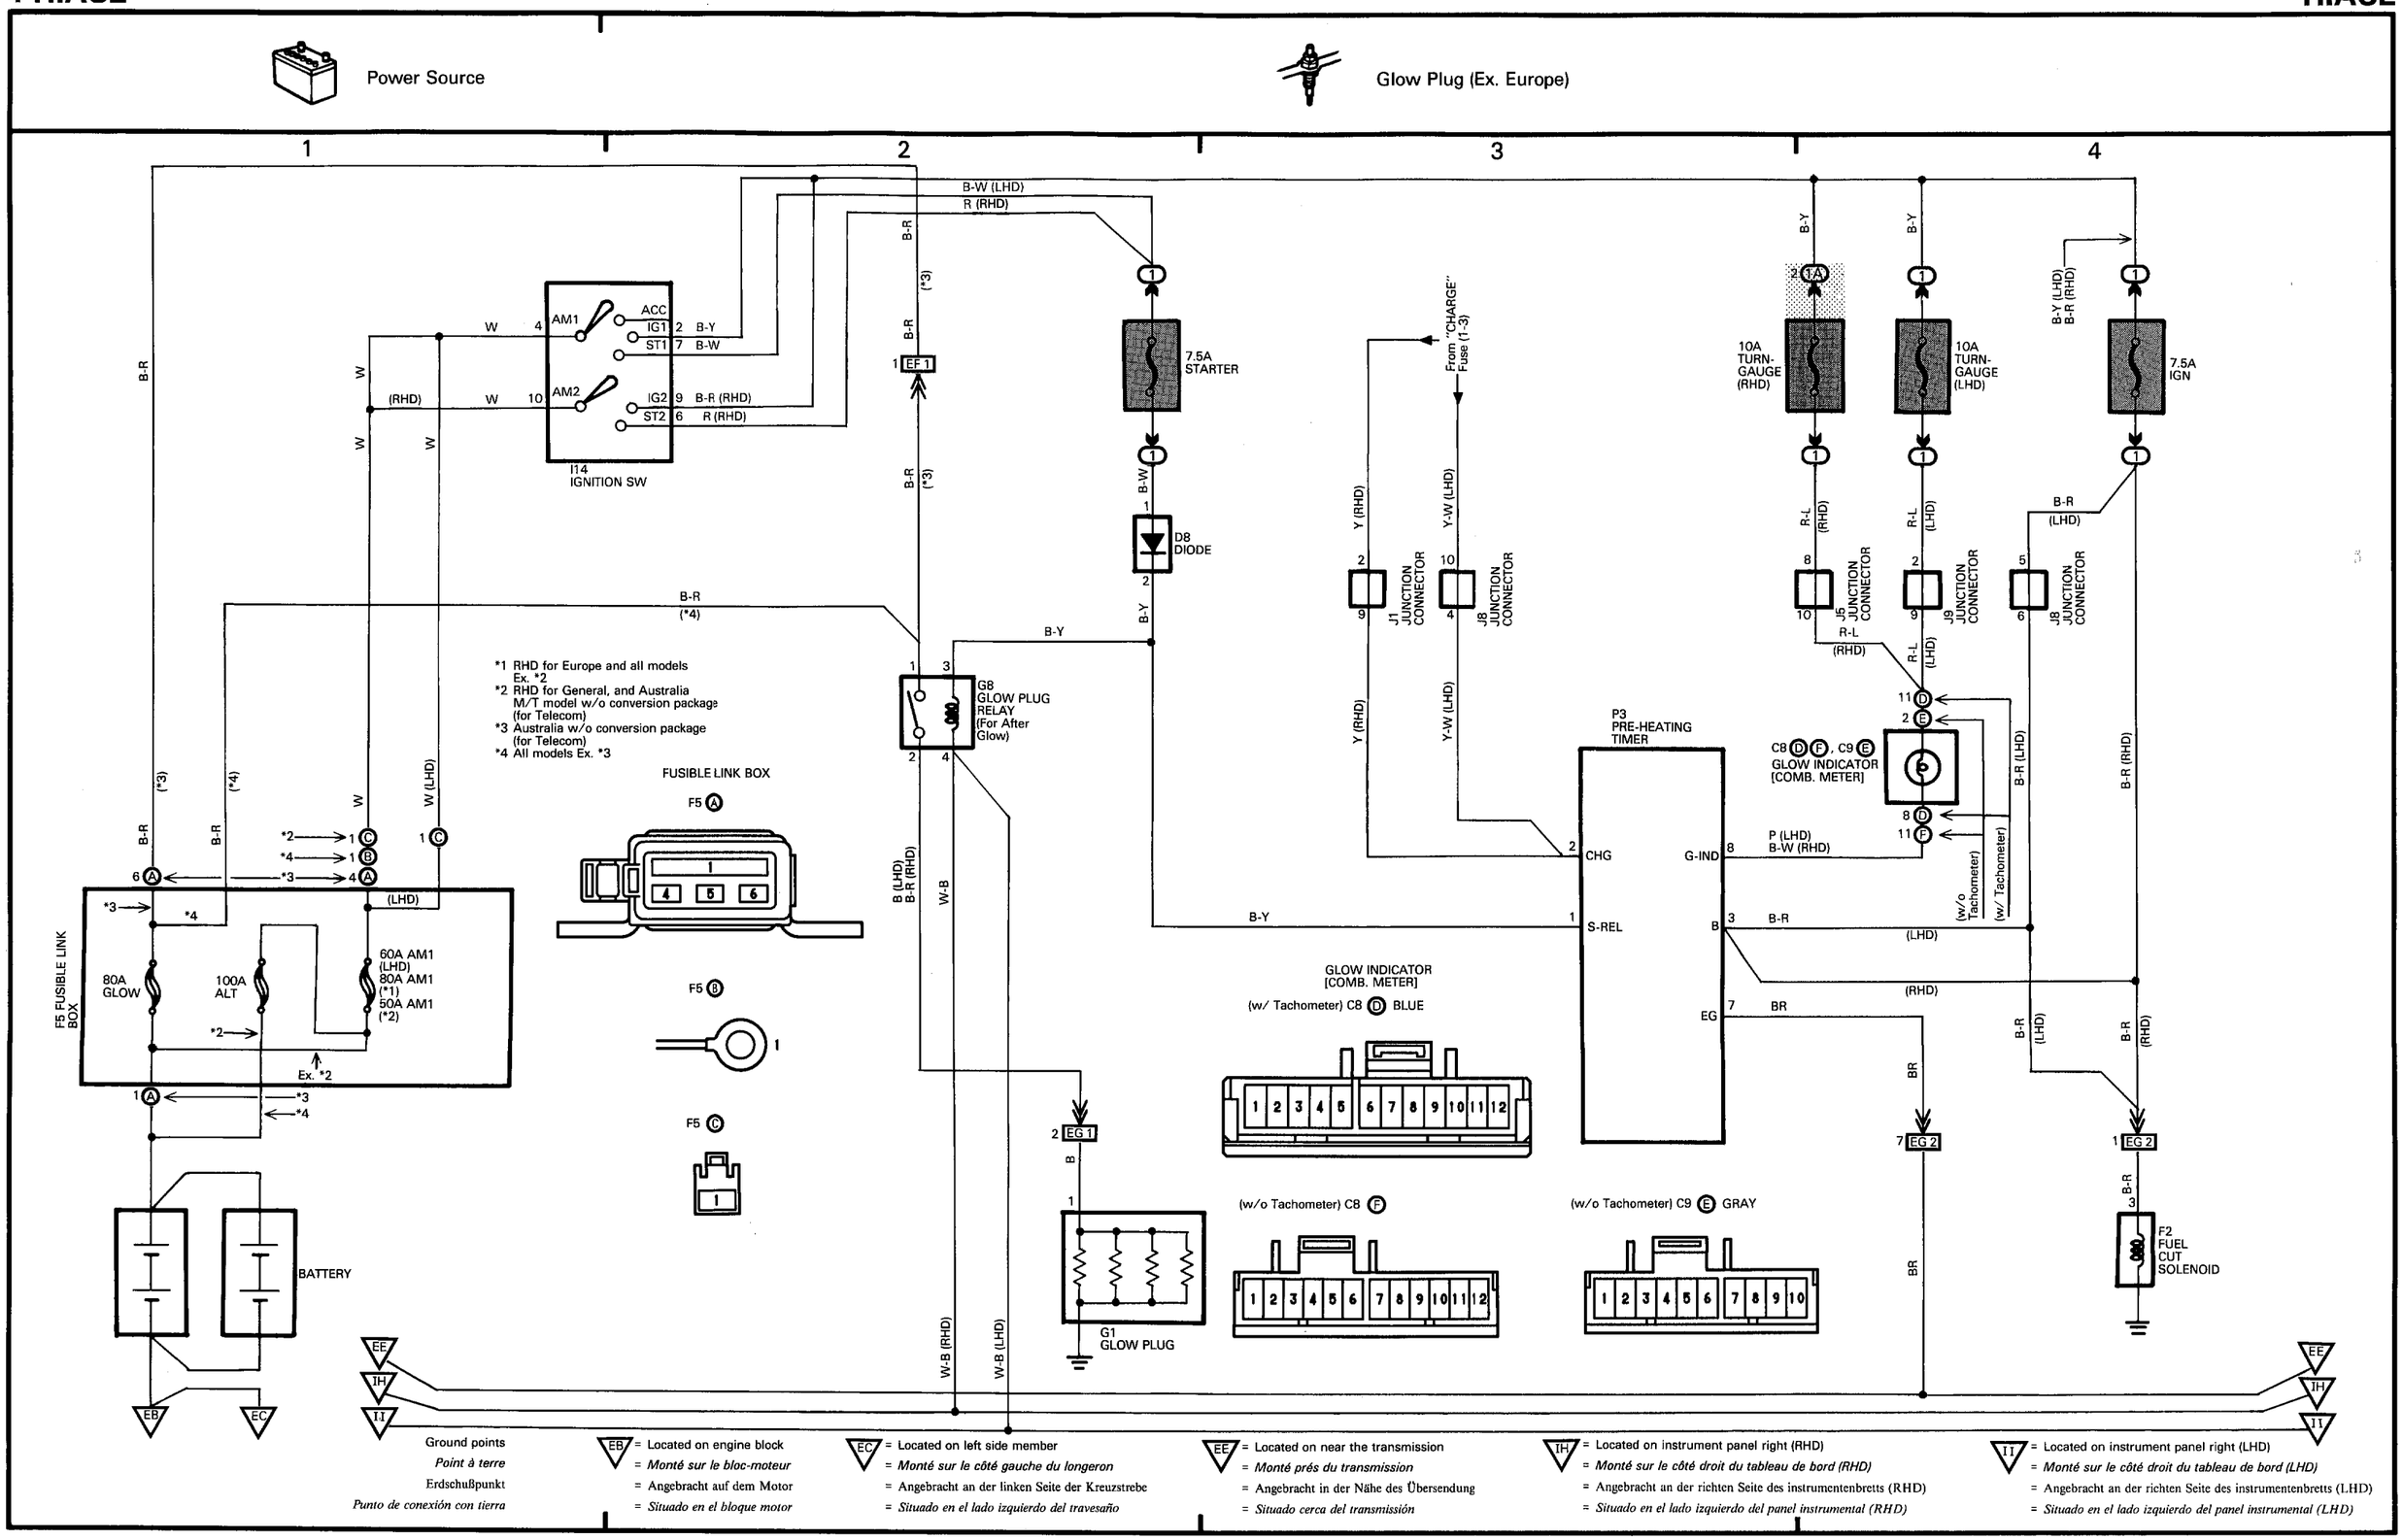
Power Source
Glow Plug (Ex. Europe)
1
2
3
4
I14 IGNITION SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
B-Y
B-W
B-R (RHD)
R (RHD)
B-W (LHD)
R (RHD)
EF 1
7.5A STARTER
D8 DIODE
G8 GLOW PLUG RELAY (For After Glow)
*1 RHD for Europe and all models Ex. *2
*2 RHD for General, and Australia M/T model w/o conversion package (for Telecom)
*3 Australia w/o conversion package (for Telecom)
*4 All models Ex. *3
FUSIBLE LINK BOX
F5 A
F5 B
F5 C
F5 FUSIBLE LINK BOX
80A GLOW
100A ALT
60A AM1 (LHD)
80A AM1 (*1)
50A AM1 (*2)
Ex. *2
BATTERY
From "CHARGE" Fuse (1-3)
J1 JUNCTION CONNECTOR
J8 JUNCTION CONNECTOR
J5 JUNCTION CONNECTOR
J9 JUNCTION CONNECTOR
10A TURN-GAUGE (RHD)
10A TURN-GAUGE (LHD)
7.5A IGN
P3 PRE-HEATING TIMER
CHG
S-REL
G-IND
C8 D F, C9 E GLOW INDICATOR [COMB. METER]
P (LHD) B-W (RHD)
(w/o Tachometer)
(w/ Tachometer)
GLOW INDICATOR [COMB. METER]
(w/ Tachometer) C8 D BLUE
(w/o Tachometer) C8 F
(w/o Tachometer) C9 E GRAY
EG 1
EG 2
G1 GLOW PLUG
F2 FUEL CUT SOLENOID
EE
IH
II
EB
EC
Ground points
Point à terre
Erdschußpunkt
Punto de conexión con tierra
EB = Located on engine block
= Monté sur le bloc-moteur
= Angebracht auf dem Motor
= Situado en el bloque motor
EC = Located on left side member
= Monté sur le côté gauche du longeron
= Angebracht an der linken Seite der Kreuzstrebe
= Situado en el lado izquierdo del travesaño
EE = Located on near the transmission
= Monté prés du transmission
= Angebracht in der Nähe des Übersendung
= Situado cerca del transmisión
IH = Located on instrument panel right (RHD)
= Monté sur le côté droit du tableau de bord (RHD)
= Angebracht an der richten Seite des instrumentenbretts (RHD)
= Situado en el lado izquierdo del panel instrumental (RHD)
II = Located on instrument panel right (LHD)
= Monté sur le côté droit du tableau de bord (LHD)
= Angebracht an der richten Seite des instrumentenbretts (LHD)
= Situado en el lado izquierdo del panel instrumental (LHD)