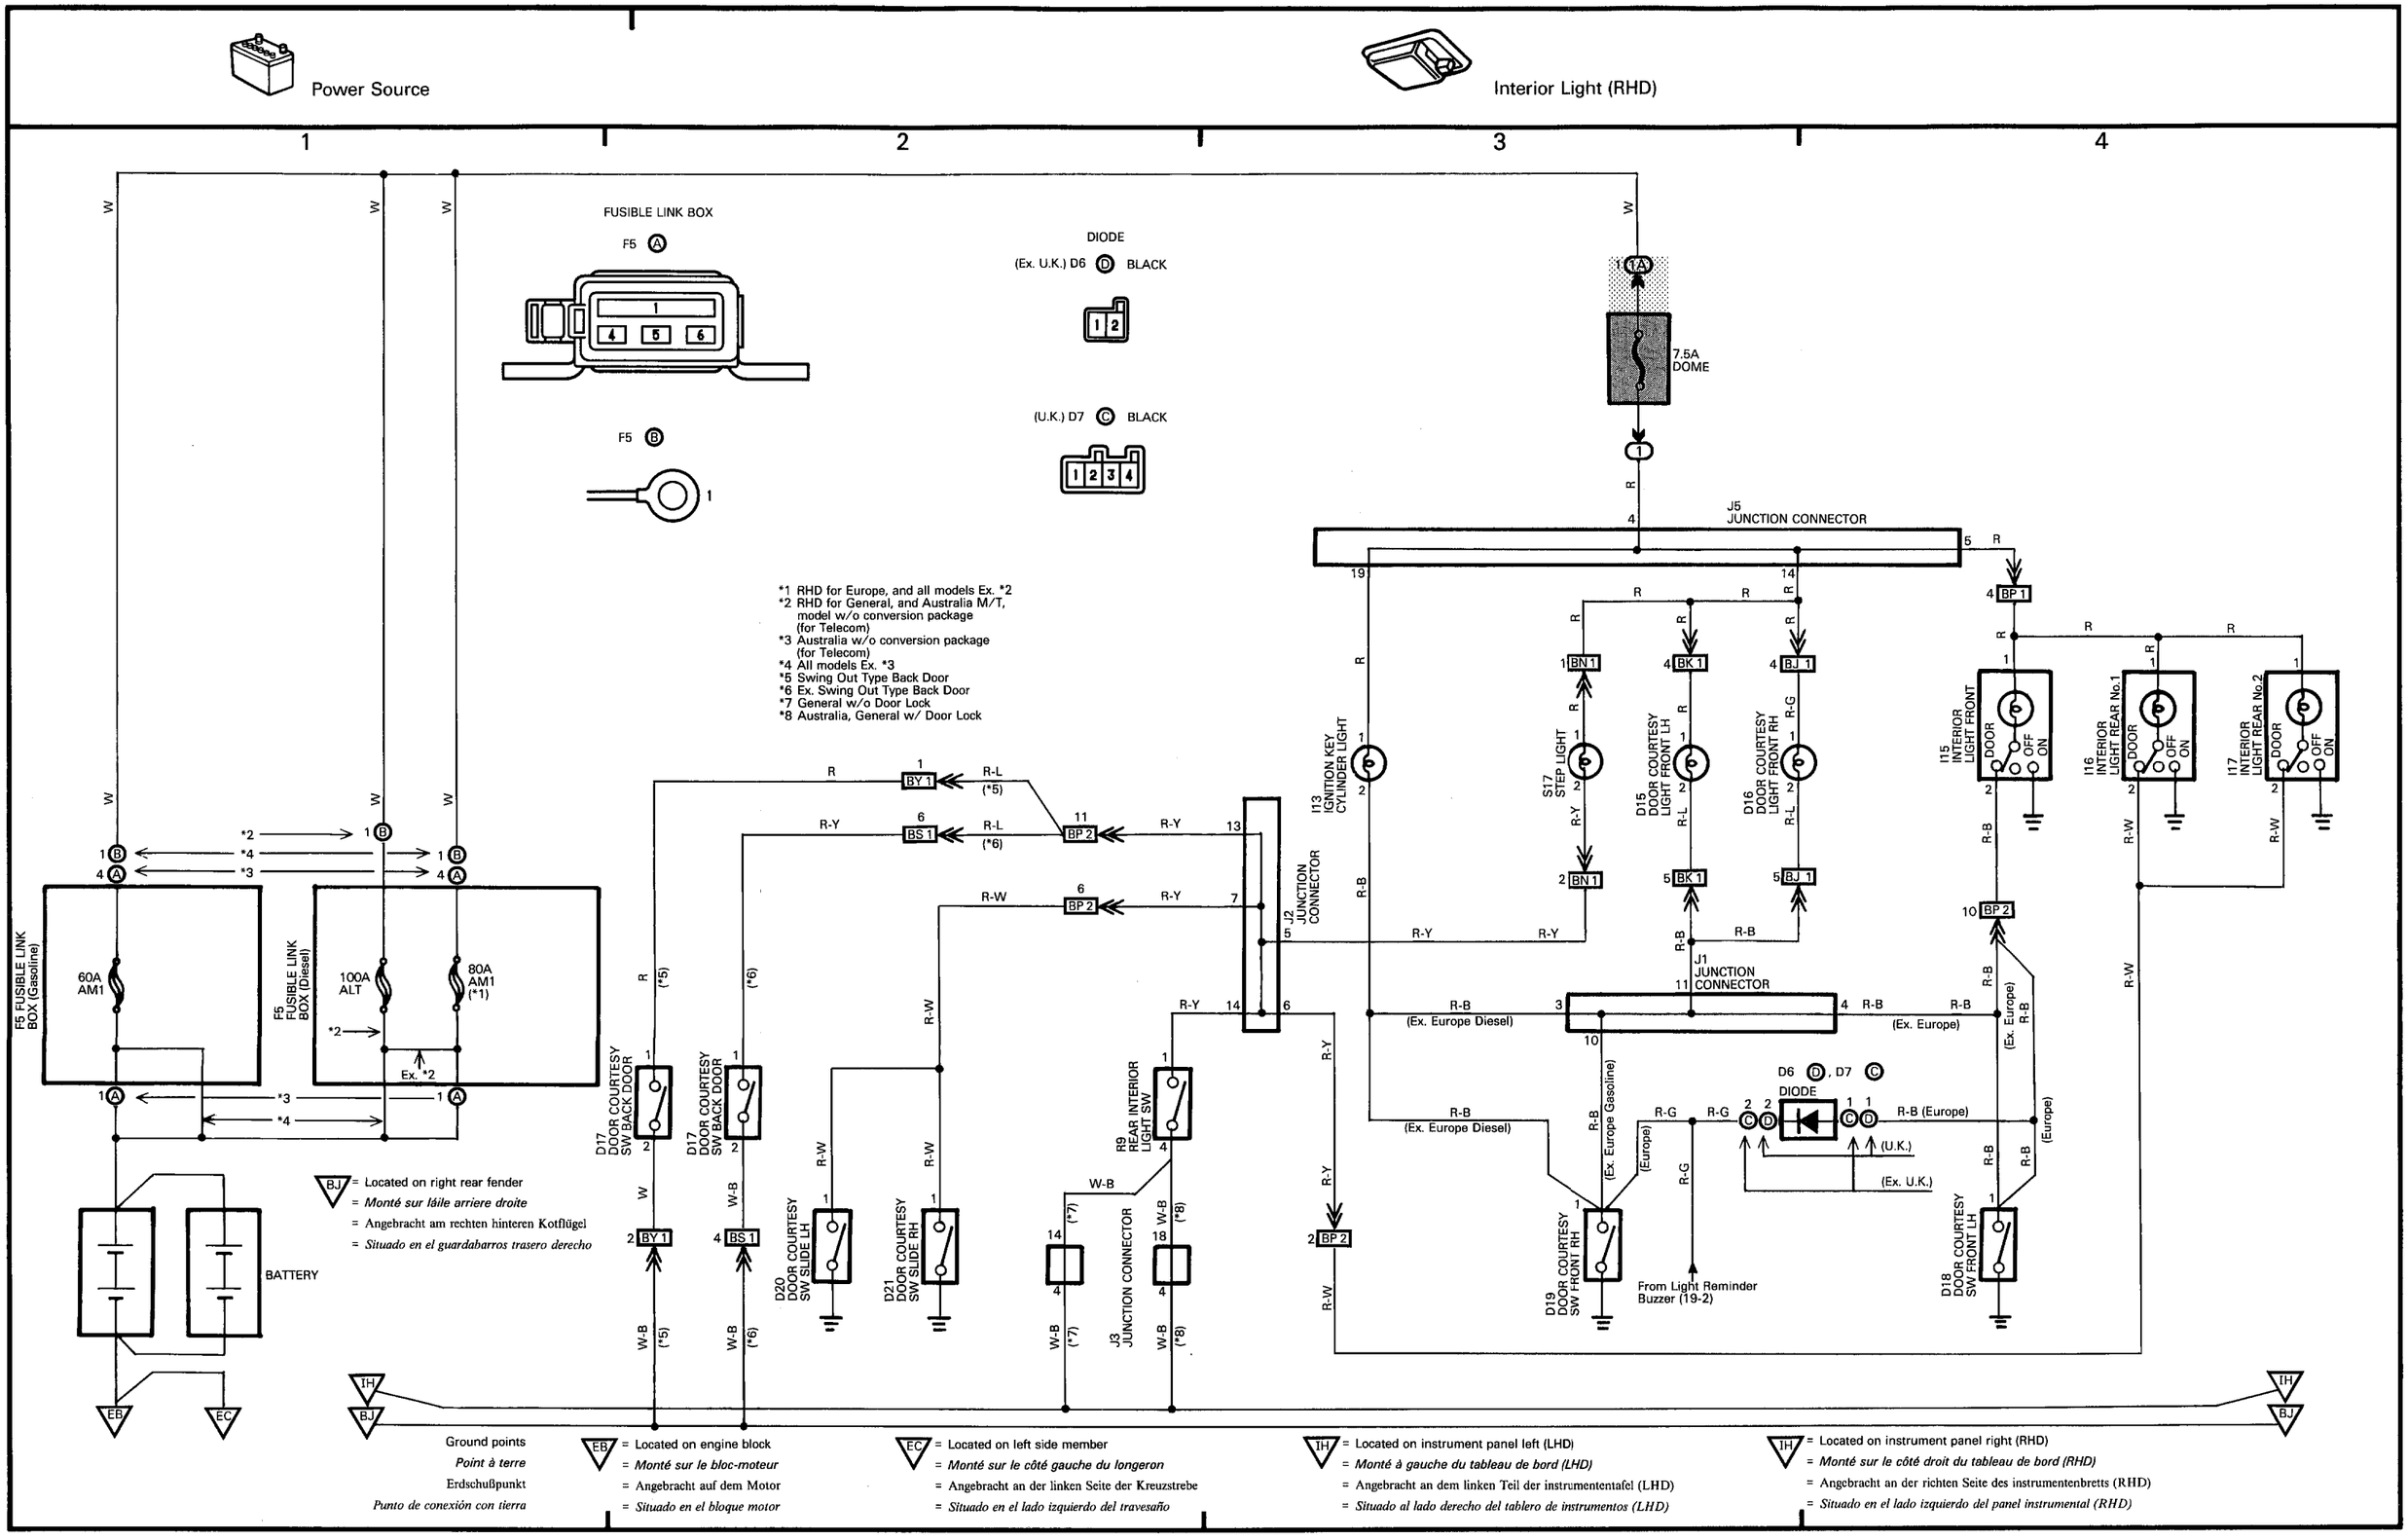
Power Source
Interior Light (RHD)
FUSIBLE LINK BOX
F5 A
F5 B
DIODE
(Ex. U.K.) D6 D BLACK
(U.K.) D7 C BLACK
7.5A DOME
J5 JUNCTION CONNECTOR
*1 RHD for Europe, and all models Ex. *2
*2 RHD for General, and Australia M/T, model w/o conversion package (for Telecom)
*3 Australia w/o conversion package (for Telecom)
*4 All models Ex. *3
*5 Swing Out Type Back Door
*6 Ex. Swing Out Type Back Door
*7 General w/o Door Lock
*8 Australia, General w/ Door Lock
F5 FUSIBLE LINK BOX (Gasoline)
60A AM1
F5 FUSIBLE LINK BOX (Diesel)
100A ALT
80A AM1 (*1)
Ex. *2
BATTERY
D17 DOOR COURTESY SW BACK DOOR
D20 DOOR COURTESY SW SLIDE LH
D21 DOOR COURTESY SW SLIDE RH
R9 REAR INTERIOR LIGHT SW
J3 JUNCTION CONNECTOR
J2 JUNCTION CONNECTOR
I13 IGNITION KEY CYLINDER LIGHT
S17 STEP LIGHT
D15 DOOR COURTESY LIGHT FRONT LH
D16 DOOR COURTESY LIGHT FRONT RH
I15 INTERIOR LIGHT FRONT DOOR OFF ON
I16 INTERIOR LIGHT REAR No.1 DOOR OFF ON
I17 INTERIOR LIGHT REAR No.2 DOOR OFF ON
J1 JUNCTION CONNECTOR
(Ex. Europe Diesel)
(Ex. Europe)
(Ex. Europe Gasoline)
(Europe)
D6 D, D7 C
DIODE
R-B (Europe)
(U.K.)
(Ex. U.K.)
D19 DOOR COURTESY SW FRONT RH
From Light Reminder Buzzer (19-2)
D18 DOOR COURTESY SW FRONT LH
BJ = Located on right rear fender
= Monté sur l'âile arriere droite
= Angebracht am rechten hinteren Kotflügel
= Situado en el guardabarros trasero derecho
Ground points
Point à terre
Erdschußpunkt
Punto de conexión con tierra
EB = Located on engine block
= Monté sur le bloc-moteur
= Angebracht auf dem Motor
= Situado en el bloque motor
EC = Located on left side member
= Monté sur le côté gauche du longeron
= Angebracht an der linken Seite der Kreuzstrebe
= Situado en el lado izquierdo del travesaño
IH = Located on instrument panel left (LHD)
= Monté à gauche du tableau de bord (LHD)
= Angebracht an dem linken Teil der instrumententafel (LHD)
= Situado al lado derecho del tablero de instrumentos (LHD)
IH = Located on instrument panel right (RHD)
= Monté sur le côté droit du tableau de bord (RHD)
= Angebracht an der richten Seite des instrumentenbretts (RHD)
= Situado en el lado izquierdo del panel instrumental (RHD)