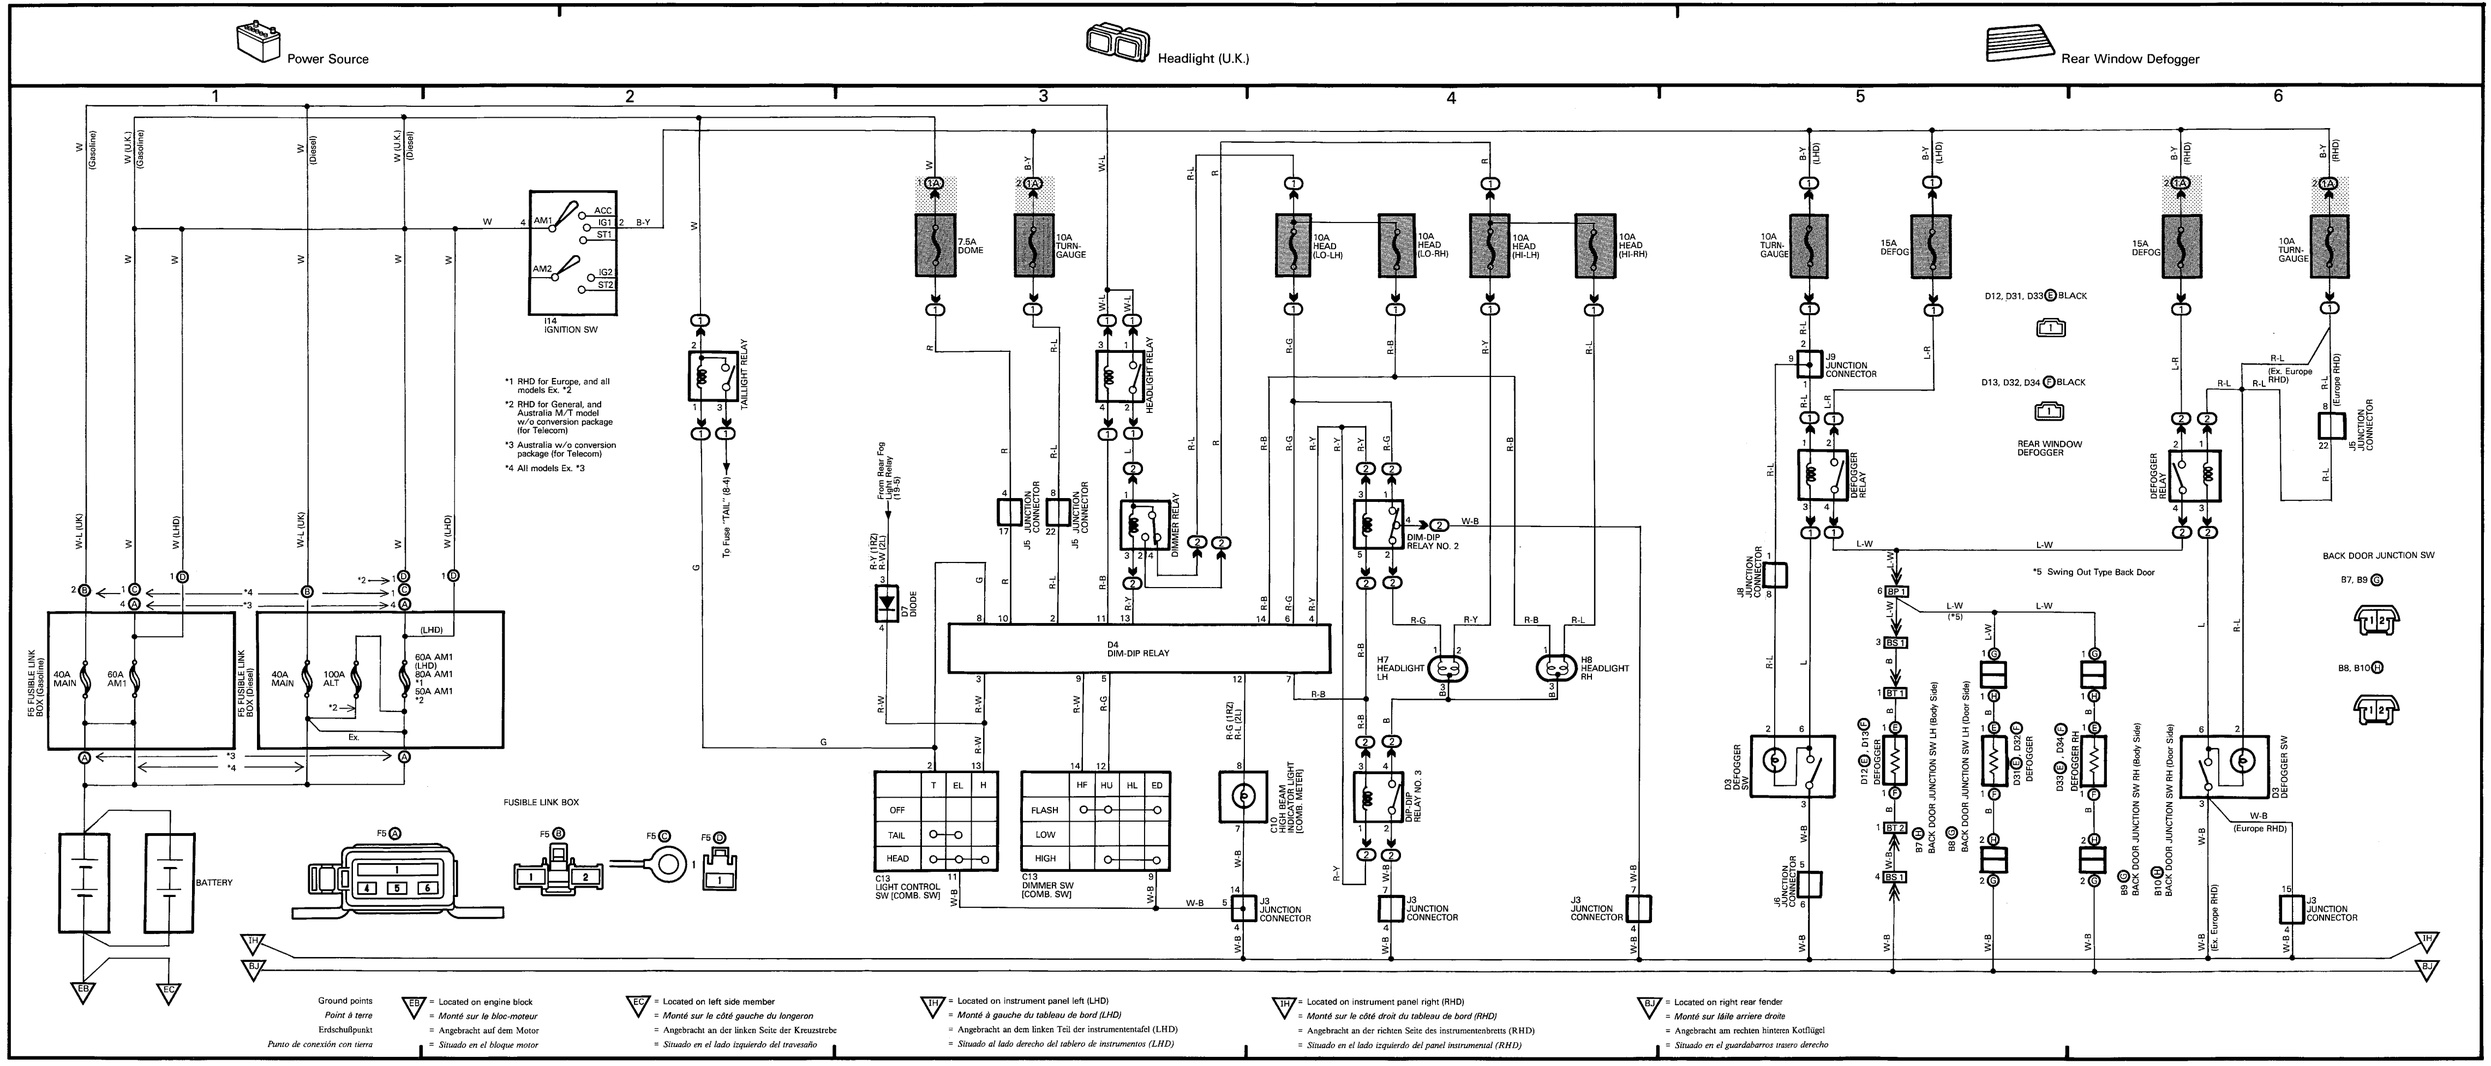
Power Source
Headlight (U.K.)
Rear Window Defogger
1
2
3
4
5
6
I14 IGNITION SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
*1 RHD for Europe, and all models Ex. *2
*2 RHD for General, and Australia M/T model w/o conversion package (for Telecom)
*3 Australia w/o conversion package (for Telecom)
*4 All models Ex. *3
TAILLIGHT RELAY
To Fuse "TAIL" (8-4)
7.5A DOME
10A TURN-GAUGE
HEADLIGHT RELAY
DIMMER RELAY
10A HEAD (LO-LH)
10A HEAD (LO-RH)
10A HEAD (HI-LH)
10A HEAD (HI-RH)
15A DEFOG
D12, D31, D33 BLACK
D13, D32, D34 BLACK
REAR WINDOW DEFOGGER
DEFOGGER RELAY
J9 JUNCTION CONNECTOR
J5 JUNCTION CONNECTOR
J8 JUNCTION CONNECTOR
D3 DEFOGGER SW
*5 Swing Out Type Back Door
BACK DOOR JUNCTION SW
B7, B9
B8, B10
D4 DIM-DIP RELAY
D7 DIODE
From Rear Fog Light Relay (1B-5)
DIM-DIP RELAY NO. 2
DIM-DIP RELAY NO. 3
H7 HEADLIGHT LH
H8 HEADLIGHT RH
C10 HIGH BEAM INDICATOR LIGHT [COMB. METER]
C13 LIGHT CONTROL SW [COMB. SW]
C13 DIMMER SW [COMB. SW]
OFF
TAIL
HEAD
FLASH
LOW
HIGH
J3 JUNCTION CONNECTOR
F5 FUSIBLE LINK BOX (Gasoline)
F5 FUSIBLE LINK BOX (Diesel)
40A MAIN
60A AM1
100A ALT
60A AM1 (LHD)
80A AM1 *1
50A AM1 *2
BATTERY
FUSIBLE LINK BOX
BACK DOOR JUNCTION SW LH (Body Side)
BACK DOOR JUNCTION SW LH (Door Side)
BACK DOOR JUNCTION SW RH (Body Side)
BACK DOOR JUNCTION SW RH (Door Side)
D12 DEFOGGER
D31 DEFOGGER
D33 DEFOGGER RH
D3 DEFOGGER SW
(Ex. Europe RHD)
(Europe RHD)
(LHD)
(RHD)
Ground points
Point à terre
Erdschußpunkt
Punto de conexión con tierra
EB = Located on engine block
Monté sur le bloc-moteur
Angebracht auf dem Motor
Situado en el bloque motor
EC = Located on left side member
Monté sur le côté gauche du longeron
Angebracht an der linken Seite der Kreuzstrebe
Situado en el lado izquierdo del travesaño
IH = Located on instrument panel left (LHD)
Monté à gauche du tableau de bord (LHD)
Angebracht an dem linken Teil der instrumententafel (LHD)
Situado al lado derecho del tablero de instrumentos (LHD)
IH = Located on instrument panel right (RHD)
Monté sur le côté droit du tableau de bord (RHD)
Angebracht an der richten Seite des instrumentenbretts (RHD)
Situado en el lado izquierdo del panel instrumental (RHD)
BJ = Located on right rear fender
Monté sur l'aile arriere droite
Angebracht am rechten hinteren Kotflügel
Situado en el guardabarros trasero derecho