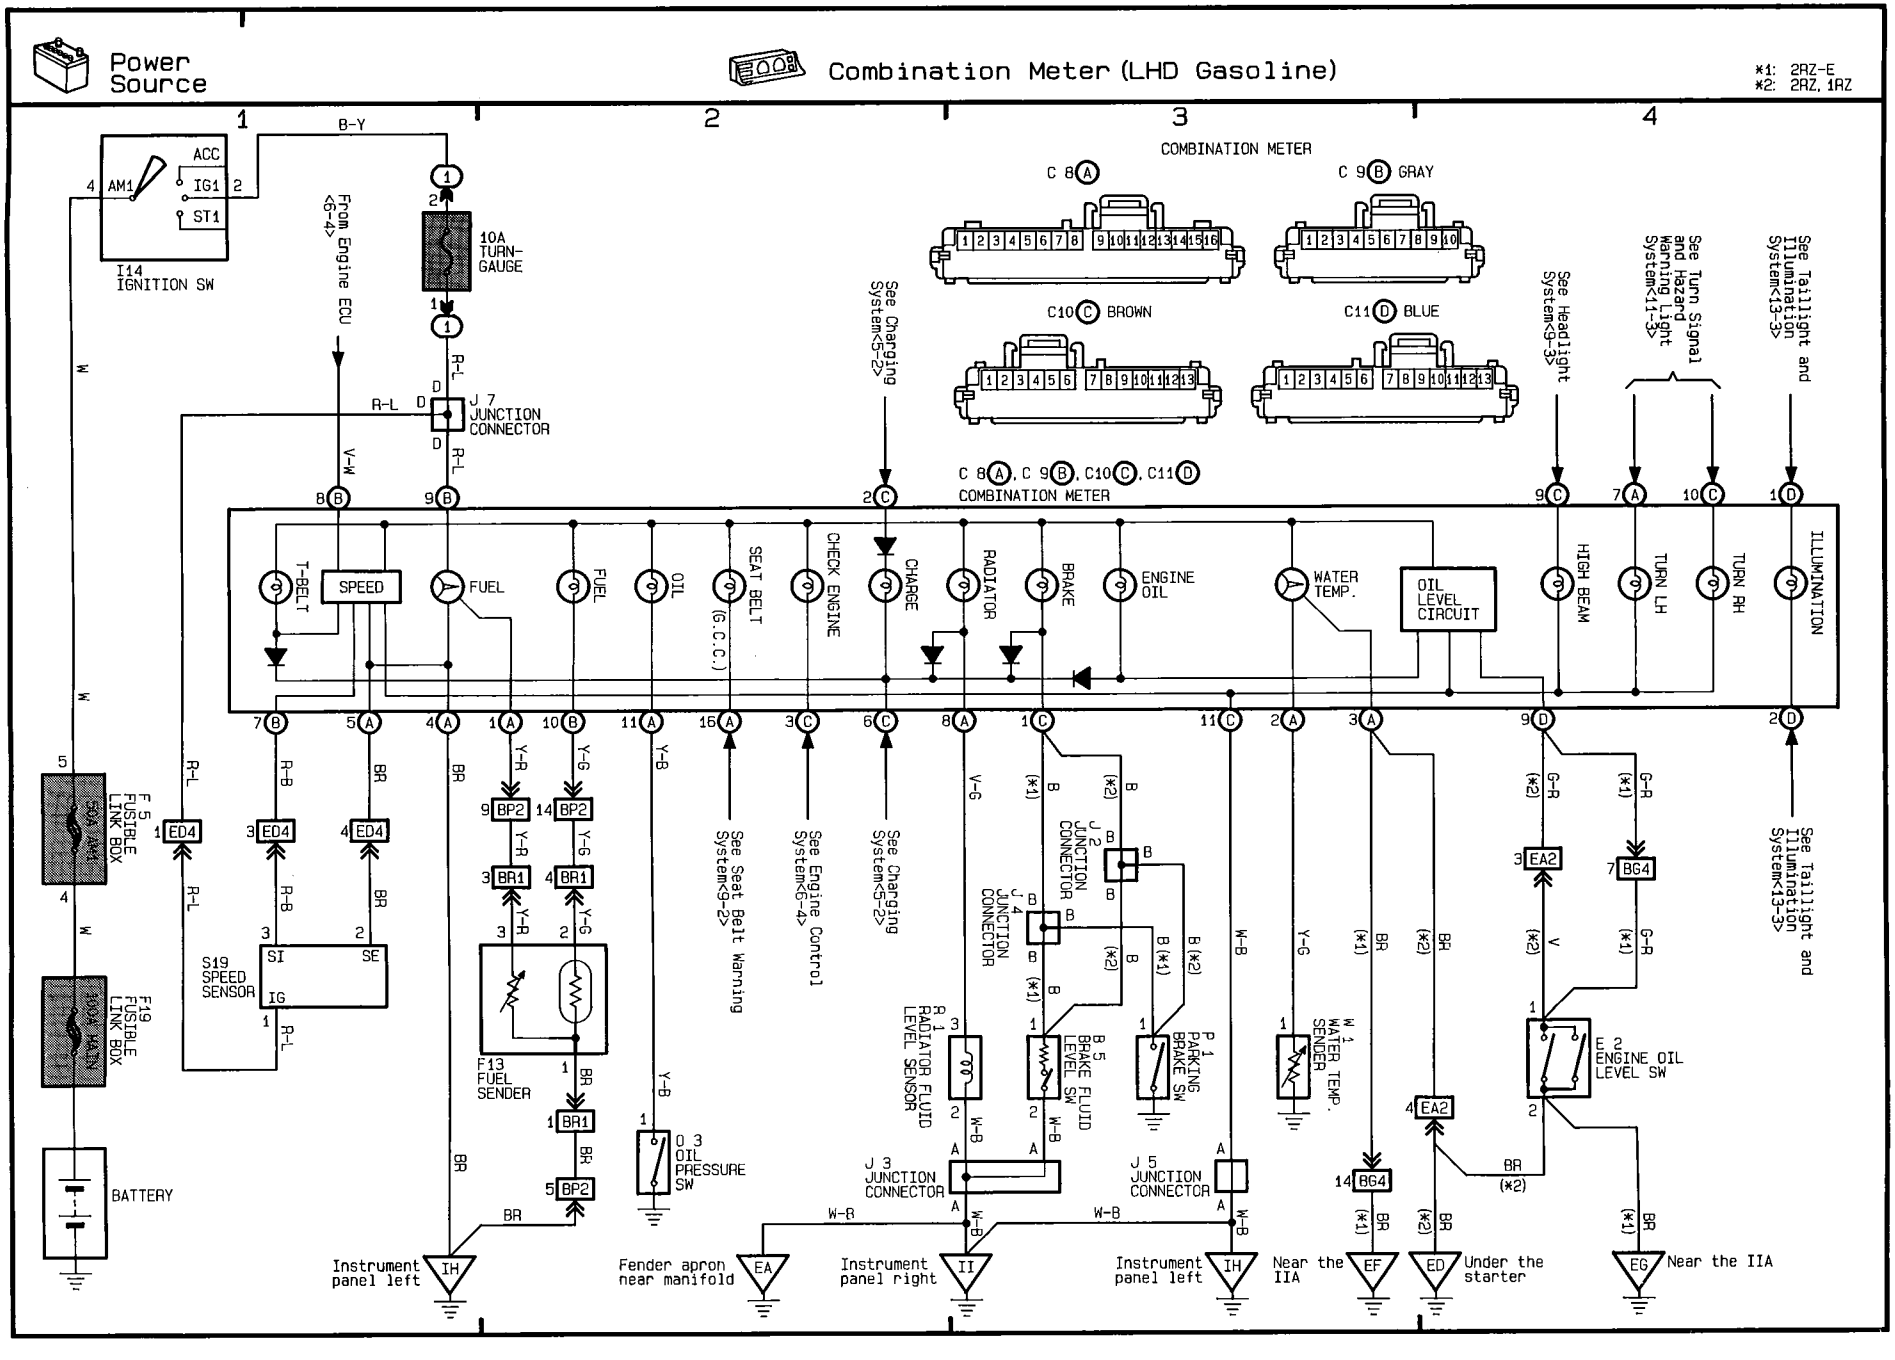
Power Source
Combination Meter (LHD Gasoline)
*1: 2RZ-E
*2: 2RZ, 1RZ
I14 IGNITION SW
ACC
IG1
ST1
AM1
B-Y
From Engine ECU <6-4>
10A TURN-GAUGE
J 7 JUNCTION CONNECTOR
COMBINATION METER
C 8 (A)
C 9 (B) GRAY
C10 (C) BROWN
C11 (D) BLUE
C 8 (A), C 9 (B), C10 (C), C11 (D) COMBINATION METER
See Charging System<5-2>
See Headlight System<3-3>
See Turn Signal and Hazard Warning Light System<11-3>
See Taillight and Illumination System<13-3>
T-BELT
SPEED
FUEL
OIL
SEAT BELT (G.C.C.)
CHECK ENGINE
CHARGE
RADIATOR
BRAKE
ENGINE OIL
WATER TEMP.
OIL LEVEL CIRCUIT
HIGH BEAM
TURN LH
TURN RH
ILLUMINATION
F 5 FUSIBLE LINK BOX
F19 FUSIBLE LINK BOX
BATTERY
S19 SPEED SENSOR
F13 FUEL SENDER
O 3 OIL PRESSURE SW
See Seat Belt Warning System<9-2>
See Engine Control System<6-4>
J 2 JUNCTION CONNECTOR
J 4 JUNCTION CONNECTOR
R 1 RADIATOR FLUID LEVEL SENSOR
B 5 BRAKE FLUID LEVEL SW
P 1 PARKING BRAKE SW
W 1 WATER TEMP. SENDER
E 2 ENGINE OIL LEVEL SW
J 3 JUNCTION CONNECTOR
J 5 JUNCTION CONNECTOR
Instrument panel left
Fender apron near manifold
Instrument panel right
Near the IIA
Under the starter