27 HIACE (RHD)

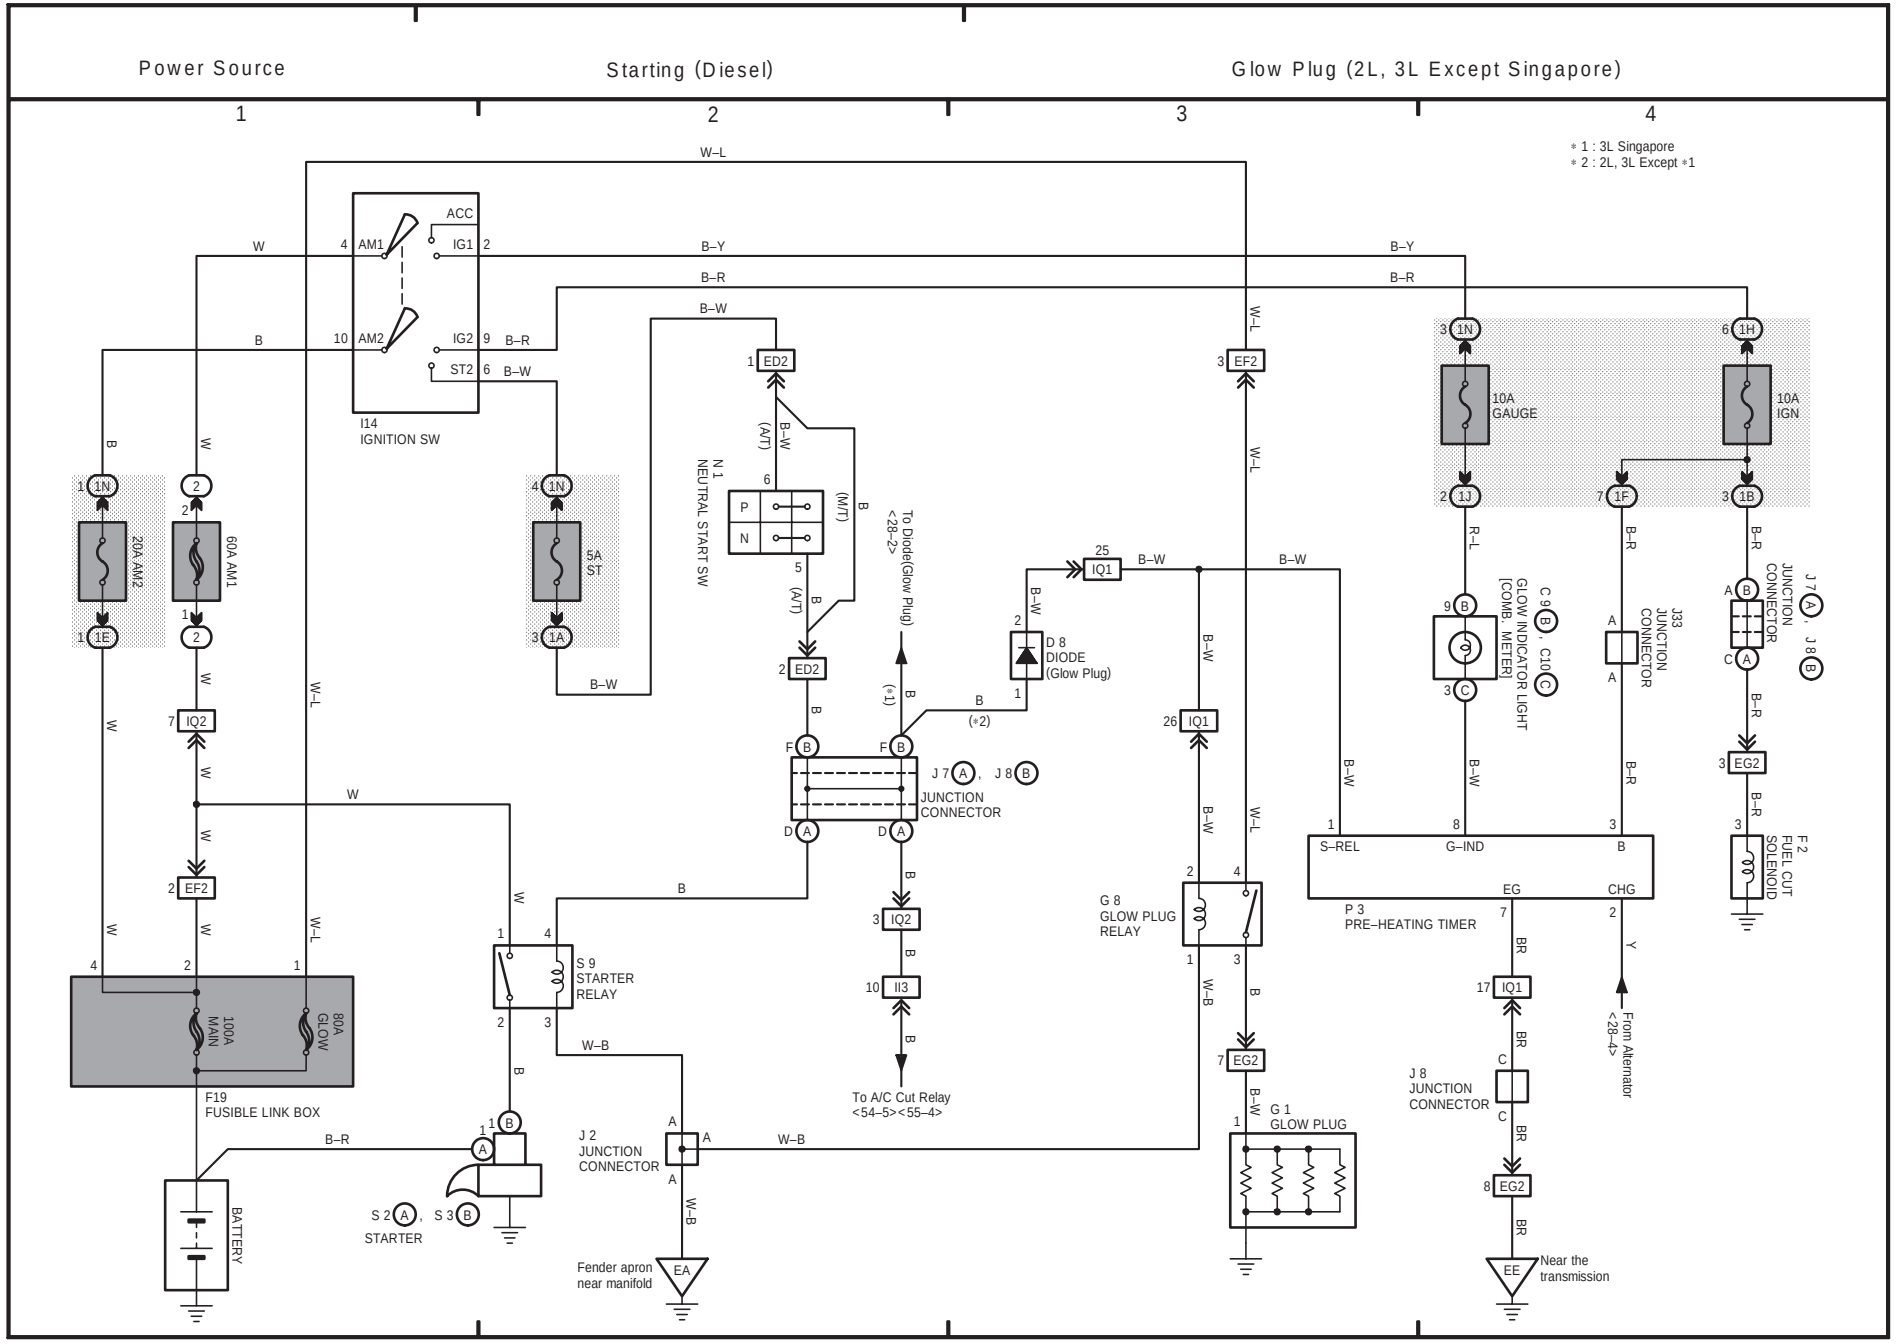
Power Source
Starting (Diesel)
Glow Plug (2L, 3L Except Singapore)
1
2
3
4
* 1 : 3L Singapore
* 2 : 2L, 3L Except *1
I14
IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
20A AM2
60A AM1
5A ST
N 1
NEUTRAL START SW
P
N
(A/T)
(M/T)
To Diode(Glow Plug) <28–2>
D 8
DIODE
(Glow Plug)
J 7 , J 8
JUNCTION CONNECTOR
10A GAUGE
10A IGN
GLOW INDICATOR LIGHT [COMB. METER]
C 9 , C10
J33
JUNCTION CONNECTOR
J 7 , J 8
JUNCTION CONNECTOR
F 2
FUEL CUT SOLENOID
G 8
GLOW PLUG RELAY
P 3
PRE–HEATING TIMER
S–REL
G–IND
EG
CHG
From Alternator <28–4>
S 9
STARTER RELAY
100A MAIN
80A GLOW
F19
FUSIBLE LINK BOX
BATTERY
S 2 , S 3
STARTER
J 2
JUNCTION CONNECTOR
Fender apron near manifold
EA
To A/C Cut Relay <54–5><55–4>
G 1
GLOW PLUG
J 8
JUNCTION CONNECTOR
Near the transmission
EE