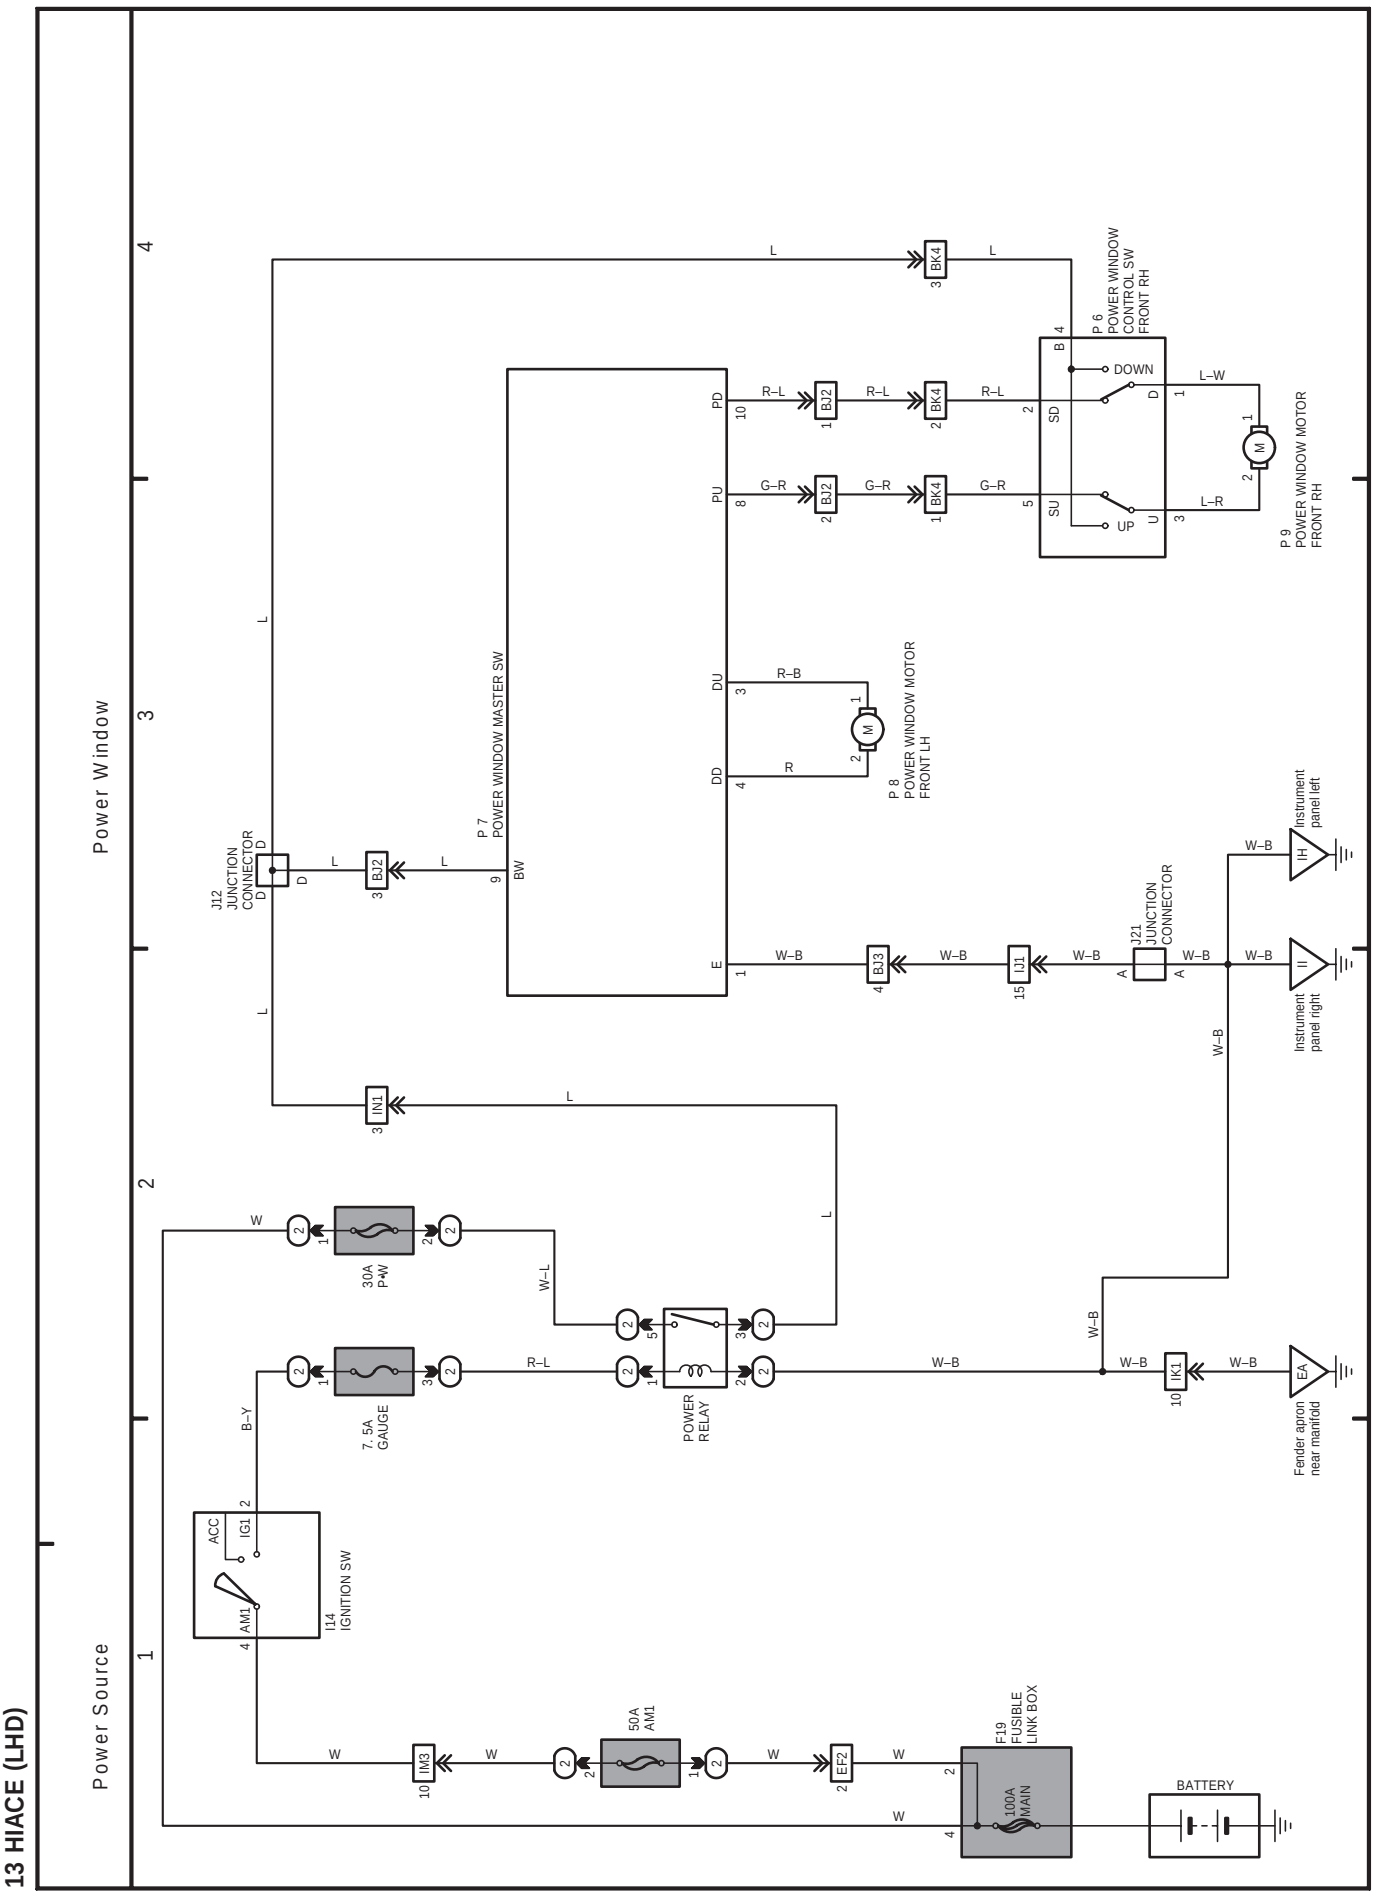
13 HIACE (LHD)
Power Source
Power Window
1
2
3
4
BATTERY
F19
FUSIBLE
LINK BOX
100A
MAIN
50A
AM1
EF2
IM3
I14
IGNITION SW
ACC
IG1
AM1
7. 5A
GAUGE
30A
P-W
POWER
RELAY
IK1
EA
Fender apron
near manifold
IN1
J12
JUNCTION
CONNECTOR
BJ2
P 7
POWER WINDOW MASTER SW
BW
PD
PU
DU
DD
E
BJ3
IJ1
J21
JUNCTION
CONNECTOR
IH
Instrument
panel left
II
Instrument
panel right
P 8
POWER WINDOW MOTOR
FRONT LH
BK4
P 6
POWER WINDOW
CONTROL SW
FRONT RH
DOWN
UP
SD
SU
B
D
U
P 9
POWER WINDOW MOTOR
FRONT RH
L
W
W–L
B–Y
R–L
W–B
G–R
R–B
R
L–W
L–R