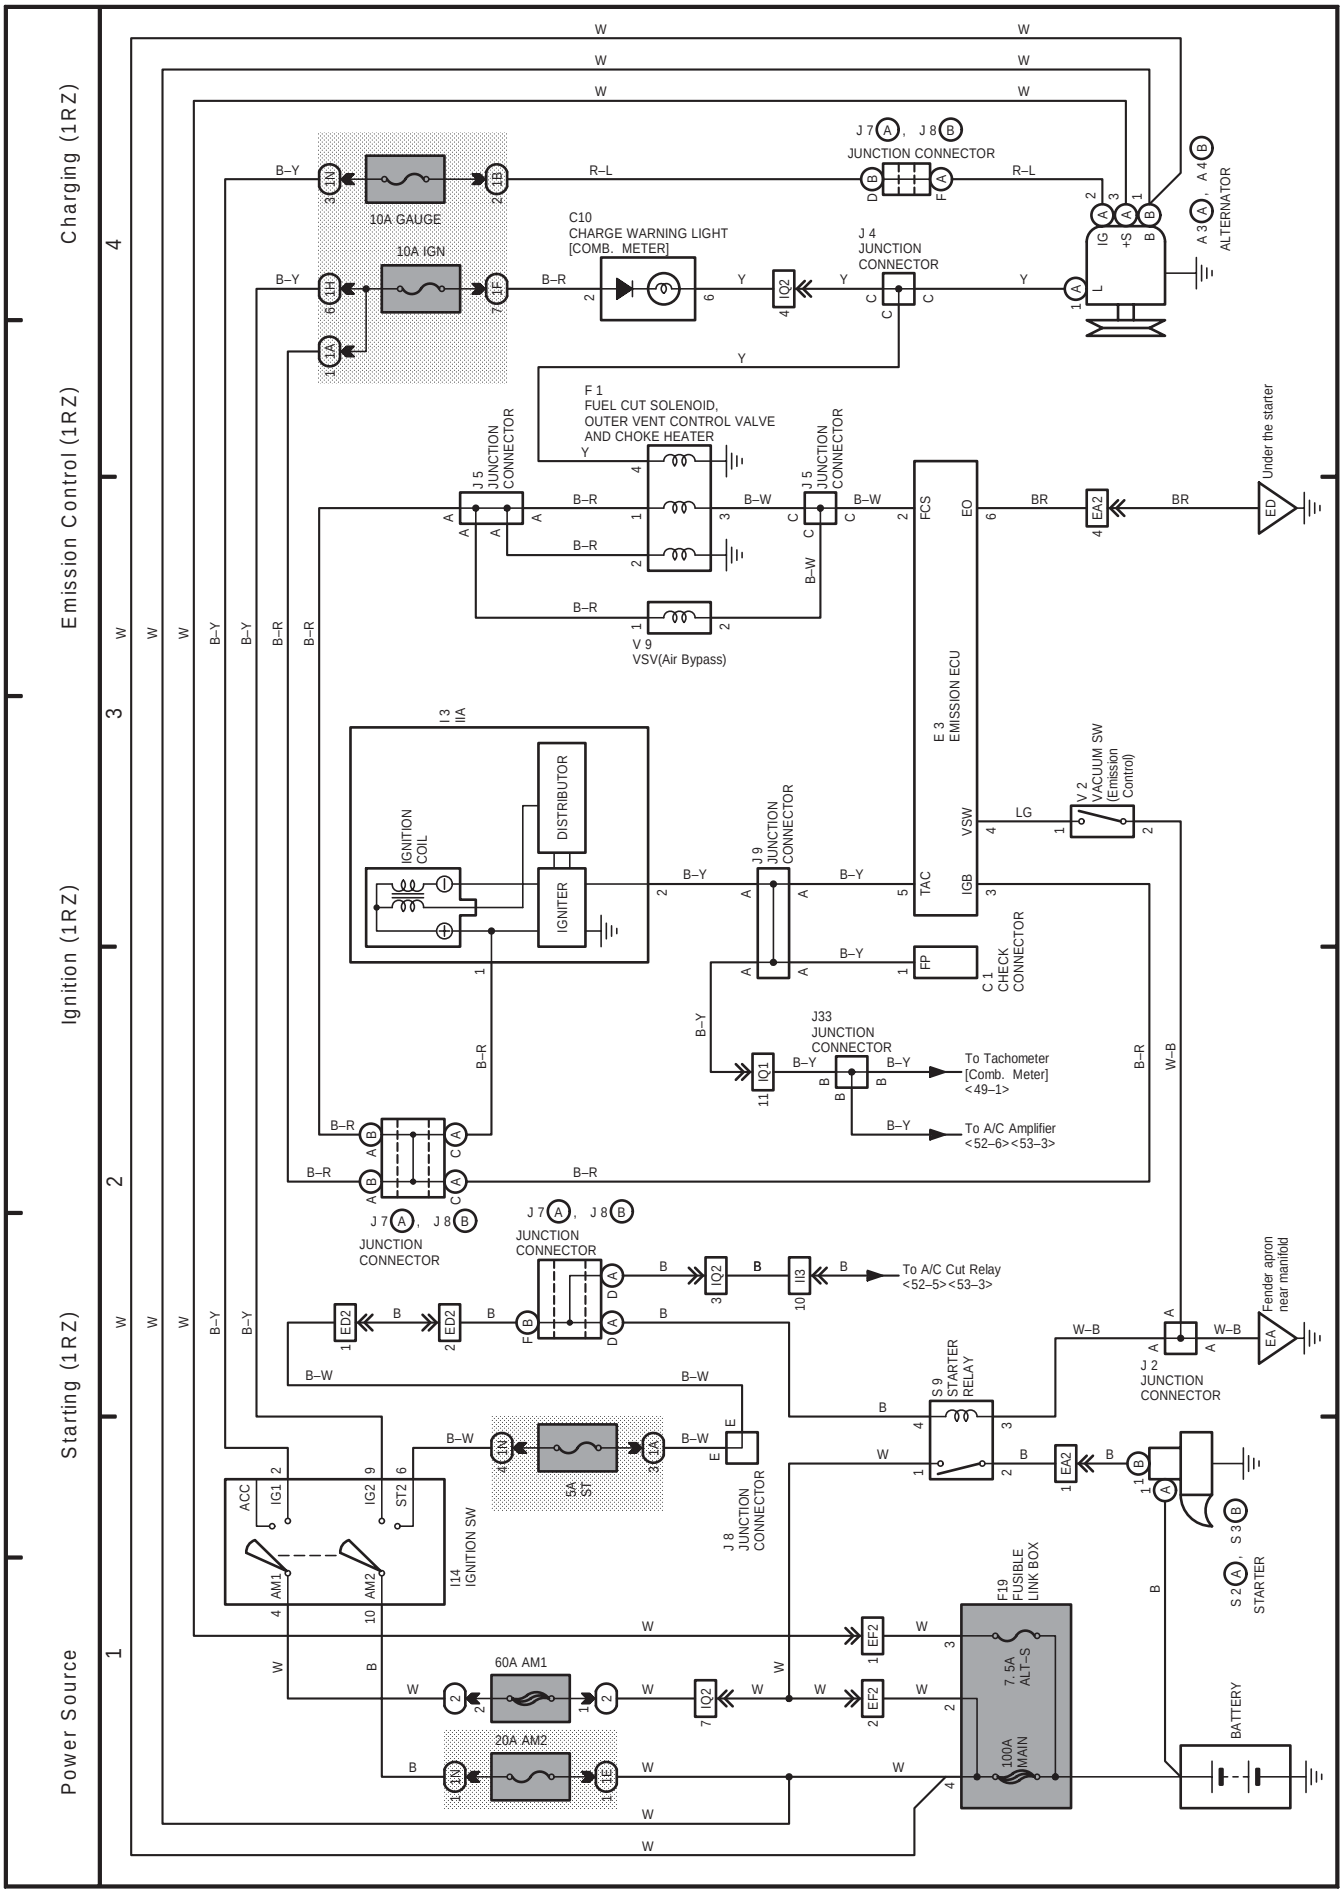
Charging (1RZ)
Emission Control (1RZ)
Ignition (1RZ)
Starting (1RZ)
Power Source
10A GAUGE
10A IGN
C10
CHARGE WARNING LIGHT
[COMB. METER]
J 4
JUNCTION
CONNECTOR
J 7 A, J 8 B
JUNCTION CONNECTOR
ALTERNATOR
F 1
FUEL CUT SOLENOID,
OUTER VENT CONTROL VALVE
AND CHOKE HEATER
J 5
JUNCTION
CONNECTOR
V 9
VSV(Air Bypass)
E 3
EMISSION ECU
FCS
EO
VSW
TAC
IGB
Under the starter
V 2
VACUUM SW
(Emission
Control)
I 3
IIA
IGNITION
COIL
DISTRIBUTOR
IGNITER
J 9
JUNCTION
CONNECTOR
C 1
CHECK
CONNECTOR
J33
JUNCTION
CONNECTOR
To Tachometer
[Comb. Meter]
<49–1>
To A/C Amplifier
<52–6><53–3>
To A/C Cut Relay
<52–5><53–3>
Fender apron
near manifold
J 2
JUNCTION
CONNECTOR
S 9
STARTER
RELAY
J 8
JUNCTION
CONNECTOR
5A
ST
I14
IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
60A AM1
20A AM2
F19
FUSIBLE
LINK BOX
7.5A
ALT–S
100A
MAIN
BATTERY
STARTER

26 HIACE (RHD)