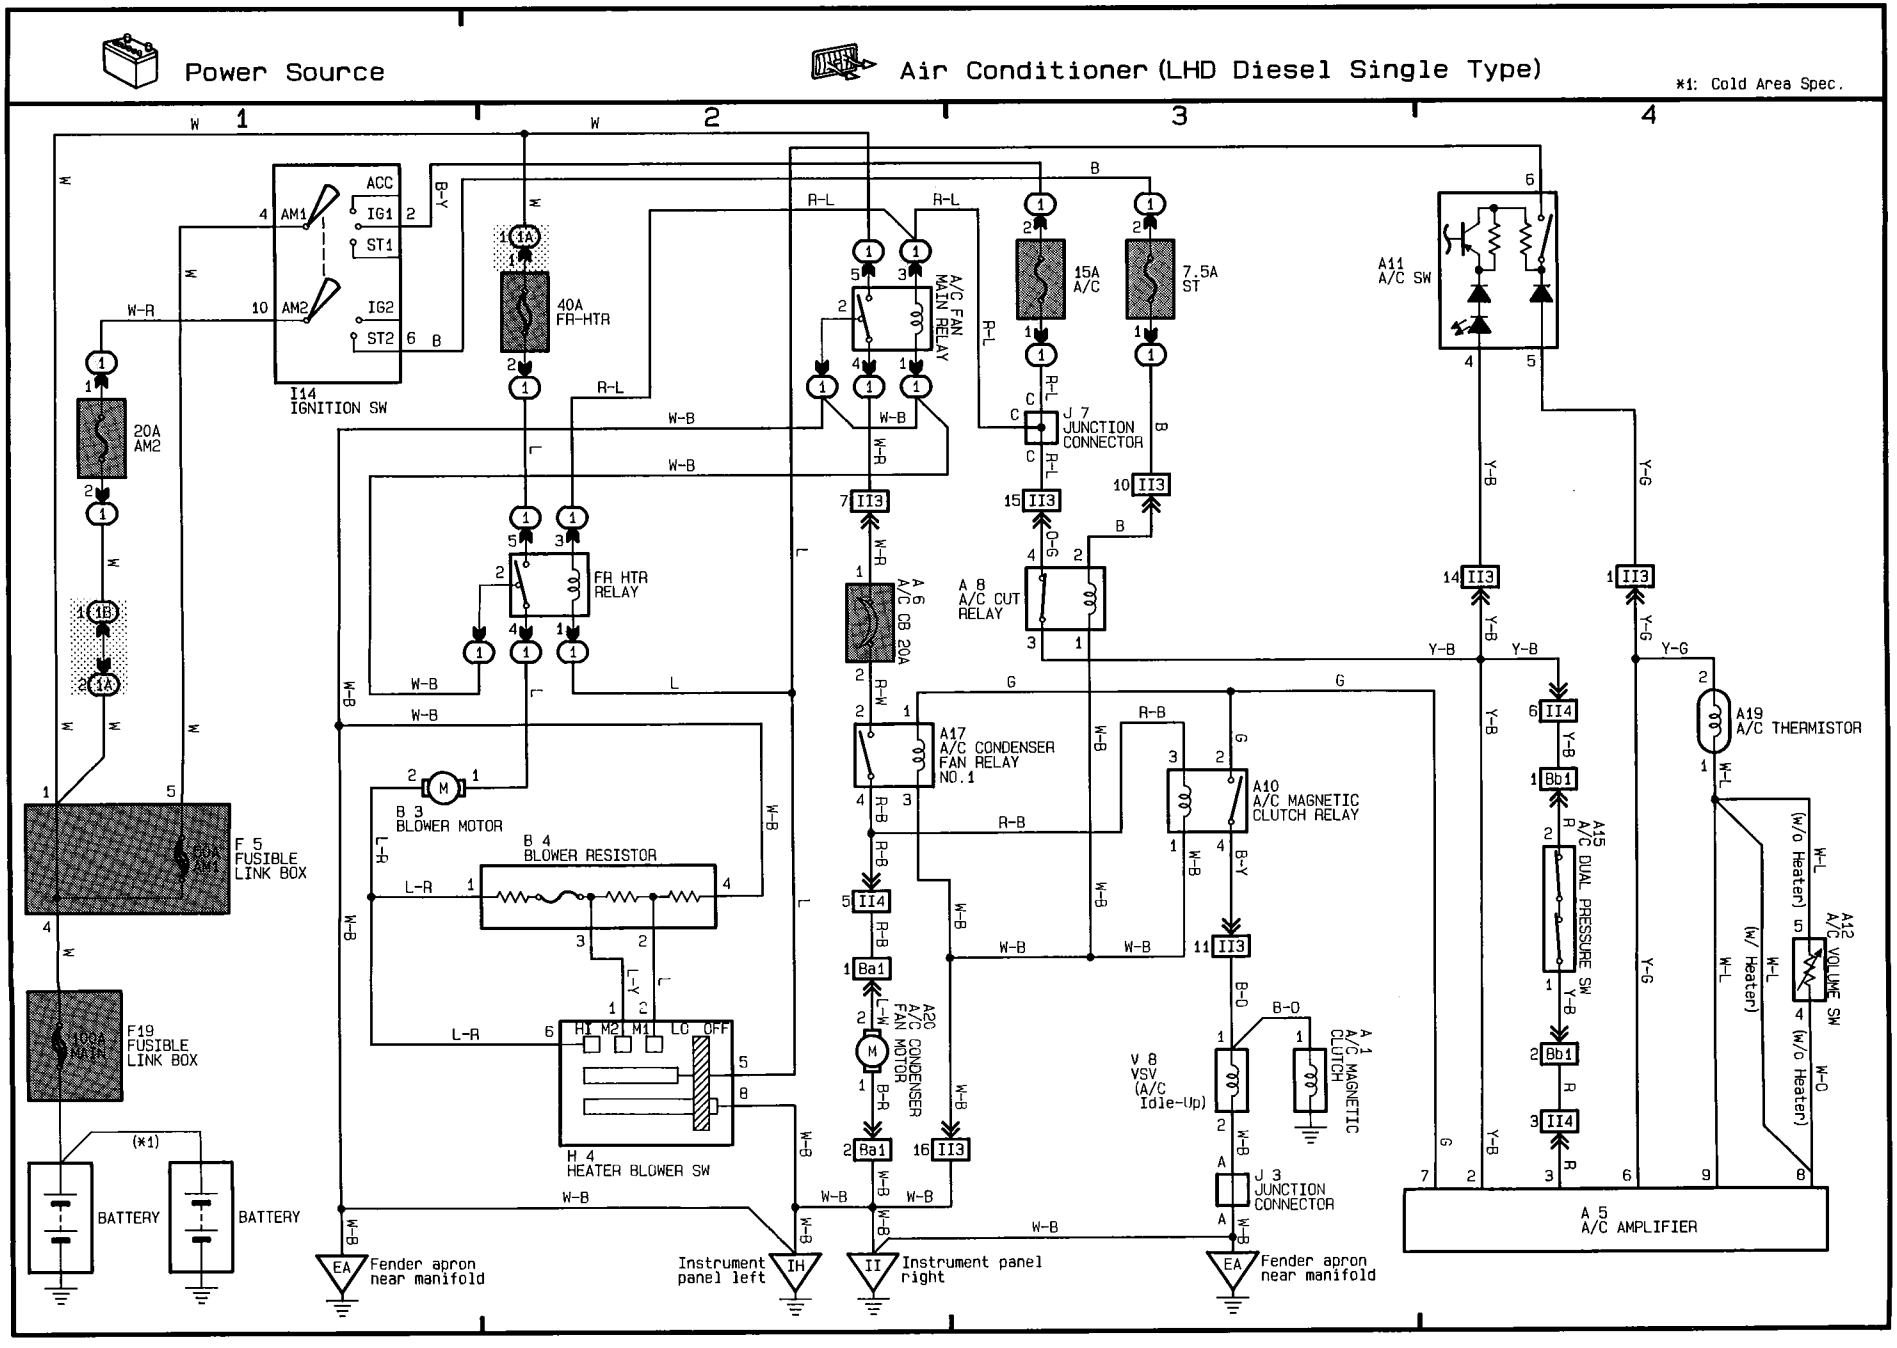
Power Source
Air Conditioner (LHD Diesel Single Type)
*1: Cold Area Spec.
1
2
3
4
I14 IGNITION SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
20A AM2
40A FR-HTR
A/C FAN MAIN RELAY
15A A/C
7.5A ST
J 7 JUNCTION CONNECTOR
A11 A/C SW
FR HTR RELAY
A 6 A/C CB 20A
A 8 A/C CUT RELAY
A17 A/C CONDENSER FAN RELAY NO.1
A10 A/C MAGNETIC CLUTCH RELAY
A19 A/C THERMISTOR
A15 A/C DUAL PRESSURE SW
A12 A/C VOLUME SW
(w/o Heater)
(w/ Heater)
B 3 BLOWER MOTOR
B 4 BLOWER RESISTOR
H 4 HEATER BLOWER SW
HI M2 M1 LO OFF
A20 A/C CONDENSER FAN MOTOR
V 8 VSV (A/C Idle-Up)
A 1 A/C MAGNETIC CLUTCH
J 3 JUNCTION CONNECTOR
A 5 A/C AMPLIFIER
F 5 FUSIBLE LINK BOX
60A AM1
F19 FUSIBLE LINK BOX
100A MAIN
(*1)
BATTERY
BATTERY
EA Fender apron near manifold
IH Instrument panel left
II Instrument panel right
EA Fender apron near manifold