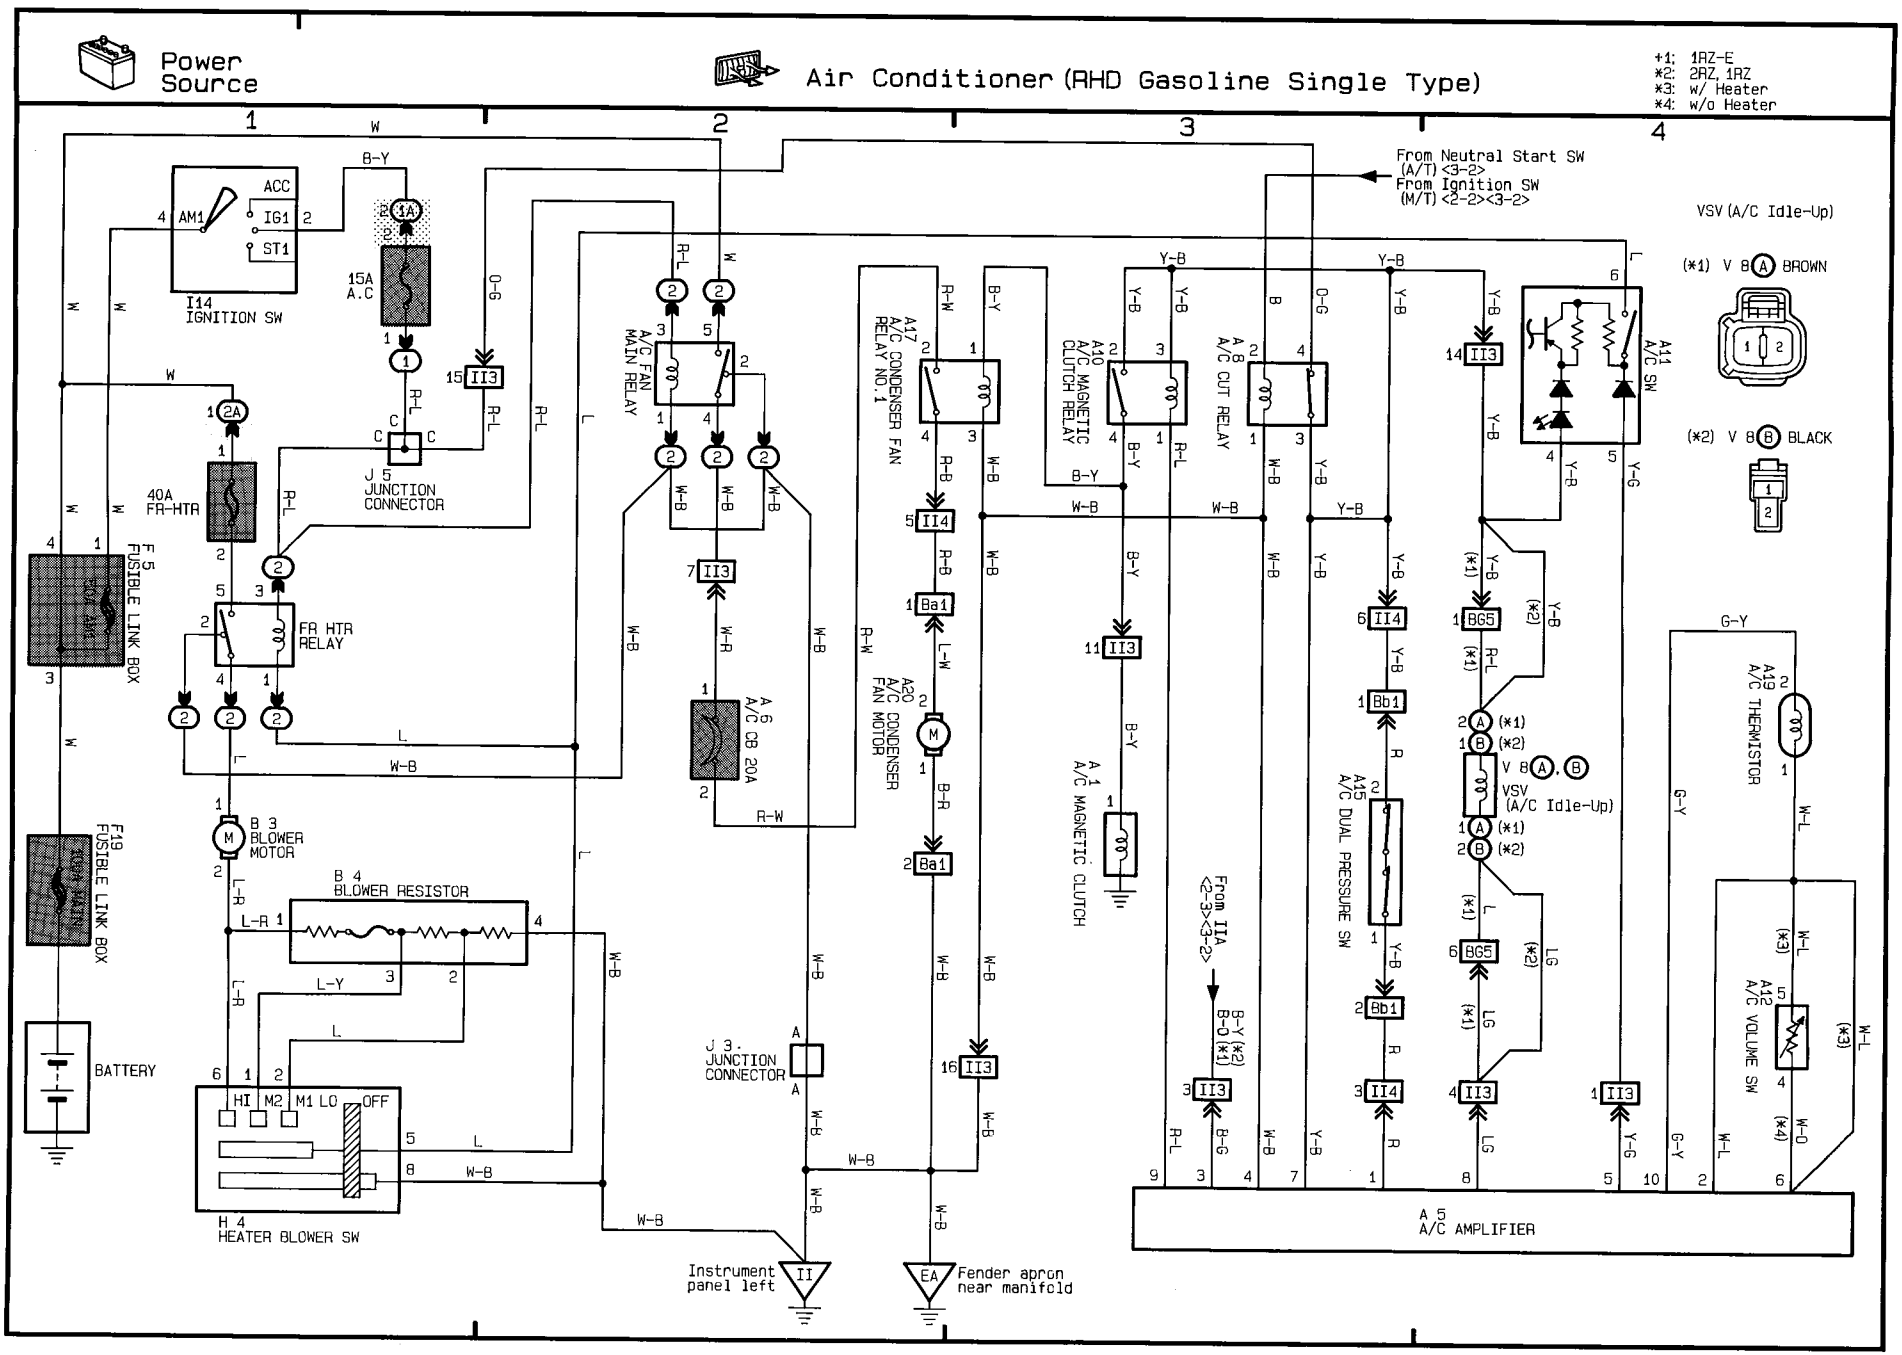
Power Source
Air Conditioner (RHD Gasoline Single Type)
*1: 1RZ-E
*2: 2RZ, 1RZ
*3: w/ Heater
*4: w/o Heater
From Neutral Start SW (A/T) <3-2>
From Ignition SW (M/T) <2-2><3-2>
VSV (A/C Idle-Up)
(*1) V 8 A BROWN
(*2) V 8 B BLACK
I14 IGNITION SW
15A A.C
J 5 JUNCTION CONNECTOR
40A FR-HTR
F 5 FUSIBLE LINK BOX
FR HTR RELAY
A 6 A/C CB 20A
A17 A/C CONDENSER FAN RELAY NO.1
A20 A/C CONDENSER FAN MOTOR
A/C FAN MAIN RELAY
A10 A/C MAGNETIC CLUTCH RELAY
A 1 A/C MAGNETIC CLUTCH
A 8 A/C CUT RELAY
A15 A/C DUAL PRESSURE SW
A11 A/C SW
VSV (A/C Idle-Up)
A19 A/C THERMISTOR
A12 A/C VOLUME SW
B 3 BLOWER MOTOR
B 4 BLOWER RESISTOR
H 4 HEATER BLOWER SW
HI M2 M1 LO OFF
F19 FUSIBLE LINK BOX
BATTERY
J 3. JUNCTION CONNECTOR
From IIA <2-3><3-2>
A 5 A/C AMPLIFIER
Instrument panel left
Fender apron near manifold