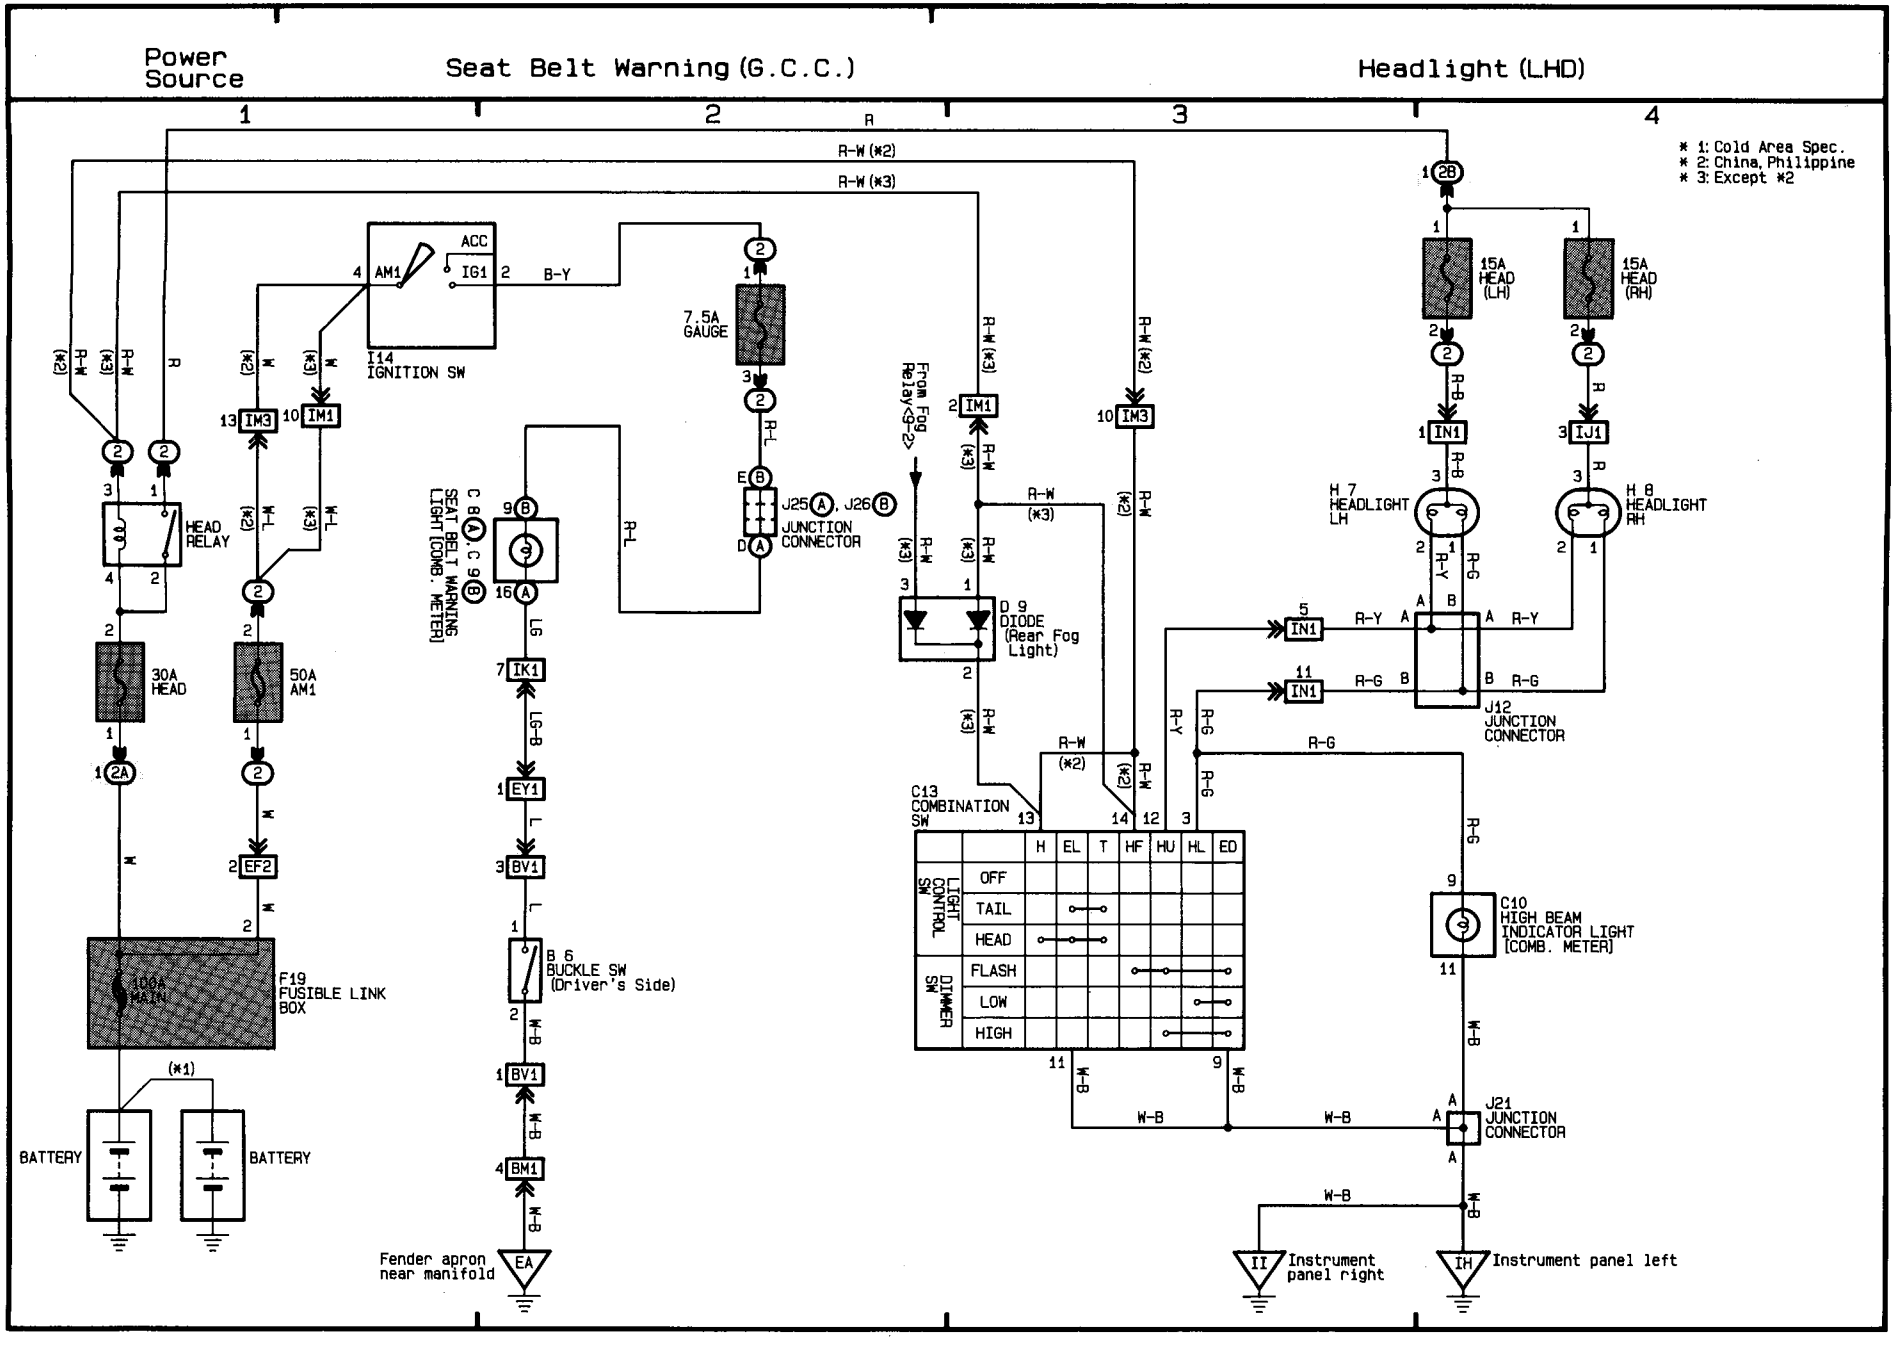
Power Source
Seat Belt Warning (G.C.C.)
Headlight (LHD)
1
2
3
4
* 1: Cold Area Spec.
* 2: China, Philippine
* 3: Except *2
R-W (*2)
R-W (*3)
ACC
IG1
AM1
B-Y
I14 IGNITION SW
7.5A GAUGE
HEAD RELAY
30A HEAD
50A AM1
F19 FUSIBLE LINK BOX
100A MAIN
BATTERY
BATTERY
(*1)
IM3
IM1
J25, J26
JUNCTION CONNECTOR
From Fog Relay <6-2>
D 9 DIODE (Rear Fog Light)
C 8, C 9 SEAT BELT WARNING LIGHT [COMB. METER]
IK1
EY1
BV1
B 6 BUCKLE SW (Driver's Side)
BM1
EA
Fender apron near manifold
EF2
C13 COMBINATION SW
H
EL
T
HF
HU
HL
ED
LIGHT CONTROL SW
OFF
TAIL
HEAD
DIMMER SW
FLASH
LOW
HIGH
15A HEAD (LH)
15A HEAD (RH)
IN1
IJ1
H 7 HEADLIGHT LH
H 8 HEADLIGHT RH
J12 JUNCTION CONNECTOR
C10 HIGH BEAM INDICATOR LIGHT [COMB. METER]
J21 JUNCTION CONNECTOR
II Instrument panel right
IH Instrument panel left