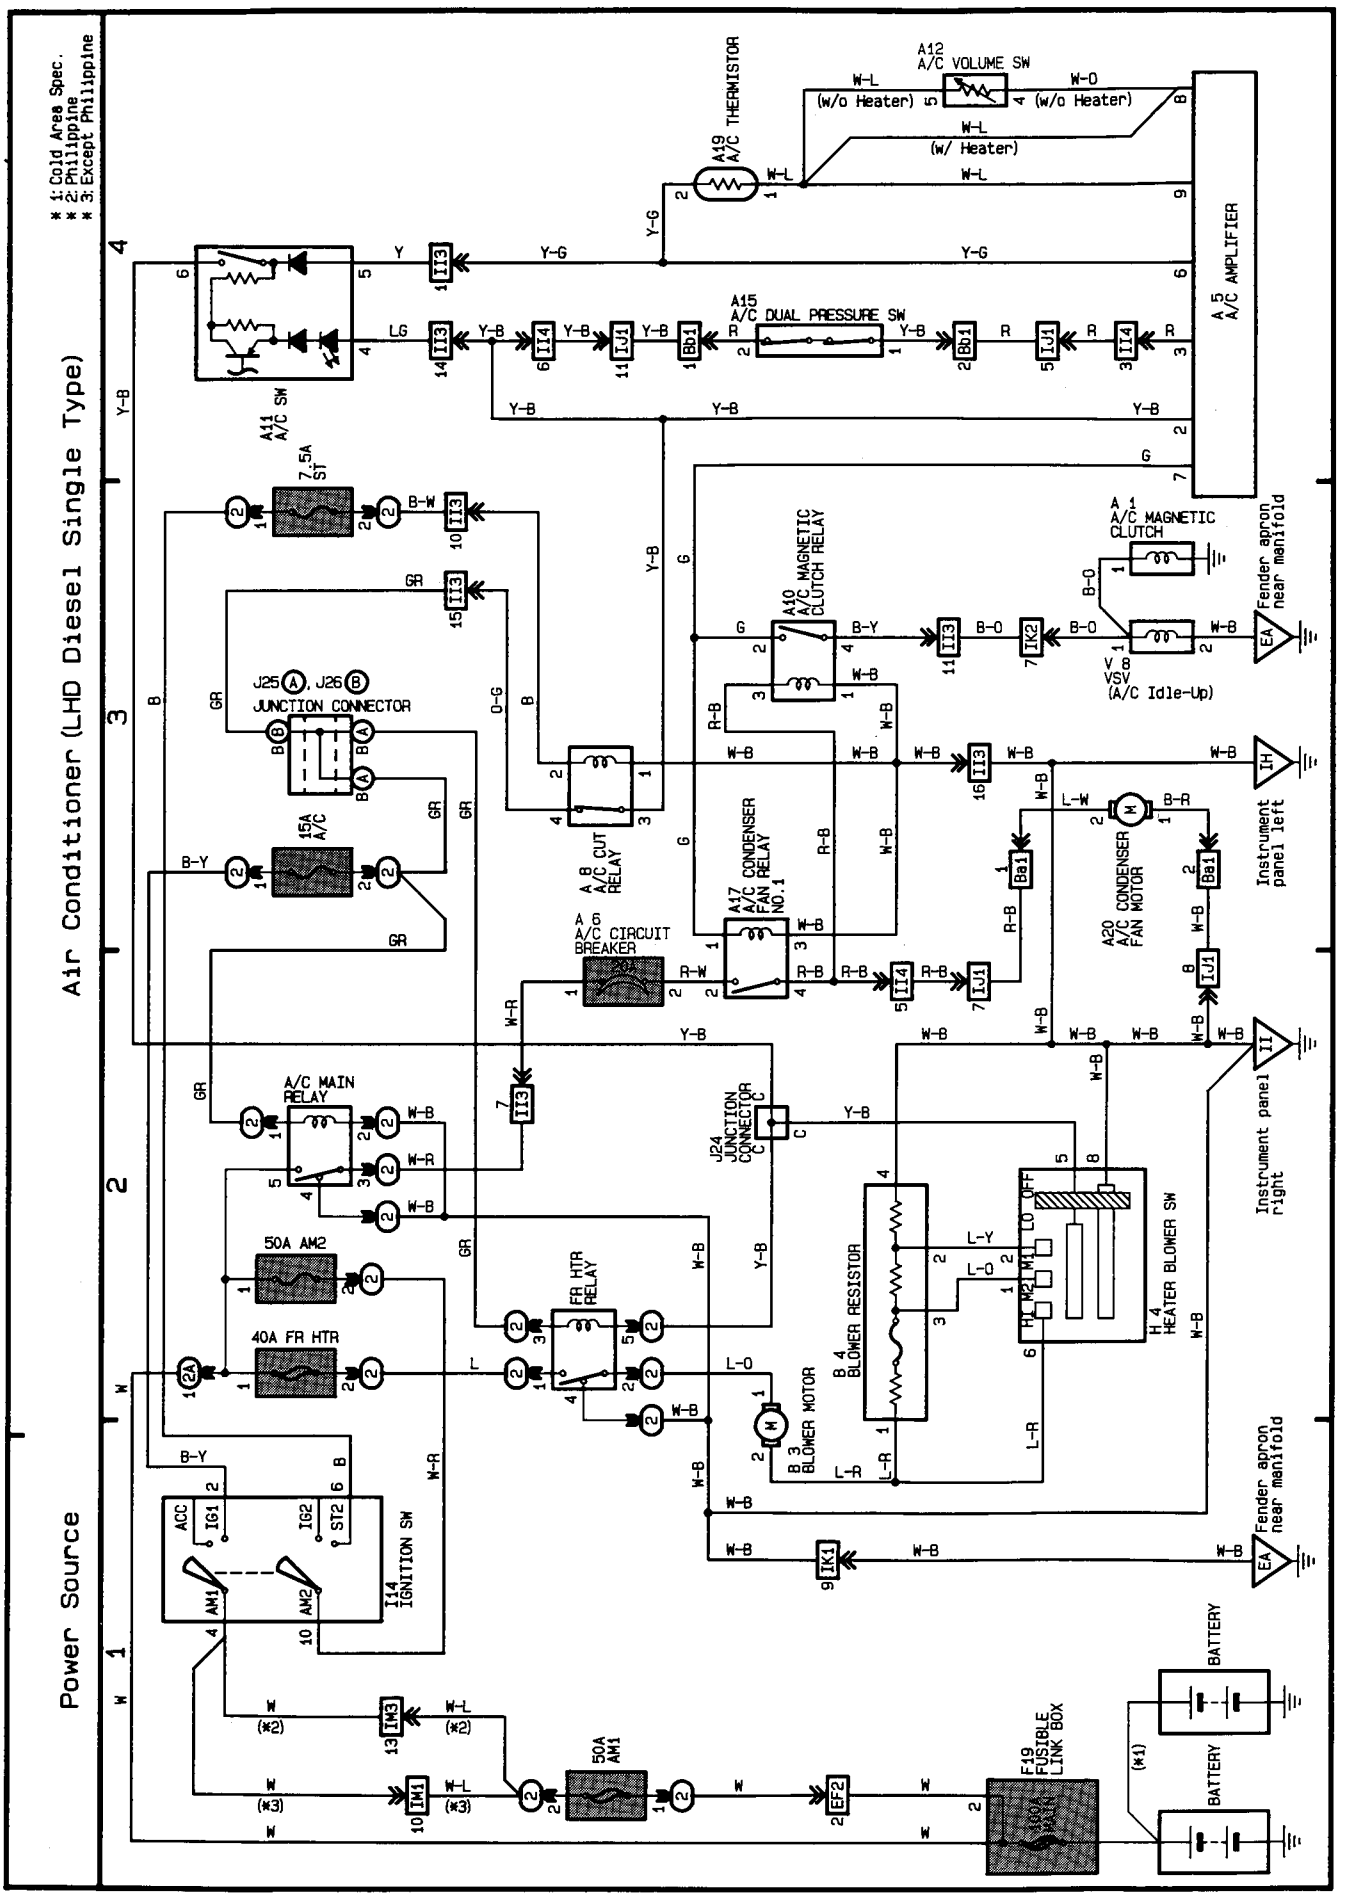
Air Conditioner (LHD Diesel Single Type)
Power Source
* 1: Cold Area Spec.
* 2: Philippine
* 3: Except Philippine
A12 A/C VOLUME SW
(w/o Heater)
(w/ Heater)
A19 A/C THERMISTOR
A15 A/C DUAL PRESSURE SW
A 5 A/C AMPLIFIER
A11 A/C SW
7.5A ST
A 1 A/C MAGNETIC CLUTCH
Fender apron near manifold
A10 A/C MAGNETIC CLUTCH RELAY
V 8 VSV (A/C Idle-Up)
J25 A, J26 B JUNCTION CONNECTOR
15A A/C
A 8 A/C CUT RELAY
A17 A/C CONDENSER FAN RELAY NO.1
A 6 A/C CIRCUIT BREAKER
30A
A20 A/C CONDENSER FAN MOTOR
Instrument panel left
Instrument panel right
A/C MAIN RELAY
J24 JUNCTION CONNECTOR C
50A AM2
40A FR HTR
FR HTR RELAY
B 3 BLOWER MOTOR
B 4 BLOWER RESISTOR
H 4 HEATER BLOWER SW
OFF
LO
M1
M2
HI
I14 IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
BATTERY
50A AM1
F19 FUSIBLE LINK BOX
100A
(*1)
(*2)
(*3)